


WAGO-I/O-SYSTEM 750

Manual

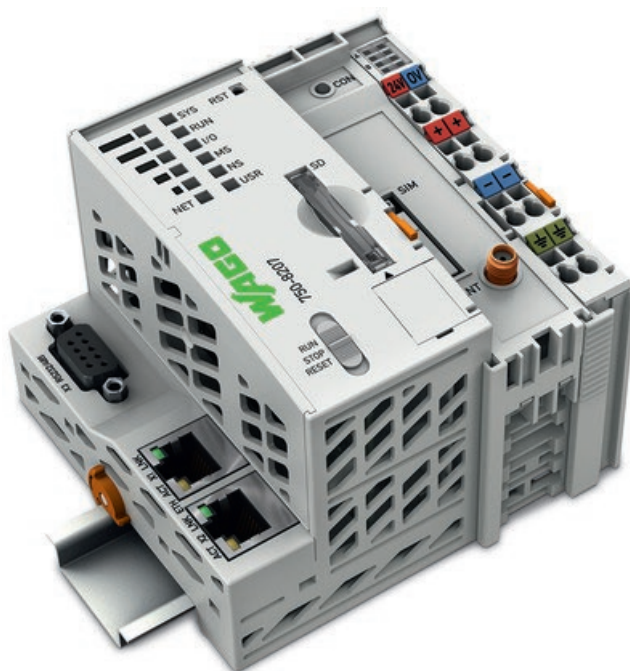

750-8207(/xxx-xxx) **PFC200 CS 2ETH RS 3G** **PLC - Controller PFC200**

Version 1.0.0, valid from
FW Version 02.04.22(06)

© 2016 by WAGO Kontakttechnik GmbH & Co. KG
All rights reserved.

WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27
D-32423 Minden

Phone: +49 (0) 571/8 87 – 0
Fax: +49 (0) 571/8 87 – 1 69

E-Mail: info@wago.com

Web: <http://www.wago.com>

Technical Support

Phone: +49 (0) 571/8 87 – 5 55
Fax: +49 (0) 571/8 87 – 85 55

E-Mail: support@wago.com

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

Table of Contents

1	Notes about this Documentation.....	15
1.1	Validity of this Documentation.....	15
1.2	Copyright.....	15
1.3	Symbols.....	16
1.4	Number Notation.....	18
1.5	Font Conventions	18
2	Important Notes	19
2.1	Legal Bases	19
2.1.1	Subject to Changes	19
2.1.2	Personnel Qualifications.....	19
2.1.3	Use of the WAGO-I/O-SYSTEM 750 in Compliance with Underlying Provisions	19
2.1.4	Technical Condition of Specified Devices	20
2.2	Safety Advice (Precautions).....	21
2.3	Disclaimer	22
2.4	Licensing Terms of the Software Package Used.....	23
2.5	Special Use Conditions for ETHERNET Devices	23
3	Device Description	24
3.1	View	27
3.2	Labeling.....	29
3.2.1	Manufacturing Number	29
3.3	Connectors.....	30
3.3.1	Data Contacts/Internal Bus.....	30
3.3.2	Power Jumper Contacts/Field Supply	31
3.3.3	CAGE CLAMP® Connectors	32
3.3.4	Service Interface.....	33
3.3.5	Network Connections – X1, X2	34
3.3.6	RS-232/RS-485 – X3 Communication Connection	35
3.3.6.1	Operating as an RS-232 Interface.....	36
3.3.6.2	Operating as an RS-485 Interface.....	37
3.3.7	Mobile Radio Antenna	38
3.4	Display Elements	39
3.4.1	Power Supply Indicating Elements	39
3.4.2	Fieldbus/System Indicating Elements	40
3.4.3	Memory Card Indicating Elements	41
3.4.4	Network Indicating Elements	42
3.4.5	Mobile Radio Network Status Indicators	43
3.5	Operating Elements.....	44
3.5.1	Operating Mode Switch.....	44
3.5.1.1	CODESYS 2 Runtime System.....	44
3.5.1.2	e!RUNTIME Runtime System	44
3.5.2	Reset Button	45
3.6	Slot for Memory Card	46
3.7	SIM Card Slot	47
3.8	Schematic Diagram	48
3.9	Technical Data	49

3.9.1	Device Data	49
3.9.2	System Data	49
3.9.3	Power supply	49
3.9.4	Clock	50
3.9.5	Programming	50
3.9.6	Internal data bus	50
3.9.7	ETHERNET	51
3.9.8	Serial interface	51
3.9.9	Mobile Radio Modem	51
3.9.10	Connection Type	51
3.9.11	Climatic Environmental Conditions	52
3.10	Approvals	53
3.11	Standards and Guidelines	53
4	Function Description	54
4.1	Network	54
4.1.1	Interface Configuration	54
4.1.1.1	Operation in Switch Mode	54
4.1.1.2	Operation with Separate Network Interfaces	54
4.1.2	Network Security	55
4.1.2.1	Users and Passwords	55
4.1.2.1.1	Services and Users	55
4.1.2.1.2	WBM User Group	56
4.1.2.1.3	Linux® User Group	56
4.1.2.1.4	SNMP User Group	56
4.1.2.2	Web Protocols for WBM Access	57
4.1.3	Network Configuration	58
4.1.3.1	Host Name/Domain Name	58
4.1.3.2	Default Gateways	58
4.1.4	Network Services	59
4.1.5	DHCP Client	59
4.1.5.1	DHCP Server	59
4.1.5.2	DNS Server	61
4.2	Memory Card Function	62
4.2.1	Backup Function (Saving of Device Settings to the Memory Card) ..	63
4.2.2	Restore Function (Loading of Device Settings from the Memory Card) ..	64
4.2.3	Inserting a Memory Card during Operation	65
4.2.4	Removing the Memory Card during Operation	65
4.2.5	Setting the Home Directory for the Runtime System	66
5	Mounting	67
5.1	Installation Position	67
5.2	Overall Configuration	67
5.3	Mounting onto Carrier Rail	69
5.3.1	Carrier Rail Properties	69
5.3.2	WAGO DIN Rail	70
5.4	Spacing	70
5.5	Mounting Sequence	71
5.6	Inserting Devices	72
5.6.1	Inserting the Controller	72
5.6.2	Inserting the I/O Module	73

6	Connect Devices	74
6.1	Connecting a Conductor to the CAGE CLAMP®	74
6.2	Power Supply Concept	75
6.2.1	Supplementary Power Supply Regulations	75
7	Commissioning	77
7.1	Switching On the Controller	77
7.2	Determining the IP Address of the Host PC	78
7.3	Setting an IP Address	79
7.3.1	Assigning an IP Address using DHCP	80
7.3.2	Changing an IP Address Using the “CBM” Configuration Tool via the Serial Interface.....	81
7.3.3	Changing an IP Address using “WAGO Ethernet Settings”	84
7.3.4	Temporarily Setting a Fixed IP Address	86
7.4	Testing the Network Connection	87
7.5	Changing Standard Passwords	88
7.6	Shutdown/Restart	89
7.7	Initiating Reset Functions	90
7.7.1	Warm Start Reset.....	90
7.7.1.1	CODESYS 2 Runtime System.....	90
7.7.1.2	e!RUNTIME Runtime System	90
7.7.2	Cold Start Reset.....	90
7.7.2.1	CODESYS 2 Runtime System.....	90
7.7.2.2	e!RUNTIME Runtime System	90
7.7.3	Software Reset.....	91
7.8	Configuration	92
7.8.1	Configuration via Web-Based-Management (WBM)	93
7.8.1.1	WBM User Administration.....	94
7.8.1.2	General Information about the Page	98
7.8.1.3	“Status Information” Page	101
7.8.1.3.1	“Controller Details” Group	101
7.8.1.3.2	“Network Details (Xn)” Group(s).....	101
7.8.1.4	“General PLC Runtime Configuration” Page.....	102
7.8.1.4.1	“General PLC Runtime Configuration” Group.....	102
7.8.1.5	“PLC Runtime Information” Page.....	104
7.8.1.5.1	“PLC Runtime” Group.....	104
7.8.1.5.2	“Project Details” Group	104
7.8.1.5.3	“Task n” Group(s).....	105
7.8.1.6	“PLC WebVisu” Page.....	106
7.8.1.6.1	“Web Server Configuration” Group	106
7.8.1.7	“Configuration of Host and Domain Name” Page	107
7.8.1.7.1	“HostName” Group.....	107
7.8.1.7.2	“Domain Name” Group	107
7.8.1.8	“TCP/IP Configuration” Page.....	108
7.8.1.8.1	“IP Configuration (Xn)” Group(s)	108
7.8.1.8.2	“Default Gateway n” Groups	108
7.8.1.8.3	“DNS Server” Group	109
7.8.1.9	“Ethernet Configuration” Page	110
7.8.1.9.1	“Switch Configuration” Group	110
7.8.1.9.2	“Interface Xn” Groups	110

7.8.1.10	“General Firewall Configuration” Page.....	112
7.8.1.10.1	“Global Firewall Parameters” Group.....	112
7.8.1.10.2	“Firewall Parameters Interface Xn” Group.....	113
7.8.1.10.3	“Firewall Parameter Interface VPN” Group.....	114
7.8.1.11	“Configuration of MAC Address Filter” Page.....	115
7.8.1.11.1	“Global MAC Address Filter State” Group.....	115
7.8.1.11.2	“MAC Address Filter State Xn” Group.....	116
7.8.1.11.3	“MAC Address Filter Whitelist” Group.....	116
7.8.1.12	“Configuration of User Filter” Page.....	117
7.8.1.12.1	“User Filter” Group.....	117
7.8.1.12.2	“User Filter n” Group.....	117
7.8.1.12.3	“Add New User Filter” Group.....	118
7.8.1.13	“Configuration of Time and Date” Page.....	119
7.8.1.13.1	“Date on Device” Group.....	119
7.8.1.13.2	“Time on Device” Group.....	119
7.8.1.13.3	“Timezone” Group.....	120
7.8.1.13.4	“TZ String” Group.....	120
7.8.1.14	“Configuration of the Users for the Web-based Management” Page.....	121
7.8.1.14.1	“Change Password for Selected User” Group.....	121
7.8.1.15	“Create Bootable Image” Page.....	122
7.8.1.15.1	“Create Bootable Image from Active Partition (<Active Partition>” Group.....	122
7.8.1.16	“Configuration of Serial Interface RS232” Page.....	124
7.8.1.16.1	“Serial Interface Assigned to” Group.....	124
7.8.1.16.2	“Assign Owner of Serial Interface (Active after Next Controller Reboot)” Group.....	124
7.8.1.17	“Configuration of Service Interface” Page.....	125
7.8.1.17.1	“Service Interface assigned to” Group.....	125
7.8.1.17.2	“Assign Owner of Service Interface (enabled after next controller reboot)” Group.....	125
7.8.1.18	“Reboot Controller” Page.....	126
7.8.1.18.1	“Reboot Controller” Group.....	126
7.8.1.19	“Firmware Back-up” Page.....	127
7.8.1.20	“Firmware Restore” Page.....	128
7.8.1.21	“System Partition” Page.....	129
7.8.1.21.1	“Current Active Partition” Group.....	129
7.8.1.21.2	“Set Inactive Partition Active” Group.....	129
7.8.1.22	“Mass Storage” Page.....	130
7.8.1.22.1	“<Device Name>” Group(s).....	130
7.8.1.22.2	“<Device Name> - FAT Format” Group(s).....	130
7.8.1.23	“Software Uploads” Page.....	131
7.8.1.23.1	“Upload New Software” Group.....	131
7.8.1.23.2	“Activate New Software” Group.....	131
7.8.1.24	“Configuration of Network Services” Page.....	132
7.8.1.24.1	“Telnet” Group.....	132
7.8.1.24.2	“FTP” Group.....	132
7.8.1.24.3	“FTPS” Group.....	132
7.8.1.24.4	“HTTP” Group.....	132
7.8.1.24.5	“HTTPS” Group.....	133
7.8.1.24.6	“I/O-CHECK” Group.....	133

7.8.1.25	“Configuration of NTP Client” Page	134
7.8.1.25.1	“NTP Client Configuration” Group	134
7.8.1.25.2	“NTP Single Request” Group	134
7.8.1.26	“Configuration of PLC Runtime Services” Page	135
7.8.1.26.1	“General Configuration” Group	135
7.8.1.26.2	“CODESYS 2” Group	135
7.8.1.26.3	“e!RUNTIME” Group	135
7.8.1.27	“SSH Server Settings” Page	137
7.8.1.27.1	“SSH Server” Group	137
7.8.1.28	“TFTP Server” Page	138
7.8.1.28.1	“TFTP Server” Group	138
7.8.1.29	“DHCP Configuration” Page	139
7.8.1.29.1	“DHCP Configuration Xn” Group	139
7.8.1.30	“Configuration of DNS Service” Page	140
7.8.1.30.1	“DNS Service” Group	140
7.8.1.31	“MODBUS Services Configuration” Page	141
7.8.1.31.1	“MODBUS TCP” Group	141
7.8.1.31.2	“MODBUS UDP” Group	141
7.8.1.32	“Configuration of General SNMP Parameters” Page	142
7.8.1.32.1	“General SNMP Configuration” Group	142
7.8.1.33	“Configuration of SNMP v1/v2c Parameters” Page	143
7.8.1.33.1	“SNMP v1/v2c Manager Configuration” Group	143
7.8.1.33.2	“Actually Configured Trap Receivers” Group(s)	143
7.8.1.33.3	“Trap Receiver n” Group(s)	144
7.8.1.33.4	“Add New Trap Receiver” Group	144
7.8.1.34	“Configuration of SNMP v3 Users” Page	145
7.8.1.34.1	“Actually Configured v3 Users” Group(s)	145
7.8.1.34.2	“v3 User n” Group(s)	145
7.8.1.34.3	“Add New v3 User” Group	146
7.8.1.35	“Diagnostic Information” Page	147
7.8.1.36	“Configuration of internal 3G Modem” Page	148
7.8.1.36.1	“SIM Authentication” Group	148
7.8.1.36.2	“Mobile Network Configuration” Group	149
7.8.1.36.3	“Provider List” Group	150
7.8.1.36.4	“Network Package Service” Group	150
7.8.1.36.5	“Upload and activate new Modem Software” Group	151
7.8.1.37	“Configuration of OpenVPN and IPsec” Page	152
7.8.1.37.1	“OpenVPN” Group	152
7.8.1.37.2	“IPsec” Group	152
7.8.1.37.3	“Certificate Upload” Group	153
7.8.1.37.4	“Certificate List” Group	153
7.8.1.37.5	“Private Key List” Group	153
7.8.2	Configuration using a Terminal Program (CBM)	154
7.8.2.1	CBM Menu Structure Overview	154
7.8.2.2	“Information” Menu	157
7.8.2.2.1	“Information” > “Controller Details” Submenu	157
7.8.2.2.2	“Information” > “Network Details” Submenu	158
7.8.2.3	“PLC Runtime” Menu	159
7.8.2.3.1	“PLC Runtime” > “Information” Submenu	159
7.8.2.3.2	“Information” > “Runtime Version” Submenu	160

7.8.2.3.3	“Information” > “Webserver Version” Submenu	160
7.8.2.3.4	“Information” > “State” Submenu	160
7.8.2.3.5	“Information” > “Number of Tasks” Submenu	161
7.8.2.3.6	“Information” > “Project Details” Submenu	161
7.8.2.3.7	“Information” > “Tasks” Submenu	161
7.8.2.3.8	“Tasks” > “Task n” Submenu	162
7.8.2.3.9	“PLC Runtime” > “General Configuration” Submenu	162
7.8.2.3.10	“General Configuration” > “PLC Runtime Version” Submenu	163
7.8.2.3.11	“General Configuration” > “Home Dir On SD Card” Submenu	163
7.8.2.3.12	“PLC Runtime” > “WebVisu” Submenu	164
7.8.2.4	“Networking” Menu	165
7.8.2.4.1	“Networking” > “Host/Domain Name” Submenu	165
7.8.2.4.2	“Host/Domain Name” > “Hostname” Submenu	166
7.8.2.4.3	“Host/Domain Name” > “Domain Name” Submenu	166
7.8.2.4.4	“Networking” > “TCP/IP” Submenu	166
7.8.2.4.5	“TCP/IP” > “IP Address” Submenu	167
7.8.2.4.6	“IP Address” > “Xn” Submenu	167
7.8.2.4.7	“TCP/IP” > “Default Gateway” Submenu	168
7.8.2.4.8	“Default Gateway” > “Default Gateway n” Submenu	168
7.8.2.4.9	“TCP/IP” > “DNS Server” Submenu	169
7.8.2.4.10	“Networking” > “Ethernet” Submenu	169
7.8.2.4.11	“Ethernet” > “Switch Configuration” Submenu	170
7.8.2.4.12	“Ethernet” > “Ethernet Ports” Submenu	170
7.8.2.4.13	“Ethernet Ports” > “Interface Xn” Submenu	171
7.8.2.5	“Firewall” Menu	172
7.8.2.5.1	“Firewall” > “General Configuration” Submenu	173
7.8.2.5.2	“General Configuration” > “Interface xxx” Submenu	174
7.8.2.5.3	“Firewall” > “MAC Address Filter” Submenu	175
7.8.2.5.4	“MAC Address Filter” > “MAC address filter whitelist” Submenu	176
7.8.2.5.5	“MAC address filter whitelist” > “Add new / No (n)” Submenu	176
7.8.2.5.6	“Firewall” > “User Filter” Submenu	177
7.8.2.5.7	“User Filter” > “Add New / No (n)” Submenu	178
7.8.2.6	“Clock” Menu	179
7.8.2.7	“Administration” Menu	180
7.8.2.7.1	“Administration” > “Create Image” Submenu	181
7.8.2.7.2	“Administration” > “Users” Submenu	181
7.8.2.8	“Package Server” Menu	182
7.8.2.8.1	“Package Server” > “Firmware Backup” Submenu	182
7.8.2.8.2	“Firmware Backup” > “Auto Update Feature” Submenu	183
7.8.2.8.3	“Firmware Backup” > “Destination” Submenu	183
7.8.2.8.4	“Package Server” > “Firmware Restore” Submenu	184
7.8.2.8.5	“Firmware Restore” > “Select Package” Submenu	184
7.8.2.8.6	“Package Server” > “System Partition” Submenu	185
7.8.2.9	“Mass Storage” Menu	186
7.8.2.9.1	“Mass Storage” > “SD Card” Submenu	186
7.8.2.10	“Software Uploads” Menu	187
7.8.2.11	“Ports and Services” Menu	188
7.8.2.11.1	“Ports and Services” > “Telnet” Submenu	189
7.8.2.11.2	“Ports and Services” > “FTP” Submenu	189

7.8.2.11.3	“Ports and Services” > “FTPS” Submenu.....	190
7.8.2.11.4	“Ports and Services” > “HTTP” Submenu.....	190
7.8.2.11.5	“Ports and Services” > “HTTPS” Submenu	191
7.8.2.11.6	“Ports and Services” > “NTP” Submenu	191
7.8.2.11.7	“Ports and Services” > “SSH” Submenu	192
7.8.2.11.8	“Ports and Services” > “TFTP” Submenu	192
7.8.2.11.9	“Ports and Services” > “DHCPD” Submenu	193
7.8.2.11.10	“DHCPD” > “Xn” Submenu.....	193
7.8.2.11.11	“Ports and Services” > “DNS” Submenu.....	194
7.8.2.11.12	“Ports and Services” > “IOCHECK PORT” Submenu.....	195
7.8.2.11.13	“Ports and Services” > “Modbus TCP” Submenu	195
7.8.2.11.14	“Ports and Services” > “Modbus UDP” Submenu.....	196
7.8.2.11.15	“Ports and Services” > “PLC Runtime Services” Submenu ...	196
7.8.2.11.16	“PLC Runtime Services” > “CODESYS 2” Submenu	197
7.8.2.11.17	“PLC Runtime Services” > “e!RUNTIME” Submenu	198
7.8.2.11.18	“...” > “Firewall Status” Submenu	199
7.8.2.12	“SNMP” Menu.....	200
7.8.2.12.1	“SNMP” > “General SNMP Configuration” Submenu	200
7.8.2.12.2	“SNMP” > “SNMP v1/v2c Manager Configuration” Submenu.....	200
7.8.2.12.3	“SNMP” > “SNMP v1/v2c Trap Receiver Configuration” Submenu.....	201
7.8.2.12.4	“SNMP” > “SNMP v3 Configuration” Submenu	201
7.8.2.12.5	“SNMP” > “(Secure)SNMP firewalling” Submenu	203
7.8.3	Configuration using “WAGO ETHERNET Settings”	204
7.8.3.1	Identification Tab.....	206
7.8.3.2	Network Tab	207
7.8.3.3	Protocol Tab.....	209
7.8.3.4	Status Tab	210
8	Run-time System CODESYS 2.3	211
8.1	Installing the CODESYS 2.3 Programming System.....	211
8.2	First Program with CODESYS 2.3	211
8.2.1	Start the CODESYS Programming System.....	211
8.2.2	Creating a Project and Selecting the Target System	211
8.2.3	Creating the PLC Configuration.....	213
8.2.4	Editing the Program Function Block.....	220
8.2.5	Loading and Running the PLC Program in the Fieldbus Controller (ETHERNET).....	222
8.2.6	Creating a Boot Project	224
8.3	Syntax of Logical Addresses.....	224
8.4	Creating Tasks.....	225
8.4.1	Cyclic Tasks	228
8.4.2	Freewheeling Tasks	229
8.4.3	Debugging an IEC Program	229
8.5	System Events	233
8.5.1	Creating an Event Handler	236
8.6	Process Images	239
8.6.1	Process Images for I/O Modules Connected to the Controller.....	240
8.6.2	Process Image for Slaves Connected to the Fieldbus.....	241
8.7	Access to Process Images of the Input and Output Data via CODESYS 2.3	241

8.8	Addressing Example	243
8.9	Internal Data Bus Synchronization	244
8.9.1	Case 1: CODESYS Task Interval Set Smaller than the I/O Module Cycle	244
8.9.2	Case 2: CODESYS Task Interval Smaller than Twice the Internal Data Bus Cycle	246
8.9.3	Case 3: CODESYS Task Interval Greater than Twice the Internal Data Bus Cycle	247
8.9.4	Case 4: CODESYS Task Interval Greater than 10 ms	248
8.9.5	Internal Data Bus Configuration	249
8.9.5.1	Effect of Update Mode on CODESYS Tasks	250
8.9.5.1.1	Asynchronous Update Mode	250
8.9.5.1.2	Synchronous Update Mode	251
8.10	Memory Settings in CODESYS	251
8.10.1	Program Memory	251
8.10.2	Data Memory and Function Block Limitation	252
8.10.3	Remanent Memory	253
8.11	CODESYS Visualization	254
8.11.1	Limits of CODESYS Visualization	257
8.11.2	Eliminating Errors in CODESYS Web Visualization	259
8.11.3	FAQs about CODESYS Web Visualization	260
9	<i>e!RUNTIME</i> Runtime Environment	262
9.1	General Notes	262
9.2	CODESYS V3 Priorities	263
9.3	Memory Spaces under <i>e!RUNTIME</i>	264
9.3.1	Program and Data Memory	264
9.3.2	Function Block Limitation	264
9.3.3	Remanent Memory	264
10	MODBUS – CODESYS 2	265
10.1	General	265
10.2	Features	265
10.3	Configuration	266
10.4	MODBUS Settings	267
10.4.1	MODBUS TCP Settings	268
10.4.2	MODBUS UDP Settings	268
10.4.3	MODBUS RTU Settings	269
10.5	Data Exchange	271
10.5.1	Process Image	272
10.5.2	Flag Area	273
10.5.3	MODBUS Registers	274
10.5.4	MODBUS Mapping	274
10.5.4.1	MODBUS Mapping for Write Bit Services FC1, FC2	274
10.5.4.2	MODBUS Mapping for Write Bit Services FC5, FC15	275
10.5.4.3	MODBUS Mapping for Read Register Services FC3, FC4, FC23/276	276
10.5.4.4	MODBUS Mapping for Write Register Services FC6, FC16, FC22, FC23	278
10.6	WAGO MODBUS Register	280
10.6.1	Process Image Properties	281

10.6.1.1	Register 0x1022 – Number of Registers in the MODBUS Input Process Image	281
10.6.1.2	Register 0x1023 – Number of Registers in the MODBUS Output Process Image	281
10.6.1.3	Register 0x1024 – Number of Bits in the MODBUS Input Process Image	281
10.6.1.4	Register 0x1025 – Number of Bits in the MODBUS Output Process Image	281
10.6.2	Network Configuration	282
10.6.2.1	Register 0x1028 – IP Configuration	282
10.6.2.2	Register 0x102A – Number of Established TCP Connections	282
10.6.2.3	Register 0x1030 – MODBUS TCP Socket Timeout	282
10.6.2.4	Register 0x1031 – MAC Address for ETHERNET-Interface 1 (eth0)	282
10.6.2.5	Register 0x1037 - MODBUS TCP Response Delay	282
10.6.3	PLC Status Register	283
10.6.4	MODBUS Watchdog	283
10.6.4.1	Register 0x1100 – Watchdog Command	283
10.6.4.2	Register 0x1101 – Watchdog Status	285
10.6.4.3	Register 0x1102 – Watchdog Timeout	285
10.6.4.4	Register 0x1103 – Watchdog Config	286
10.6.5	MODBUS Constants Register	286
10.6.6	Electronic Nameplate	287
10.6.6.1	Register 0x2010 – Revision (Firmware Index)	287
10.6.6.2	Register 0x2011 – Series Designator	287
10.6.6.3	Register 0x2012 – Device ID	287
10.6.6.4	Register 0x2013 – Major Firmware Version	287
10.6.6.5	Register 0x2014 – Minor Firmware Version	287
10.6.6.6	Register 0x2015 – MBS Version	287
10.7	Diagnostics	288
10.7.1	Diagnostics for the MODBUS Master	288
10.7.2	Diagnostics for the Runtime System	288
10.7.3	Diagnostics for the Error Server	288
11	MODBUS – e!RUNTIME	291
11.1	MODBUS Address Overview	291
11.2	MODBUS Registers	292
11.2.1	MODBUS Watchdog	294
11.2.1.1	Watchdog Command Register	294
11.2.1.2	Watchdog Timeout Register	294
11.2.1.3	Watchdog Status Register	295
11.2.1.4	Watchdog Config Register	296
11.2.1.5	MODBUS TCP Connection Watchdog Register	297
11.2.2	Status Registers	298
11.2.2.1	PLC Status Register	298
11.2.3	Electronic Nameplate	298
11.2.3.1	Order Number	298
11.2.3.2	Firmware Version	298
11.2.3.3	Hardware Version	298
11.2.3.4	Firmware Loader/Boot Loader	298
11.2.4	MODBUS Process Image Version	298

11.2.5	MODBUS Process Image Registers	299
11.2.6	Constants Registers	299
11.2.7	Live Register	299
11.3	Estimating the MODBUS Master CPU Load	300
12	Diagnostics	301
12.1	Operating and Status Messages	301
12.1.1	Power Supply Indicating Elements	301
12.1.2	Mobile Radio Network Status Indicators	302
12.1.3	Fieldbus/System Indicating Elements	303
12.2	Diagnostics Messages (I/O LED).....	309
12.2.1	Flashing Sequence	309
12.2.2	Example of a Diagnostics Message Indicated by a Blink Code	310
12.2.3	Meaning of Blink Codes and Procedures for Troubleshooting	311
13	Service	316
13.1	Inserting and Removing the Memory Card	316
13.1.1	Inserting the Memory Card	316
13.1.2	Removing the Memory Card	316
13.2	Inserting and Removing the SIM Card	318
13.2.1	Inserting a SIM Card	318
13.2.2	Removing a SIM Card	318
13.3	Firmware Changes	319
13.3.1	Perform Firmware Upgrade	319
13.3.2	Perform Firmware Downgrade	320
13.3.3	Factory Reset	321
14	Removal	322
14.1	Removing Devices	322
14.1.1	Removing the Controller	322
14.1.2	Removing the I/O Module	323
15	Appendix	324
15.1	Structure of Process Data for the I/O Modules	324
15.1.1	Digital Input Modules	325
15.1.1.1	1 Channel Digital Input Module with Diagnostics	325
15.1.1.2	2 Channel Digital Input Modules	325
15.1.1.3	2 Channel Digital Input Module with Diagnostics	325
15.1.1.4	2 Channel Digital Input Module with Diagnostics and Output Process Data	326
15.1.1.5	4 Channel Digital Input Modules	326
15.1.1.6	8 Channel Digital Input Modules	326
15.1.1.7	8 Channel Digital Input Module PTC with Diagnostics and Output Process Data	327
15.1.1.8	16 Channel Digital Input Modules	327
15.1.2	Digital Output Modules	328
15.1.2.1	1 Channel Digital Output Module with Input Process Data	328
15.1.2.2	2 Channel Digital Output Modules	328
15.1.2.3	2 Channel Digital Input Modules with Diagnostics and Input Process Data	329
15.1.2.4	4 Channel Digital Output Modules	330

15.1.2.5	4 Channel Digital Output Modules with Diagnostics and Input Process Data.....	330
15.1.2.6	8 Channel Digital Output Module	330
15.1.2.7	8 Channel Digital Output Modules with Diagnostics and Input Process Data.....	331
15.1.2.8	16 Channel Digital Output Modules.....	331
15.1.2.9	8 Channel Digital Input/Output Modules	332
15.1.3	Analog Input Modules.....	333
15.1.3.1	1 Channel Analog Input Modules.....	333
15.1.3.2	2 Channel Analog Input Modules.....	333
15.1.3.3	4 Channel Analog Input Modules.....	334
15.1.3.4	3-Phase Power Measurement Module	335
15.1.3.5	8 Channel Analog Input Modules.....	335
15.1.4	Analog Output Modules	336
15.1.4.1	2 Channel Analog Output Modules	336
15.1.4.2	4 Channel Analog Output Modules	336
15.1.5	Specialty Modules	337
15.1.5.1	Counter Modules	337
15.1.5.2	Pulse Width Modules.....	339
15.1.5.3	Serial Interface Modules with alternative Data Format.....	339
15.1.5.4	Serial Interface Modules with Standard Data Format	340
15.1.5.5	Data Exchange Module.....	340
15.1.5.6	SSI Transmitter Interface Modules.....	340
15.1.5.7	Incremental Encoder Interface Modules.....	341
15.1.5.8	DC-Drive Controller.....	343
15.1.5.9	Stepper Controller.....	344
15.1.5.10	RTC Module	345
15.1.5.11	DALI/DSI Master Module.....	345
15.1.5.12	DALI Multi-Master Module	346
15.1.5.13	LON [®] FTT Module.....	348
15.1.5.14	EnOcean Radio Receiver	348
15.1.5.15	MP Bus Master Module.....	348
15.1.5.16	Bluetooth [®] RF-Transceiver.....	349
15.1.5.17	Vibration Velocity/Bearing Condition Monitoring VIB I/O	350
15.1.5.18	KNX/EIB/TP1 Module.....	350
15.1.5.19	AS-interface Master Module	351
15.1.6	System Modules	353
15.1.6.1	System Modules with Diagnostics.....	353
15.1.6.2	Binary Space Module	353
15.2	CODESYS 2 Libraries	354
15.2.1	General Libraries	354
15.2.1.1	CODESYS System Libraries.....	354
15.2.1.2	SysLibCom.lib	355
15.2.1.3	SysLibFile.lib.....	355
15.2.1.4	SysLibFileAsync.lib	356
15.2.1.5	SysLibRtc.lib	357
15.2.1.6	BusDiag.lib	358
15.2.1.7	mod_com.lib	358
15.2.1.8	SerComm.lib	358
15.2.1.9	WagoConfigToolLIB.lib	359

15.2.1.10	WagoLibCpuUsage.lib	375
15.2.1.11	WagoLibDiagnosticIDs.lib	375
15.2.1.12	WagoLibLed.lib	376
15.2.1.13	WagoLibNetSnmp.lib	376
15.2.1.14	WagoLibNetSnmpManager.lib	376
15.2.1.15	WagoLibSSL.lib	377
15.2.1.16	WagoLibTerminalDiag.lib	377
15.3	Overview of the Open Source Package and Licenses	378
List of Figures		382
List of Tables.....		385

1 Notes about this Documentation



Note

Always retain this documentation!

This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user. In addition, ensure that any supplement to this documentation is included, if necessary.

1.1 Validity of this Documentation

This documentation is only applicable to the controller “PFC200 CS 2ETH RS 3G” (750-8207) and the variants listed in the table below.

Table 1: Variants

Item Number/Variant	Designation
750-8207	PFC200 CS 2ETH RS 3G
750-8207/025-000	PFC200 CS 2ETH RS 3G/T



Note

Documentation Validity for Variants

Unless otherwise indicated, the information given in this documentation applies to listed variants.

This documentation is only applicable from FW Version 02.04.22(06).

1.2 Copyright

This Manual, including all figures and illustrations, is copyright-protected. Any further use of this Manual by third parties that violate pertinent copyright provisions is prohibited. Reproduction, translation, electronic and phototechnical filing/archiving (e.g., photocopying) as well as any amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG, Minden, Germany. Non-observance will involve the right to assert damage claims.

1.3 Symbols

 **DANGER****Personal Injury!**

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **DANGER****Personal Injury Caused by Electric Current!**

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING****Personal Injury!**

Indicates a moderate-risk, potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION****Personal Injury!**

Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE**Damage to Property!**

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

NOTICE**Damage to Property Caused by Electrostatic Discharge (ESD)!**

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

Note**Important Note!**

Indicates a potential malfunction which, if not avoided, however, will not result in damage to property.



Information

Additional Information:

Refers to additional information which is not an integral part of this documentation (e.g., the Internet).

1.4 Number Notation

Table 2: Number Notation

Number Code	Example	Note
Decimal	100	Normal notation
Hexadecimal	0x64	C notation
Binary	'100' '0110.0100'	In quotation marks, nibble separated with dots (.)

1.5 Font Conventions

Table 3: Font Conventions

Font Type	Indicates
<i>italic</i>	Names of paths and data files are marked in italic-type. e.g.: <i>C:\Program Files\WAGO Software</i>
Menu	Menu items are marked in bold letters. e.g.: Save
>	A greater-than sign between two names means the selection of a menu item from a menu. e.g.: File > New
Input	Designation of input or optional fields are marked in bold letters, e.g.: Start of measurement range
“Value”	Input or selective values are marked in inverted commas. e.g.: Enter the value “4 mA” under Start of measurement range .
[Button]	Pushbuttons in dialog boxes are marked with bold letters in square brackets. e.g.: [Input]
[Key]	Keys are marked with bold letters in square brackets. e.g.: [F5]

2 Important Notes

This section includes an overall summary of the most important safety requirements and notes that are mentioned in each individual section. To protect your health and prevent damage to devices as well, it is imperative to read and carefully follow the safety guidelines.

2.1 Legal Bases

2.1.1 Subject to Changes

WAGO Kontakttechnik GmbH & Co. KG reserves the right to provide for any alterations or modifications that serve to increase the efficiency of technical progress. WAGO Kontakttechnik GmbH & Co. KG owns all rights arising from the granting of patents or from the legal protection of utility patents. Third-party products are always mentioned without any reference to patent rights. Thus, the existence of such rights cannot be excluded.

2.1.2 Personnel Qualifications

All sequences implemented on WAGO-I/O-SYSTEM 750 devices may only be carried out by electrical specialists with sufficient knowledge in automation. The specialists must be familiar with the current norms and guidelines for the devices and automated environments.

All changes to the coupler or controller should always be carried out by qualified personnel with sufficient skills in PLC programming.

2.1.3 Use of the WAGO-I/O-SYSTEM 750 in Compliance with Underlying Provisions

Fieldbus couplers, fieldbus controllers and I/O modules found in the modular WAGO-I/O-SYSTEM 750 receive digital and analog signals from sensors and transmit them to actuators or higher-level control systems. Using programmable controllers, the signals can also be (pre-) processed.

The devices have been developed for use in an environment that meets the IP20 protection class criteria. Protection against finger injury and solid impurities up to 12.5 mm diameter is assured; protection against water damage is not ensured. Unless otherwise specified, operation of the devices in wet and dusty environments is prohibited.

Operating the WAGO-I/O-SYSTEM 750 devices in home applications without further measures is only permitted if they meet the emission limits (emissions of interference) according to EN 61000-6-3. You will find the relevant information in the section “Device Description” > “Standards and Guidelines” in the manual for the used fieldbus coupler/controller.

Appropriate housing (per 94/9/EG) is required when operating the WAGO-I/O-SYSTEM 750 in hazardous environments. Please note that a prototype test certificate must be obtained that confirms the correct installation of the system in a housing or switch cabinet.

2.1.4 Technical Condition of Specified Devices

The devices to be supplied ex works are equipped with hardware and software configurations, which meet the individual application requirements. WAGO Kontakttechnik GmbH & Co. KG will be exempted from any liability in case of changes in hardware or software as well as to non-compliant usage of devices.

Please send your request for modified and new hardware or software configurations directly to WAGO Kontakttechnik GmbH & Co. KG.

2.2 Safety Advice (Precautions)

For installing and operating purposes of the relevant device to your system the following safety precautions shall be observed:



DANGER

Do not work on devices while energized!

All power sources to the device shall be switched off prior to performing any installation, repair or maintenance work.



DANGER

Install the device only in appropriate housings, cabinets or in electrical operation rooms!

The WAGO-I/O-SYSTEM 750 and its components are an open system. As such, install the system and its components exclusively in appropriate housings, cabinets or in electrical operation rooms. Allow access to such equipment and fixtures to authorized, qualified staff only by means of specific keys or tools.

NOTICE

Do not use in telecommunication circuits!

Only use devices equipped with ETHERNET or RJ-45 connectors in LANs. Never connect these devices with telecommunication networks.

NOTICE

Replace defective or damaged devices!

Replace defective or damaged device/module (e.g., in the event of deformed contacts), since the long-term functionality of device/module involved can no longer be ensured.

NOTICE

Protect the components against materials having seeping and insulating properties!

The components are not resistant to materials having seeping and insulating properties such as: aerosols, silicones and triglycerides (found in some hand creams). If you cannot exclude that such materials will appear in the component environment, then install the components in an enclosure being resistant to the above-mentioned materials. Clean tools and materials are imperative for handling devices/modules.

NOTICE**Clean only with permitted materials!**

Clean soiled contacts using oil-free compressed air or with ethyl alcohol and leather cloths.

NOTICE**Do not use any contact spray!**

Do not use any contact spray. The spray may impair contact area functionality in connection with contamination.

NOTICE**Do not reverse the polarity of connection lines!**

Avoid reverse polarity of data and power supply lines, as this may damage the devices involved.

NOTICE**Avoid electrostatic discharge!**

The devices are equipped with electronic components that may be destroyed by electrostatic discharge when touched. Please observe the safety precautions against electrostatic discharge per DIN EN 61340-5-1/-3. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly grounded.

2.3 Disclaimer

The “PFC200 CS 2ETH RS 3G” controller (750-8207) also communicates via the mobile communications network. Please note that the mobile communications services used by the controller may be affected by faults in the service provider’s network. Such faults are beyond the control of WAGO Kontakttechnik GmbH & Co. KG.

WAGO Kontakttechnik GmbH & Co. KG therefore rejects any guarantee for the execution of the commands transmitted by/to the controller.

2.4 Licensing Terms of the Software Package Used

The firmware for the “PFC200 CS 2ETH RS 3G” controller (750-8207) contains open source software.

A tabular list of software packages is provided in the appendix.

For licensing terms of the software packages, please see “Software Licenses for Open Source Software in WAGO Components”, which is available to download on the Internet at www.wago.com under “Technical Documentation”.

You can obtain the source code with licensing terms of the open source software from WAGO Kontakttechnik GmbH & Co. KG on request. Send your request to support@wago.com with the subject “Controller Board Support Package”.

2.5 Special Use Conditions for ETHERNET Devices

If not otherwise specified, ETHERNET devices are intended for use on local networks. Please note the following when using ETHERNET devices in your system:

- Do not connect control components and control networks to an open network such as the Internet or an office network. WAGO recommends putting control components and control networks behind a firewall.
- Limit physical and electronic access to all automation components to authorized personnel only.
- Change the default passwords before first use! This will reduce the risk of unauthorized access to your system.
- Regularly change the passwords used! This will reduce the risk of unauthorized access to your system.
- If remote access to control components and control networks is required, use a Virtual Private Network (VPN).
- Regularly perform threat analyses. You can check whether the measures taken meet your security requirements.
- Use “defense-in-depth” mechanisms in your system's security configuration to restrict the access to and control of individual products and networks.

3 Device Description

The controller 750-8207(PFC200 CS 2ETH RS 3G) is an automation device that can perform control tasks of a PLC. It is suitable for mounting on a DIN rail and stands out on account of its various interfaces.

This controller can be used for applications in mechanical and systems engineering, in the processing industry and in building technology.

You can connect all available I/O modules of the WAGO-I/O-SYSTEM 750 (750 and 753 Series) to the controller, enabling it to internally process analog and digital signals from the automation environment, or to supply these signals to other devices via one of the available interfaces.

Automation tasks can be executed in all IEC 61131-3-compatible languages with the WAGO-I/O-PRO or *e!COCKPIT* programming system, depending on the runtime system set (CODESYS 2 or *e!RUNTIME*).

The implementation of the task processing in the runtime system for Linux® has been optimized with real-time extensions in order to provide maximum performance for automation tasks. Web visualization is also provided as visualization in addition to the development environment.

For IEC-61131-3 programming in CODESYS applications, the controller provides 16 MB of program memory (flash) and 64 MB of data memory (RAM) under CODESYS 2 and 64 MB of program and data memory (dynamically distributed) under *e!RUNTIME* as well as 128 kB of retentive memory (retain and flag variables) in an integrated NVRAM.

Two ETHERNET interfaces and an integrated, interruptible switch enable wiring for:

- In line topology with a common MAC address and IP address for both interfaces.
- Two separate networks with a common MAC address and an IP address for each interface.

Both of these interfaces support:

- 10BASE-T / 100BASE-TX
- Full/Half duplex
- Autonegotiation
- Auto-MDI(X) (automatic uplink and crossover switching)

The following fieldbus circuits are implemented for exchange of process data:

- MODBUS TCP Master/Slave

- MODBUS UDP Master/Slave
- MODBUS RTU Master/Slave (via RS-232 or RS-485)

In the controller, all input signals from the sensors are combined. After connecting the controller, all of the I/O modules on the bus node are detected and a local process image is created from these. Analog and specialty module data is sent via words and/or bytes; digital data is sent bit by bit.



Note

No direct access from fieldbus to the process image for I/O modules!

Any data that is required from the I/O module process image must be explicitly mapped in the CODESYS program to the data in the fieldbus process image and vice versa! Direct access is not possible!

The fieldbus configuration can be defined with the WAGO-I/O-PRO or *e!COCKPIT* controller configuration, depending on the set runtime system (CODESYS 2 or *e!RUNTIME*).

A Web-based management system (WBM) is also available as a configuration aid. This system includes various dynamic HTML pages from which, among other things, information about configuration and the status of the controller can be called up. The WBM is already stored in the device and is presented and operated using an Internet browser. You can also save your own HTML pages in the implemented file system, or call up programs directly.

In the controller's initial state, the installed firmware is based on Linux[®], with special real-time extensions of the RT-Preempt patch. In addition, the following application programs are also installed on the controller, along with a number of different auxiliary programs:

- a SNMP server/client
- a Telnet server
- a FTP, FTPS server
- a SSH server/client
- a Web server
- a NTP client
- a BootP and DHCP client
- a CODESYS Runtime Environment

Based on IEC-61131-3 programming, data processing takes place on site in the controller. The logical process results can be output directly to the actuators or transmitted via a connected fieldbus to the higher level controller.

Note**Memory card is not included in the scope of delivery!**

Note, the controller is delivered without memory card.

To use a memory card, you must order one separately. The controller can also be operated without memory card expansion, the use of a memory card is optional.

Note**Only use recommended memory cards!**

Use only the SD memory card available from WAGO (item No. 758-879/000-001) as it is suitable for industrial applications subjected to environmental extremes and was developed for use in the controller.

Compatibility with other commercially available storage media cannot be guaranteed.

Note**SIM card not included!**

Please note that an SIM card is required to use the mobile communications function with the controller. The SIM card may be obtained from typical service providers such as T-Mobile, VODAFONE or O2.

Select a suitable mobile communications tariff for your application, e.g., a flat-rate deal with reduced data rates when the inclusive volume covered by the flat-rate tariff is exceeded and/or a tariff with a texting package.

3.1 View

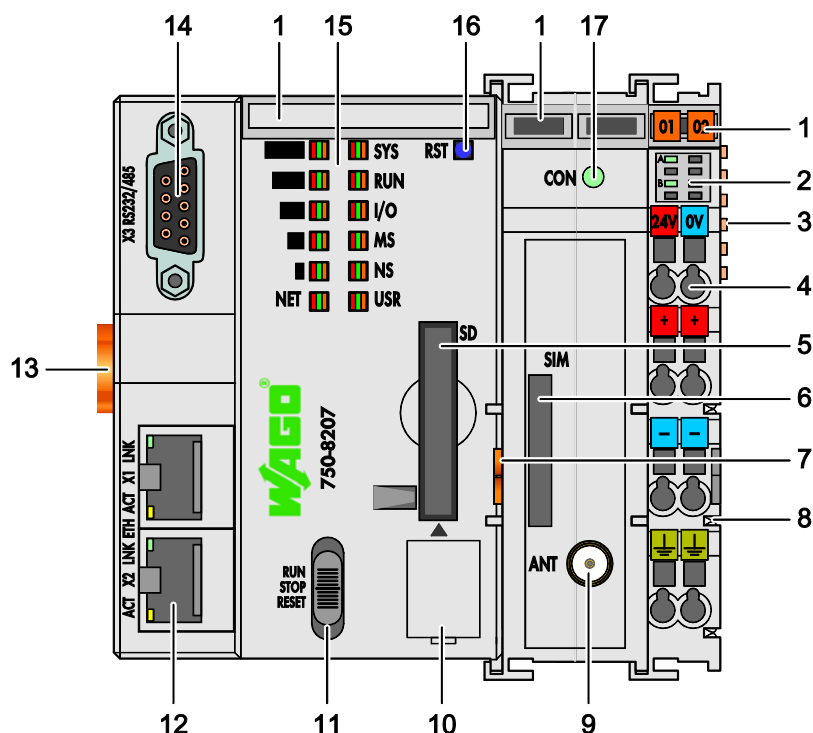


Figure 1: View of device

Table 4: Legend for Figure “View”

Item	Description	See section
1	Marking Options (Mini-WSB)	---
2	LED Indicators – Power Supply	“Indicating elements” > “Indicating element power supply”
3	Data contacts	“Connections” > “Data contacts/Internal data bus”
4	CAGE CLAMP® Connections for Power Supply	“Connections” > “CAGE CLAMP® connections”
5	Slot for memory card	“Memory card slot”
6	Slot for SIM card	“SIM card slot”
7	Releasing strap	“Mounting” > “Inserting and Removing Device”
8	Power contacts for power supply of down-circuit I/O modules	“Connections” > “Power contacts/ Field-side supply”
9	Mobile radio antenna connection	“Connections” > “Mobile radio antenna communication”
10	Service Interface (behind the flap)	“Connections” > “Service interface”

11	Mode selector switch	“Operating elements” > “Mode selector switch”
12	ETHERNET Connections	“Connections” > “Network connections ETHERNET – X1, X2”
13	Safe Locking Feature	“Mounting” > “Inserting and Removing Device”
14	Serial interface	“Connections” > “Communication port RS-232/RS-485 – X3”
15	LED Indicators – System	“Indicating elements” > “Indicating elements Fieldbus/System”
16	Reset button (in hole)	“Operating elements” > “Reset button”
17	LED indicators – Mobile radio network status	"Indicating elements" > "Indicating elements Fieldbus/System"

3.2 Labeling

The front labeling includes:

- Device designation
- Name of the display elements, connections and control elements
- Serial number with hardware and firmware version

The side labeling includes:

- Manufacturer's identification
- Connector pin assignment
- Serial number
- Approval information

3.2.1 Manufacturing Number

The serial number indicates the delivery status directly after production.

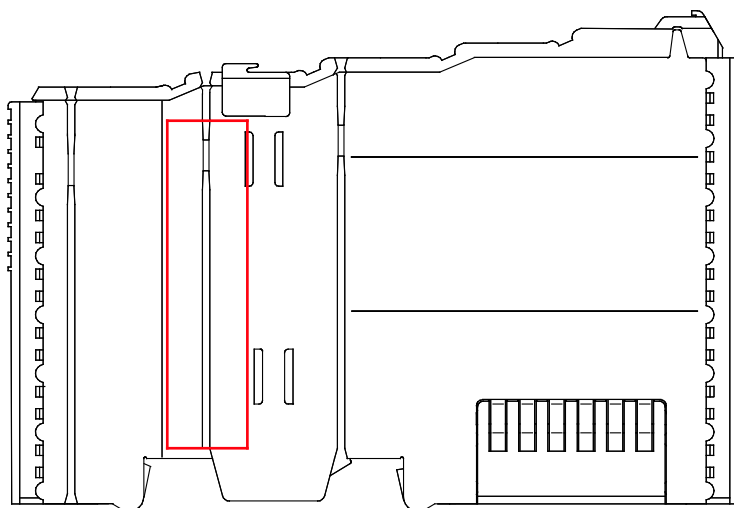


Figure 2: Marking Area for Serial Numbers

There are two serial numbers in two rows in the side marking. They are left of the release tab. The first 10 positions in the longer row of the serial numbers contain version and date identifications.

Example structure of the rows: 0114010101...

01	14	01	01	01	(additional positions)
WW	YY	FW --	HW	FL	-
Calendar	Year	Firmware	Hardware	Firmware	Internal information
week		version	version	loader	
				version	

The row order can vary depending on the production year, only the longer row is relevant. The back part of this and the shorter row contain internal administration information from the manufacturer.

3.3 Connectors

3.3.1 Data Contacts/Internal Bus

NOTICE

Do not place the I/O modules on the gold spring contacts!

Do not place the I/O modules on the gold spring contacts in order to avoid soiling or scratching!

NOTICE



Ensure that the environment is well grounded!

The devices are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the devices, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, e.g. data contacts.

Communication between the controller and the I/O modules and system power supply for the I/O modules is provided via the internal data bus, which consists of 6 data contacts designed as self-cleaning gold spring contacts.

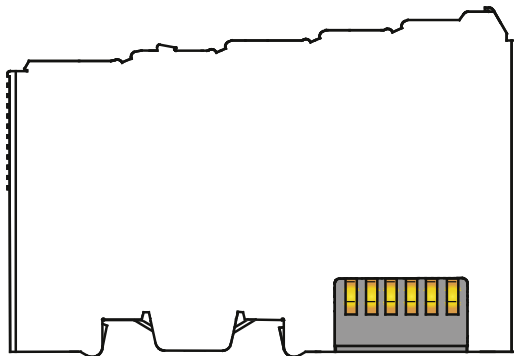


Figure 3: Data Contacts

3.3.2 Power Jumper Contacts/Field Supply

⚠ CAUTION

Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury.

The controller 750-8207 is equipped with 3 self-cleaning power contacts for transferring of the field-side power supply to down-circuit I/O modules. These contacts are designed as spring contacts.

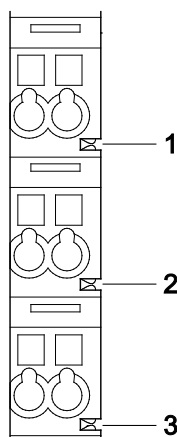


Figure 4: Power Jumper Contacts

Table 5: Legend for Figure “Power Jumper Contacts”

Contact	Type	Function
1	Spring contact	Potential transmission (U_V) for field supply
2	Spring contact	Potential transmission (0 V) for field supply
3	Spring contact	Potential transmission (ground) for field supply

NOTICE

Do not exceed maximum current via power jumper contacts!

The maximum current to flow through the power jumper contacts is 10 A. Greater currents can damage the contacts.

When configuring your system, ensure that this current is not exceeded. If exceeded, insert an additional supply module.

3.3.3 CAGE CLAMP® Connectors

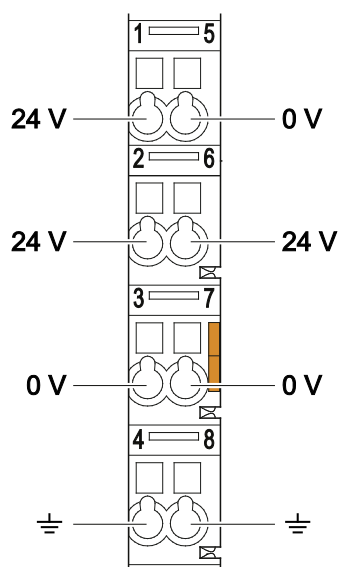


Figure 5: CAGE CLAMP® connections

Table 6: Legend for figure “CAGE CLAMP® connections”

Contact	Description	Description
1	24 V	System power supply voltage +24 V
2	+	Field-side power supply voltage U_V
3	-	Field-side power supply voltage 0 V
4	Ground	Field-side power supply voltage, ground
5	0 V	System power supply voltage 0 V
6	+	Field-side power supply voltage U_V
7	-	Field-side power supply voltage 0 V
8	Ground	Field-side power supply voltage, ground



Note

Observe supplementary power supply regulations for use in shipbuilding!
Observe supplementary power supply regulations for shipbuilding and the supply voltage in Section “Connect Devices” > ... > “Supplementary Power Supply Regulations”!

3.3.4 Service Interface

The service interface is located behind the flap.

The Service interface is used for communication with WAGO-I/O-CHECK and WAGO-ETHERNET-Settings and for firmware download.

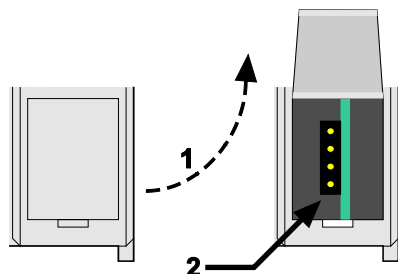


Figure 6: Service Interface (Closed and Open Flap)

Table 7: Service Interface

Number	Description
1	Open flap
2	Service interface

NOTICE

Device must be de-energized!

To prevent damage to the device, unplug and plug in the communication cable only when the device is de-energized!

The connection to the 4-pin header under the cover flap can be realized via the communication cables with the item numbers 750-920 and 750-923 or via the WAGO radio adapter with the item number 750-921.

3.3.5 Network Connections – X1, X2

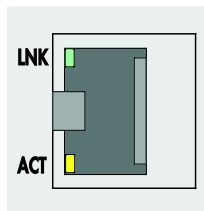


Figure 7: Network Connections – X1, X2

Table 8: Legend for Figure “Network Connections – X1, X2”

Contact	Signal	Description
1	TD +	Transmit Data +
2	TD –	Transmit Data –
3	RD +	Receive Data +
4	NC	Not assigned
5	NC	Not assigned
6	RD –	Receive Data –
7	NC	Not assigned
8	NC	Not assigned

3.3.6 RS-232/RS-485 – X3 Communication Connection

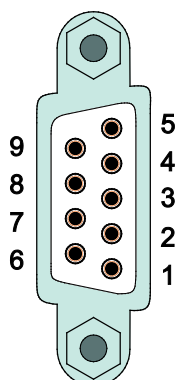


Figure 8: RS-232/RS-485 – X3 Communication Connection

Table 9: Legend for Figure “RS-232/RS-485 – X3 Communication Connection”

Contact	RS-232		RS-485	
	Signal	Description	Signal	Description
1	NC	Not assigned	NC	Not assigned
2	RxD	Receive Data	NC	Not assigned
3	TxD	Transmit Data	RxD/TxD-P	Receive/transmit data +
4	NC	Not assigned	NC	Not assigned
5	FB_GND	Ground	FB_GND	Ground
6	NC	Not assigned	FB_5V	Power Supply
7	RTS	Request to send	NC	Not assigned
8	CTS	Clear to send	RxD/TxD-N	Receive/transmit data –
9	NC	Not assigned	NC	Not assigned
Enclosure	Shield	Shielding	Shield	Shielding

NOTICE

Incorrect parameterization can damage the communication partners!

The voltage levels are –12 V and +12 V for RS-232, and –5 V and +5 V for RS-485.

If the controller interfaces differ from those of the communication partners (RS-232 \leftrightarrow RS-485 or RS-485 \leftrightarrow RS-232), this may damage the interface of the communication partner.

Therefore, always ensure that the controller interface matches those of its communication partners when configuring these items!

DC/DC converters and optocouplers in the fieldbus interface electrically isolate the fieldbus system and the electronics.

3.3.6.1 Operating as an RS-232 Interface

Depending on the device type DTE (e.g., PC) or DCE (e.g., PFC, modem), the RS-232 signals have different data directions.

Table 10: Function of RS-232 Signals for DTE/DCE

Contact	Signal	Data Direction	
		DTE	DCE
2	RxD	Input	Output
3	TxD	Output	Input
5	FB_GND	---	---
7	RTS	Output	Input
8	CTS	Input	Output

For a DTE-to-DCE connection, the signals are connected directly (1:1).

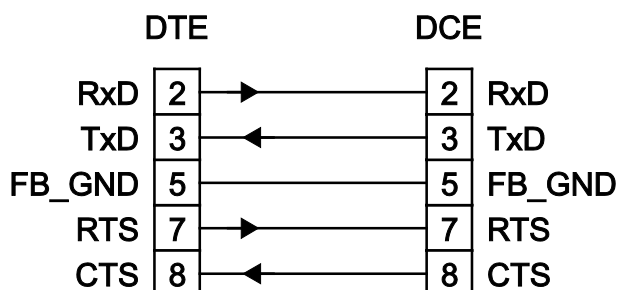


Figure 9: Termination with DTE-DCE Connection (1:1)

For a DTE-to-DTE connection, the signal connections are crossed.

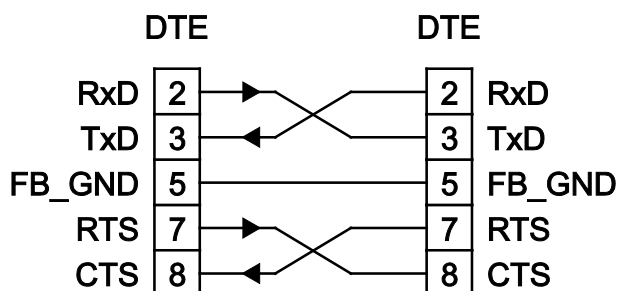


Figure 10: Termination with DTE-DTE Connection (Cross-Over)

3.3.6.2 Operating as an RS-485 Interface

To minimize reflection at the end of the line, the RS-485 line must be terminated at both ends by a cable termination. If required, one pull-up or pull-down resistor may be used. These resistors ensure a defined level on the bus when no subscriber is active, i.e., when all subscribers are in “Tri-state”.

Note



Attention — bus termination!

The RS-485 bus segment must be terminated at both ends!

No more than two terminations per bus segment may be used!

Terminations may not be used in stub and branch lines!

Operation without proper termination of the RS-485 network may result in transmission errors.

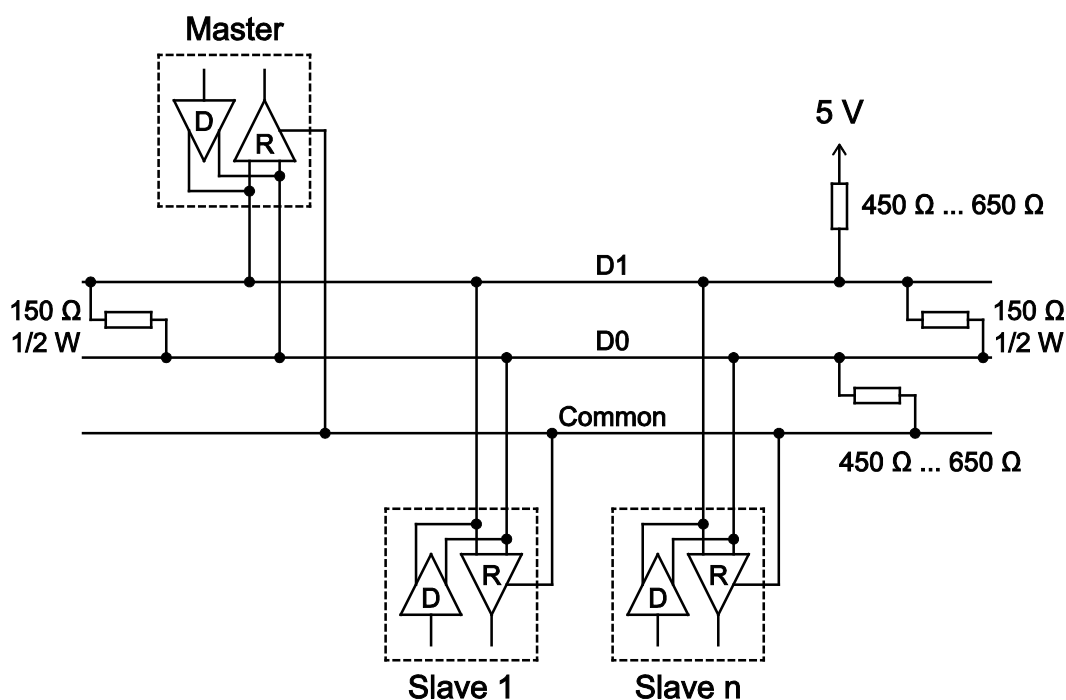


Figure 11: RS-485 Bus Termination

3.3.7 Mobile Radio Antenna

The screw connector (SMA jack) for the mobile radio antenna is located at the front of the housing.

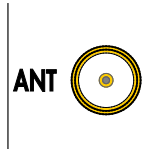


Figure 12: Mobile Radio Antenna Connection

3.4 Display Elements

3.4.1 Power Supply Indicating Elements

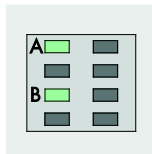


Figure 13: Power Supply Indicating Elements

Table 11: Legend for Figure “Power Supply Indicating Elements”

Description	Color	Description
A	Green/off	Status of system power supply voltage
B	Green/off	Status of field-side power supply voltage

3.4.2 Fieldbus/System Indicating Elements

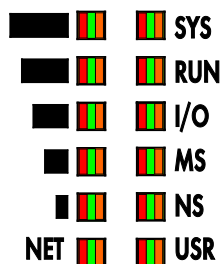







Figure 14: Indicating elements for fieldbus/system

Table 12: Legend for Figure “Fieldbus/System Indicating Elements”

Description	Color	Description
SYS	Red/Green/ Orange/Off	System status
RUN	Red/Green/ Orange/Off	PLC program status
I/O	Red/Green/ Orange/Off	Internal data bus status
CG	Without function	
NS	Without function	
USR	Red/Green/ Orange/Off	User LED, programmable using function blocks from the WAGO libraries to control the LEDs
	Red/Green/ Orange/Off	Signal quality (S5)
	Red/Green/ Orange/Off	Signal quality (S4)
	Red/Green/ Orange/Off	Signal quality (S3)
	Red/Green/ Orange/Off	Signal quality (S2)
	Red/Green/ Orange/Off	Signal quality (S1)
NET	Red/Green/ Orange/Off	Network status

3.4.3 Memory Card Indicating Elements

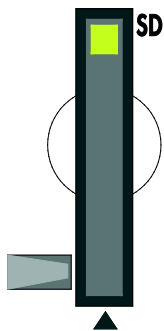


Figure 15: Indicating Elements, Memory Card Slot

Table 13: Legend for Figure “Indicating Elements, Memory Card Slot”

Description	Color	Description
SD	Yellow/Off	Memory card status

3.4.4 Network Indicating Elements

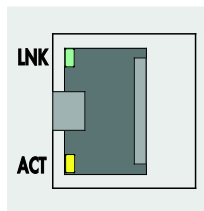


Figure 16: Indicating Elements, RJ-45 Jacks

Table 14: Legend for Figure “Indicating Elements, RJ-45 Jacks”

Description	Color	Description
LNK	Green/Off	ETHERNET connection status
ACT	Yellow/Off	ETHERNET data exchange

3.4.5 Mobile Radio Network Status Indicators

CON 

Figure 17: Mobile Radio Network Status Indicators

Table 15: Legend for the “Mobile Radio Network Status Indicators” Figure

Description	Color	Description
CON	Green/off	Mobile radio network status

3.5 Operating Elements

3.5.1 Operating Mode Switch

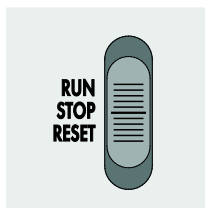


Figure 18: Mode Selector Switch

The function of the mode selector switch depends on the activated runtime system (CODESYS 2 or *e!RUNTIME*).

3.5.1.1 CODESYS 2 Runtime System

Table 16: Mode Selector Switch

Item	Activation	Function
RUN	Latching	Normal mode CODESYS 2 application runs.
STOP	Latching	Stop CODESYS 2 application stopped.
RESET	Spring-return	Reset warm start or Reset cold start (based on the duration of activation, see Section “Starting” > “Initiating Reset Functions”)

Other functions can also be initiated using the reset button.

3.5.1.2 *e!RUNTIME* Runtime System

Table 17: Mode Selector Switch

Position	Actuation	Function
RUN	Latching	Normal operation <i>e!RUNTIME</i> applications running.
STOP	Latching	Stop All <i>e!RUNTIME</i> applications have stopped.
RESET	Spring-return	Reset warm start or Reset cold start (depending on length of actuation, see Section “Starting” > “Initiating Reset Functions”)

Other functions can also be initiated using the reset button.

3.5.2 Reset Button

 


Figure 19: Reset Button

The Reset button is installed behind drilling to prevent operating errors. It is a shortstroke button with a low actuating force of 1.1 N ... 2.1 N (110 gf ... 210 gf). The button can be actuated using a suitable object (e.g., pen).

You can initiate different functions using the Reset button depending on the position of the mode selector:

- Temporarily set a fixed IP address
- Perform a software reset (restart)
- Restore factory setting (factory reset)

Please refer to the same sections in the back of this manual for information about the functions.

3.6 Slot for Memory Card

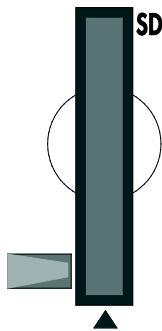


Figure 20: Slot for SD Memory Card

The slot for the SD memory card is located on the front of the housing. The memory card is locked in the enclosure by a push/push mechanism. Inserting and removing the memory card is described in the Section “Service” > “Inserting and Removing the Memory Card.”

The memory card is protected by a cover flap. The cover cap is sealable.

Note



Memory card is not included in the scope of delivery!

Note, the controller is delivered without memory card.

To use a memory card, you must order one separately. The controller can also be operated without memory card expansion, the use of a memory card is optional.

Note



Only use recommended memory cards!

Use only the SD memory card available from WAGO (item No. 758-879/000-001) as it is suitable for industrial applications subjected to environmental extremes and was developed for use in the controller.

Compatibility with other commercially available storage media cannot be guaranteed.

3.7 SIM Card Slot

 


Figure 21: SIM Card Slot

The slot for the SIM card is located on the front of the housing. The SIM card is locked in the housing by a push/push mechanism. Inserting and removing the card is described in the section “Service” > “Inserting and Removing the SIM Card”.



Note

SIM card not included!

Please note that an SIM card is required to use the mobile communications function with the controller. The SIM card may be obtained from typical service providers such as T-Mobile, VODAFONE or O2.

Select a suitable mobile communications tariff for your application, e.g., a flat-rate deal with reduced data rates when the inclusive volume covered by the flat-rate tariff is exceeded and/or a tariff with a texting package.

3.9 Technical Data

3.9.1 Device Data

Table 18: Technical Data – Device Data

Width	103 mm
Height (from upper edge of DIN 35 rail)	65 mm
Length	100 mm
Weight	288 g

3.9.2 System Data

Table 19: Technical Data – System Data

CPU	Cortex A8, 600 MHz
Operating System	Real-time Linux [®] 3.18 (with RT Preemption Patch)
Memory card slot	Push-push mechanism, sealable cover lid
Type of memory card	SD and SDHC up to 32 Gbytes (All guaranteed properties are valid only in connection with the WAGO 758-879/000-001 memory card.)

3.9.3 Power supply

Table 20: Technical Data – Power Supply

Power supply	24 VDC (-25 % ... +30 %)
Max. input current (24 V)	550 mA
Power failure time acc. IEC 61131-2	Depending on external buffering
Total current for I/O modules (5V)	1700 mA
Isolation	500 V system/supply

Note

**Buffer for system power supply!**

The system power supply must be buffered to bridge power outages. As the power demand depends on the respective node configuration, buffering is not implemented internally.

To achieve power outages of 1 ms to 10 ms according to IEC61131-2, determine the buffering appropriate for your node configuration and structure it as an external circuit.

3.9.4 Clock

Table 21: Technical Data – Clock

Drift - system clock (25 °C)	20 ppm
Drift - RTC (25 °C)	3 ppm
Buffer time RTC (25 °C)	30 days

3.9.5 Programming

Table 22: Technical Data – Programming

Programming	CODESYS 2	WAGO-I/O-PRO V2.3
	<i>e!RUNTIME</i>	<i>e!COCKPIT</i>
IEC 61131-3		IL, LD, FBD, ST, FC
CODESYS 2 memory configuration		
Program memory (Flash)		16 MByte
Data memory (RAM)		64 MByte
Non-volatile memory (NVRAM, Retain + Flags)		128 kByte
<i>e!RUNTIME</i> memory configuration		
Program and data memory		60 MByte (dynamically distributed)
Non-volatile memory (NVRAM, Retain + Flags)		128 kByte
Retain variables max.	CODESYS 2	10,000
	<i>e!RUNTIME</i>	Not specified

3.9.6 Internal data bus

Table 23: Technical Data – Internal Data Bus

Number of I/O modules (per node)		64
with bus extension		250
Input and output process image (max.)	CODESYS 2	1,000 words
	<i>e!RUNTIME</i>	Not specified

3.9.7 ETHERNET

Table 24: Technical Data – ETHERNET

ETHERNET		2 x RJ-45 (switched or separated mode)
Transmission medium		Twisted Pair S-UTP, 100 Ω, Cat 5, 100 m maximum cable length
Baud rate		10/100 Mbit/s; 10Base-T/100Base-TX
Protocols		DHCP, DNS, SNTP, FTP, FTPS, SNMP, HTTP, HTTPS, SSH, MODBUS (TCP, UDP)
MODBUS input and output process image, max.	CODESYS 2	1,000 words, also with MODBUS access to the flag area (see Section "MODBUS" > ... > "Flag Area")
	<i>e!RUNTIME</i>	32,000 words

Note

**No direct access from fieldbus to the process image for I/O modules!**

Any data that is required from the I/O module process image must be explicitly mapped in the CODESYS program to the data in the fieldbus process image and vice versa! Direct access is not possible!

3.9.8 Serial interface

Table 25: Technical Data – Serial Interface

Interface	1 x serial interface per TIA/EIA 232 and TIA/EIA 485 (switchable), 9-pole D-sub female connector
Protocols	MODBUS RTU

3.9.9 Mobile Radio Modem

Table 26: Technical Data – Mobile Radio Modem

Technology	GSM / Edge / UMTS / HSPA+
SIM card type / slot	Mini SIM, push-push mechanism
Communication	Quad band
Communication types	SMS (bidirectional), GPRS connection to the Internet

3.9.10 Connection Type

Table 27: Technical Data – Field Wiring

Wire connection	CAGE CLAMP®
Cross section	0.08 mm² ... 2.5 mm², AWG 28 ... 14
Stripped lengths	8 mm ... 9 mm / 0.33 in

Table 28: Technical Data – Power Jumper Contacts

Power jumper contacts	Spring contact, self-cleaning
Voltage drop at I_{\max}	< 1 V/64 modules

Table 29: Technical Data – Data Contacts

Data contacts	Slide contact, hard gold plated, self-cleaning
---------------	--

3.9.11 Climatic Environmental Conditions

Table 30: Technical Data – Climatic Environmental Conditions

Operating temperature range	0 °C ... 55 °C
Operating temperature range for components with extended temperature range (750-xxx/025-xxx)	–20 °C ... +60 °C
Storage temperature range	–25 °C ... +85 °C
Storage temperature range for components with extended temperature range (750-xxx/025-xxx)	–40 °C ... +85 °C
Relative humidity	Max. 5 % ... 95 % without condensation
Resistance to harmful substances	Acc. to IEC 60068-2-42 and IEC 60068-2-43
Maximum pollutant concentration at relative humidity < 75 %	SO ₂ ≤ 25 ppm H ₂ S ≤ 10 ppm
Special conditions	Ensure that additional measures for components are taken, which are used in an environment involving: – dust, caustic vapors or gases – ionizing radiation

3.10 Approvals



Information

More information about approvals.

Detailed references to the approvals are listed in the document “Overview Approvals **WAGO-I/O-SYSTEM 750**”, which you can find via the internet under: www.wago.com > SERVICES > DOWNLOADS > Additional documentation and information on automation products > WAGO-I/O-SYSTEM 750 > System Description.

The following approvals have been granted to the controller “PFC200 CS 2ETH RS 3G” (750-8207):



Conformity Marking

3.11 Standards and Guidelines

The controller “PFC200 CS 2ETH RS 3G” (750-8207) fulfills the following EMC standards:

EMC CE-Immunity to interference acc. to EN 61000-6-2

EMC CE-Emission of interference acc. to EN 61000-6-3

4 Function Description

4.1 Network

4.1.1 Interface Configuration

The ETHERNET X1 and X2 interfaces of the controller are connected with an internal 3-port switch, in which the third port is connected to the CPU.

Interfaces X1 and X2 can either be operated in Switch mode or as separate network interfaces. The switching can be performed during the runtime.

The Switch mode is activated by default and during initial startup. The “Configuration mode” is set to “DHCP.”

For interface X1, a fixed IP address can be set (“Fix IP Address”). The setting is carried out with the Reset button (see Section “Startup” > ... > “Setting a Fixed IP Address”).

Setting a fixed IP address has no effect on the mode previously set.

4.1.1.1 Operation in Switch Mode

For operation in Switch mode, the TCP/IP settings such as the IP address or subnet mask apply to both X1 and X2.

When switching to Switch mode, the X1 settings are applied as a new common configuration for X1 and X2.

The device is then no longer accessible via the IP address previously set for X2. This must be taken into account for CODESYS applications that use X2 for communication.

4.1.1.2 Operation with Separate Network Interfaces

When operating with separate network interfaces, both ETHERNET interfaces can be configured and used separately.

Note that the two interfaces still have the same MAC address. Therefore, they must not be operated in the same network segment.

When switching to operating with separate interfaces, interface X2 is initialized with the setting values last valid for it. The connections on the X1 interface persist.

When operating with separate interfaces and fixed IP address, the device can still be accessed via the interface X2 via the regular IP address.

4.1.2 Network Security

4.1.2.1 Users and Passwords

Several groups of users are provided in the controller which can be used for various services.

Default passwords are set for all users. We strongly recommend changing these passwords on startup!



Note

Change passwords

Default passwords are documented in these instructions and therefore do not offer adequate protection! Change the passwords to meet your particular needs.

4.1.2.1.1 Services and Users

All password-protected services and their associated users are listed in the following table.

Service	Users					
	WBM		Linux [®]			SNMP
	admin	user	root	admin	user	
Web Based Management (WBM)	X	X				
Linux [®] console			X	X	X	
Console Based Management (CBM)			X	X		
CODESYS				X		
Telnet			X	X	X	
FTP			X	X	X	
FTPS			X	X	X	
SSH			X	X	X	
SNMP						X

4.1.2.1.2 WBM User Group

WBM has its own user administration system. The users in this system are isolated from the other user groups in the system for security reasons.

Detailed information about this is given in the Section “WBM User Administration”.

Table 31: WBM Users

Users	Permissions	Default Password
admin	All (administrator)	wago
user	Supported to a limited extent	user
guest	Display only	---



Note

Change passwords

Default passwords are documented in these instructions and therefore do not offer adequate protection! Change the passwords to meet your particular needs.

4.1.2.1.3 Linux® User Group

The Linux® users group include the actual users of the operating system, which is likewise used by most services.

The passwords for these users must be configured through a terminal connection via SSH/RS-232.

Table 32: Linux® Users

User	Special Feature	Home Directory	Default Password
root	Super user	/root	wago
admin	CODESYS user	/home/admin	wago
user	Normal user	/home/user	user



Note

Change passwords

Default passwords are documented in these instructions and therefore do not offer adequate protection! Change the passwords to meet your particular needs.

4.1.2.1.4 SNMP User Group

The SNMP service manages its own users. In its initial state, no users are stored in the system.

4.1.2.2 Web Protocols for WBM Access

The HTTP and HTTPS web protocols can be used to access the WBM pages for the controller. HTTPS is preferred because it uses the SSL/TLS protocol. The SSL/TLS protocol ensures secure communication through encryption and authentication

The default setting for the controller allows strong encryption, but uses only simple authentication methods. As authentication for any secure communication channel plays a central role, it is strongly recommended that you use secure authentication. The security certificate saved on the controller is the basis for authentication. The default location for the security certificate is:
`/etc/lighttpd/https-cert.pem`

As delivered, the controller uses a generic security certificate based on x509. To allow secure authentication, you must replace the generic security certificate with a security certificate specific for the individual device.

4.1.3 Network Configuration

4.1.3.1 Host Name/Domain Name

Without a host name configuration, the controller is assigned a default name which includes the last three values of the controller's MAC address, e.g., "PFCx00-A1A2A3." This name is valid for as long as a host name was not configured, or host name was not supplied to the controller via DHCP (for configuration of the controller see Section "Startup" > "Configuring"). When the host name is set, a host name supplied by a DHCP response is immediately active and displaces the configured or default host name. If there are multiple network interfaces with DHCP, the last received host name is valid. If only the configured name is to be valid, the network administrator must adjust the configuration of the active DHCP server so that no host names are transferred in the DHCP response.

The default host name or the configured name is active again if the network interfaces are set to static IP addresses or if a host name is not received via the DHCP response.

A similar mechanism is used for a domain name as for the host name. The difference is that a default domain name is not set. As long as a domain name is not configured or supplied by DHCP, the domain name is empty.

4.1.3.2 Default Gateways

In the TCP/IP configuration, the controller allows the setting of two default gateways. A network station transmits to a default gateway all network data packets for systems outside of its local network. This gateway is responsible for the appropriate routing of the data packets, so that they reach the target system.

The default gateways are assigned a so-called metric which specifies the time delay, sometimes called the cost factor, with which a data packet can be routed via the gateway. If multiple default gateways are configured, the operating system transmits the data packets to the default gateway configured with the lowest metric. If this gateway is not accessible, an attempt is made to access the gateway with the next higher metric. The gateway is determined randomly if multiple gateways have the same metric. If this gateway cannot transmit the data packet, the data packet is sent simultaneously to all other gateways of the same metric.

The metric of the configured default gateways can be set for the controller. The default value for the metric is 20. Besides the directly configured gateways, other gateways can be set via DHCP responses so that more than two gateways are possible. All gateways transferred via DHCP are assigned a permanent metric of 10. The DHCP gateways are thus normally given priority on account of their low metric.

4.1.4 Network Services

4.1.5 DHCP Client

The controller can get network parameters from an external DHCP master via the DHCP Client service.

The following parameters can be obtained:

- IP address
- SubNet mask
- Router/gateway
- Hostname
- Domain
- DNS server
- NTP server

For the IP address, SubNet mask and router/gateway parameters, the entries are stored per ETHERNET port (X1, X2).

The Hostname and Domain parameters are stored according to the LIFO principle (Last In First Out). The settings from the last DHCP offer received are always used.

The DNS and NTP Server parameters are stored centrally for global use. All transmitted parameters are saved.

4.1.5.1 DHCP Server

The controller provides the DHCP server service for the automatic configuration of IP addresses of network stations on the same subnet.

Generally, only one DHCP server can be active on a subnet at one time.

The following can be set for the DHCP server:

- The service itself (active/not active)
- The range of dynamically assigned IP addresses
- The lease time of the dynamically assigned IP addresses
- A list with static assignments of IP addresses to MAC addresses

In “switched” mode, these settings are possible for both interfaces together and in “separated” mode for each interface separately.

The settings are made, for example, in the WBM via the “DHCP Configuration” page.

The DHCP server also passes other parameters in addition to the IP address. The following table shows the complete list.

Table 33: List of Parameters Transmitted via DHCP

Parameters	Explanation
IP address	An IP address from the range of permitted address; the range can be configured in the WBM. The DHCP server determines the IP address to be passed to the requesting network subscriber (client) from the MAC address of the network subscriber and the range of addresses to be assigned. As long as the configured address range does not change and no bottlenecks occur when assigning IP addresses, the DHCP server continuously reassigns the same IP addresses to requesting network subscribers. When a subscriber connects to the network, for whose MAC address a fixed IP address has been configured in the WBM, this address is passed to it. Such a fixed IP address can also be outside the range of freely-assignable IP addresses. A hostname can also be specified instead of the MAC address for identifying the requesting network subscriber.
Subnet mask	The subnet mask configured in the network settings of the DHCP server for the local network concerned is passed. The subnet mask and IP address determine the range of valid IP addresses on the local network.
Broadcast address	IP address with which an IP packet can be sent to all network subscribers on the subnet at the same time
Lease time	Determines the validity period of the DHCP parameters passed to a network subscriber: Per protocol, the network subscriber is required to request the network settings again after half the period of validity. The lease time is configured in the WBM.
Host name	The network name is passed to the network subscriber. The network subscriber normally sends its own name with its request for the IP address. It is then used by the DHCP server in its response.
Name server	The DHCP server passes its own IP address as the DNS name server to the network subscriber.
Default gateway	The DHCP server passes its own IP address as the default gateway to the network subscriber. The default gateway is required to communication with subscribers outside the local network.

Not all parameters can be set in the WBM. If you want to set other values for the existing parameters or want to pass other parameters via DHCP, the DHCP server must be manually configured. For the controller, the DHCP server service is handled by the program "dnsmasq".

From a Linux[®] command line, an editor must be used to change the file
“/etc/dnsmasq.d/dnsmasq_default.conf” to set the configuration.

4.1.5.2 DNS Server

The controller offers the DNS server service for the automatic assignment of hostnames to IP addresses of network stations.

The DNS server takes over the names and IP addresses of local network stations from the DHCP server. This DNS server routes requests for non-local names, such as from the Internet, to higher-level DNS servers if configured and accessible.

The following settings are possible for the DNS server:

- The service itself (enabled/disabled)
- Access type to the assignments
The requests are buffered in “Proxy” mode (throughput optimized).
In Relay mode the requests are routed directly to higher-level name servers.
- A list with up to 15 static assignments of IP addresses to hostnames
If only the hostname is used, the configured or default domain is added to the hostname automatically to ensure FQDN name resolution.

The settings are made, e.g., in the WBM, via the “Configuration of DNS Service” page.

4.2 Memory Card Function

Note

**Only use recommended memory cards!**

Use only the SD memory card available from WAGO (item No. 758-879/000-001) as it is suitable for industrial applications subjected to environmental extremes and was developed for use in the controller. Compatibility with other commercially available storage media cannot be guaranteed.

The memory card is optional and serves as an additional memory area in addition to the internal memory or drive in the controller. The user program, user data, the source code of the project, or device settings can be saved to the memory card and thus already existing project data and programs can be copied to one or multiple controllers.

Note

**Deactivate write protection!**

In order to be able to write data to the memory card, you must deactivate the small push switch for the write protection setting. This switch is on one of the long sides of the memory card.

If the memory card is inserted, this is incorporated under /media/sd in the directory structure of the file system inside the controller. This means that the memory card can be addressed like a removable medium on a PC.

Note

**Note the pre-formatting of the memory card!**

Please note that memory cards ≤ 2 GB are often formatted with the “FAT16” file system type and can generate up to 512 entries in the root directory. For over 512 entries create these in a subdirectory or format the memory card with “FAT32” or “NTFS.”

The function of the memory card in normal operation and possible faults that may occur when the memory card is used are described in the following sections for different operating modes.

4.2.1 Backup Function (Saving of Device Settings to the Memory Card)

This function enables the data of the internal memory and device settings to be saved on the memory card during operation.

Requirement: The fieldbus nodes and the PLC program are in operation and the memory card is plugged in.

The following selection is possible on the “Firmware Backup” page in the Web-Based Management:

- PLC runtime project (boot project)
- Settings
- System
- All (all of the above, only visible if not saved in the network)

The network or the inserted memory card can be selected as the target medium.

The files of the internal drive are stored on the target medium in the directory media/sd/copy and in the corresponding subdirectories.

The information that is not present as files on the controller is stored in XML format in the directory media/sd/settings/.

If the memory card is selected as the target medium, the LED above the memory card slot flashes yellow/orange during the save operation.

The device settings and files of the internal drive are then saved on the target medium.

4.2.2 Restore Function (Loading of Device Settings from the Memory Card)

This function enables the data of the internal memory and device settings to be saved from the memory card to the internal memory during operation.

Requirement: The fieldbus nodes and the PLC program are in operation and the memory card is plugged in.

The following selection is possible on the “Firmware Restore” page in the Web-Based Management:

- All (all of the above, only visible if not saved in the network)
- PLC runtime project (boot project)
- Settings
- System

The network or the inserted memory card can be selected as the source medium.

When loading the data, the files are copied from the directory `media/sd/copy/` of the source medium to the appropriate directories on the internal memory.

If the memory card is selected as the source medium, the LED above the memory card slot flashes yellow/orange during the load operation.

Note



In case of parameter changes, the device executes a restart!

Note that the device taking the data executes a restart if parameters in the internal drive are overwritten with other parameter settings from the memory card.

The boot project is loaded automatically and the settings automatically activated after a restart. The “Boot project location” set on the “General PLC Runtime Configuration Web” page of the WBM determines whether the boot project of the internal drive or the memory card is loaded.

Note



File size must not exceed the size of the internal drive!

Note that the amount of data in the `media/sd/copy/` directory must not exceed the total size of the internal drive.

4.2.3 Inserting a Memory Card during Operation

The fieldbus nodes and the PLC program are running.

Insert a memory card during ongoing operation.

During normal operation, the memory card is incorporated into the file system of the controller as a drive.

No automatic copy procedures are triggered.

The LED above the memory card flashes yellow/orange during the access.

The memory card is then ready for operation and available under /media/sd.

4.2.4 Removing the Memory Card during Operation

The fieldbus node and the PLC program are in operation and the memory card is plugged in.

Remove the memory card during ongoing operation.



Note

Data can be lost during writing!

Note that if you pull the memory card out during a write procedure, data will be lost.

The LED above the memory card flashes yellow/orange during the attempted access.

The controller then works without a memory card.

4.2.5 Setting the Home Directory for the Runtime System

The home directory for the runtime system is located in the controller's internal memory by default. An existing boot project may be saved in the home directory.

You can use the WBM to move the home directory for the runtime system to the memory card, e.g., to make more memory available for a large boot project or other files.

Some conditions must be met before moving the directory.

- A running IEC-61131 application must be stopped and the device restored to its initial state using the “Reset” function. Any boot project is deleted.
- When moving the home directory to the memory card, insert a memory card formatted to support file system. Only the first partition of a memory card can be accessed at /media/sd and can be used as the home directory.

Only when the two conditions are met can the “Home directory on memory card enabled” checkbox be selected from the WBM on the “PLC Runtime” page. Press the **[Submit]** button to apply the settings, which take effect after the next restart.

No files are applied from the old to the new home directory.

After moving the directory, a project must be loaded and a boot project created.

It should be noted that the memory card may not be removed under any circumstances as long as the home directory is there. If an application is running, system safety can be endangered by an uncontrolled controller crash.

Switching the home directory has no effect if the controller was booted from a memory card. The configuration state is saved, but only takes effect if the content of the memory card is copied to the internal memory.

5 Mounting

5.1 Installation Position

Along with horizontal and vertical installation, all other installation positions are allowed.



Note

Use an end stop in the case of vertical mounting!

In the case of vertical assembly, an end stop has to be mounted as an additional safeguard against slipping.

WAGO order no. 249-116 End stop for DIN 35 rail, 6 mm wide

WAGO order no. 249-117 End stop for DIN 35 rail, 10 mm wide

5.2 Overall Configuration

The maximum total length of a fieldbus node without fieldbus coupler/controller is 780 mm including end module. The width of the end module is 12 mm. When assembled, the I/O modules have a maximum length of 768 mm.

Examples:

- 64 I/O modules with a 12 mm width can be connected to a fieldbus coupler/controller.
- 32 I/O modules with a 24 mm width can be connected to a fieldbus coupler/controller.

Exception:

The number of connected I/O modules also depends on the type of fieldbus coupler/controller is used. For example, the maximum number of stackable I/O modules on one PROFIBUS DP/V1 fieldbus coupler/controller is 63 with no passive I/O modules and end module.

NOTICE

Observe maximum total length of a fieldbus node!

The maximum total length of a fieldbus node without fieldbus coupler/controller and without using a 750-628 I/O Module (coupler module for internal data bus extension) may not exceed 780 mm.

Also note the limitations of individual fieldbus couplers/controllers.



Note

Increase the total length using a coupler module for internal data bus extension!

You can increase the total length of a fieldbus node by using a 750-628 I/O Module (coupler module for internal data bus extension). For such a configuration, attach a 750-627 I/O Module (end module for internal data bus extension) after the last I/O module of a module assembly. Use an RJ-45 patch cable to connect the I/O module to the coupler module for internal data bus extension of another module block.

This allows you to segment a fieldbus node into a maximum of 11 blocks with maximum of 10 I/O modules for internal data bus extension.

The maximum cable length between two blocks is five meters.

More information is available in the manuals for the 750-627 and 750-628 I/O Modules.

5.3 Mounting onto Carrier Rail

5.3.1 Carrier Rail Properties

All system components can be snapped directly onto a carrier rail in accordance with the European standard EN 50022 (DIN 35).

NOTICE

Do not use any third-party carrier rails without approval by WAGO!

WAGO Kontakttechnik GmbH & Co. KG supplies standardized carrier rails that are optimal for use with the I/O system. If other carrier rails are used, then a technical inspection and approval of the rail by WAGO Kontakttechnik GmbH & Co. KG should take place.

Carrier rails have different mechanical and electrical properties. For the optimal system setup on a carrier rail, certain guidelines must be observed:

- The material must be non-corrosive.
- Most components have a contact to the carrier rail to ground electro-magnetic disturbances. In order to avoid corrosion, this tin-plated carrier rail contact must not form a galvanic cell with the material of the carrier rail which generates a differential voltage above 0.5 V (saline solution of 0.3 % at 20°C).
- The carrier rail must optimally support the EMC measures integrated into the system and the shielding of the I/O module connections.
- A sufficiently stable carrier rail should be selected and, if necessary, several mounting points (every 20 cm) should be used in order to prevent bending and twisting (torsion).
- The geometry of the carrier rail must not be altered in order to secure the safe hold of the components. In particular, when shortening or mounting the carrier rail, it must not be crushed or bent.
- The base of the I/O components extends into the profile of the carrier rail. For carrier rails with a height of 7.5 mm, mounting points are to be riveted under the node in the carrier rail (slotted head captive screws or blind rivets).
- The medal springs on the bottom of the housing must have low-impedance contact with the DIN rail (wide contact surface is possible).

5.3.2 WAGO DIN Rail

WAGO carrier rails meet the electrical and mechanical requirements shown in the table below.

Table 34: WAGO DIN Rail

Order number	Description
210-113 /-112	35 × 7.5; 1 mm; steel yellow chromated; slotted/unslotted
210-114 /-197	35 × 15; 1.5 mm; steel yellow chromated; slotted/unslotted
210-118	35 × 15; 2.3 mm; steel yellow chromated; unslotted
210-198	35 × 15; 2.3 mm; copper; unslotted
210-196	35 × 8.2; 1.6 mm; aluminum; unslotted

NOTICE

Use an appropriate DIN rail and mounting with increased load!

With increased vibration and shock load, use e.g., a WAGO 210-197 DIN rail at a mounting distance of 60 mm acc. to EN 61131-2.

5.4 Spacing

The spacing between adjacent components, cable conduits, casing and frame sides must be maintained for the complete fieldbus node.

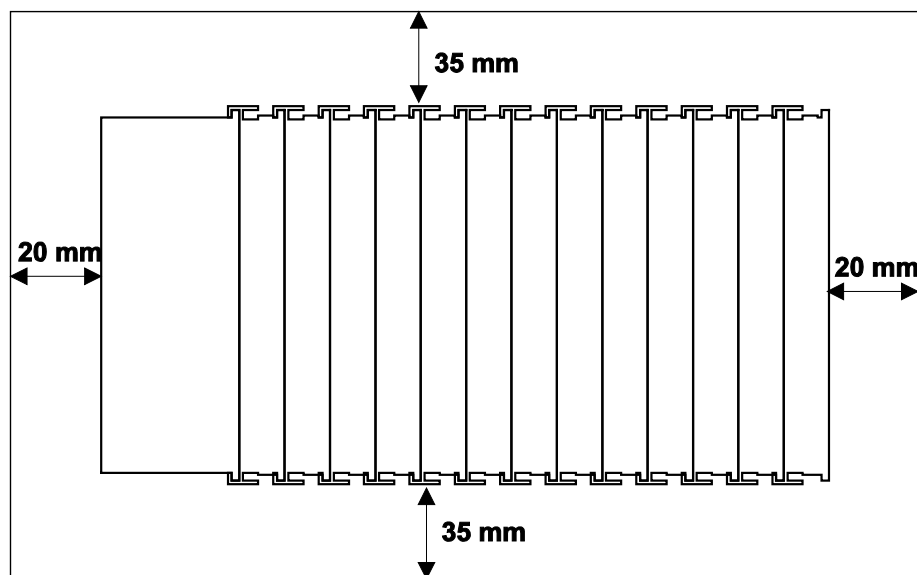


Figure 23: Spacing

The spacing creates room for heat transfer, installation or wiring. The spacing to cable conduits also prevents conducted electromagnetic interferences from influencing the operation.

5.5 Mounting Sequence

Fieldbus couplers/controllers and I/O modules of the WAGO-I/O-SYSTEM 750/753 are snapped directly on a carrier rail in accordance with the European standard EN 50022 (DIN 35).

The reliable positioning and connection is made using a tongue and groove system. Due to the automatic locking, the individual devices are securely seated on the rail after installation.

Starting with the fieldbus coupler/controller, the I/O modules are mounted adjacent to each other according to the project design. Errors in the design of the node in terms of the potential groups (connection via the power contacts) are recognized, as the I/O modules with power contacts (blade contacts) cannot be linked to I/O modules with fewer power contacts.

CAUTION

Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury.

NOTICE

Insert I/O modules only from the proper direction!

All I/O modules feature grooves for power jumper contacts on the right side. For some I/O modules, the grooves are closed on the top. Therefore, I/O modules featuring a power jumper contact on the left side cannot be snapped from the top. This mechanical coding helps to avoid configuration errors, which may destroy the I/O modules. Therefore, insert I/O modules only from the right and from the top.

Note



Don't forget the bus end module!

Always plug a bus end module 750-600 onto the end of the fieldbus node! You must always use a bus end module at all fieldbus nodes with WAGO-I/O-SYSTEM 750 fieldbus couplers/controllers to guarantee proper data transfer.

5.6 Inserting Devices

NOTICE

Perform work on devices only if they are de-energized!

Working on energized devices can damage them. Therefore, turn off the power supply before working on the devices.

5.6.1 Inserting the Controller

1. When replacing the controller for an already available controller, position the new controller so that the tongue and groove joints to the subsequent I/O module are engaged.
2. Snap the controller onto the carrier rail.
3. Use a screwdriver blade to turn the locking disc until the nose of the locking disc engages behind the carrier rail (see the following figure). This prevents the controller from canting on the carrier rail.

With the controller snapped in place, the electrical connections for the data contacts and power contacts (if any) to the possible subsequent I/O module are established.

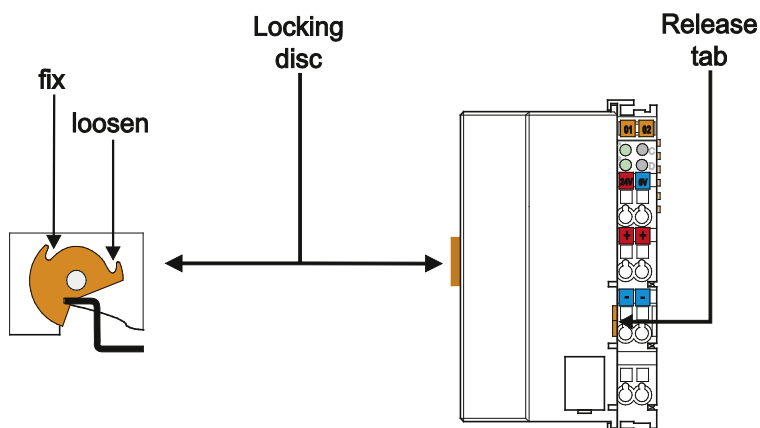


Figure 24: Release Tab of Controller

5.6.2 Inserting the I/O Module

1. Position the I/O module so that the tongue and groove joints to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are engaged.



Figure 25: Insert I/O Module (Example)

2. Press the I/O module into the assembly until the I/O module snaps into the carrier rail.

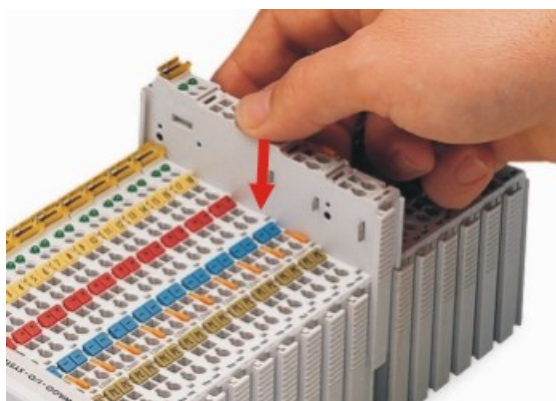


Figure 26: Snap the I/O Module into Place (Example)

With the I/O module snapped in place, the electrical connections for the data contacts and power jumper contacts (if any) to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are established.

6 Connect Devices

6.1 Connecting a Conductor to the CAGE CLAMP®

The WAGO CAGE CLAMP® connection is appropriate for solid, stranded and finely stranded conductors.

NOTICE

Select conductor cross sections as required for current load!

The current consumed for field-side supply may not exceed 10 A. The wire cross sections must be sufficient for the maximum current load for all of the I/O modules to be supplied with power.

Note



Only connect one conductor to each CAGE CLAMP® connection!

Only one conductor may be connected to each CAGE CLAMP® connection.
Do not connect more than one conductor at one single connection!

If more than one conductor must be routed to one connection, these must be connected in an up-circuit wiring assembly, for example using WAGO feed-through terminals.

1. To open the CAGE CLAMP® insert the actuating tool into the opening above the connection.
2. Insert the conductor into the corresponding connection opening.
3. To close the CAGE CLAMP® simply remove the tool - the conductor is then clamped firmly in place.

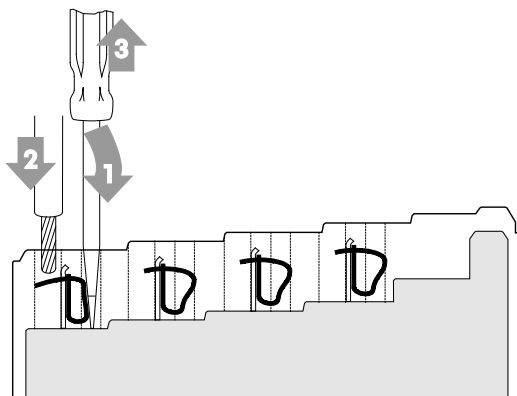


Figure 27: Connecting a Conductor to a CAGE CLAMP®

6.2 Power Supply Concept

6.2.1 Supplementary Power Supply Regulations

The WAGO-I/O-SYSTEM 750 can also be used in shipbuilding or offshore and onshore areas of work (e. g. working platforms, loading plants). This is demonstrated by complying with the standards of influential classification companies such as Germanischer Lloyd and Lloyds Register.

Filter modules for 24 V supply are required for the certified operation of the system.

Table 35: Filter Modules for 24 V Supply

Order No.	Name	Description
750-626	Supply Filter	Filter module for system supply and field supply (24 V, 0 V), i. e. for fieldbus coupler/controller and bus power supply (750-613)
750-624	Supply Filter	Filter module for the 24 V field supply (750-602, 750-601, 750-610)

Therefore, the following power supply concept must be absolutely complied with.

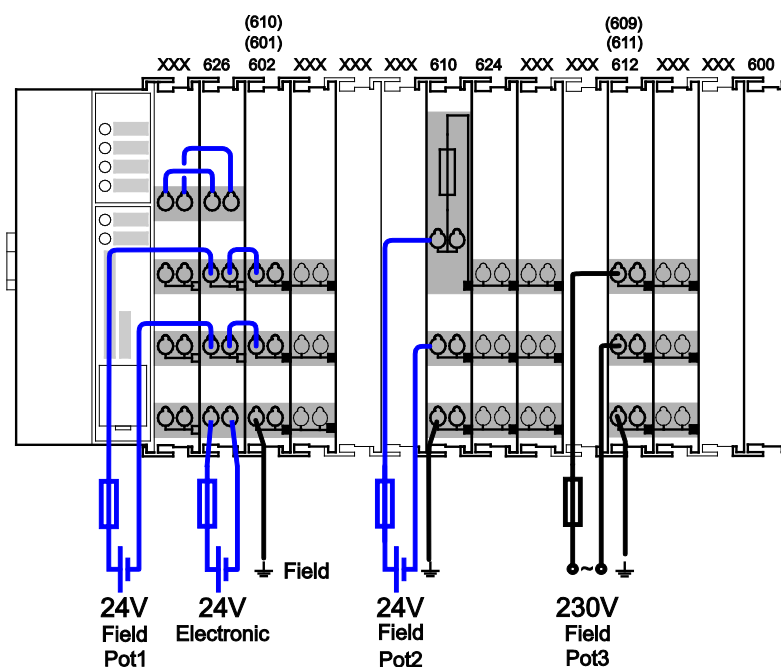


Figure 28: Power Supply Concept



Note

Use a supply module for equipotential bonding!

Use an additional 750-601/ 602/ 610 Supply Module behind the 750-626 Filter Module if you want to use the lower power jumper contact for equipotential bonding, e.g., between shielded connections and require an additional tap for this potential.

7 Commissioning

7.1 Switching On the Controller

Before switching on the controller ensure that you

- have properly installed the controller (see section “Installation”),
- have connected all required data cables (see section “Connections”) to the corresponding interfaces and have secured the connectors by their attached locking screws,
- have connected the electronics and field-side power supply (see section “Connections”),
- have mounted the end module (750-600) (see Section “Installation”),
- have performed appropriate potential equalization at your machine/system (see System Description for 750-xxx) and
- have performed shielding properly (see System Description for 750-xxx).

To switch on both the controller and the connected I/O modules, switch on your power supply unit.

Starting of the controller is indicated by a brief green flashing of all LEDs. After a few seconds the SYS LED will signal successful boot-up of the controller. The CODESYS 2.3 runtime system or *e!RUNTIME* is started at the same time.

Once the entire system has been successfully started, the SYS and I/O LEDs light up green.

If there is an executable IEC 61131-3 program stored and running on the controller, the RUN LED will light up green.

If no executable program is stored on the controller, or the mode selector switch is set to STOP, this is likewise indicated by the RUN LED (see Section “Diagnostics”> ... > “Fieldbus/System Indication Elements”).

7.2 Determining the IP Address of the Host PC

To ensure that the host PC can communicate with the controller via ETHERNET, both devices must be located in the same subnet.

To determine the IP address of the host PC (with the Microsoft Windows® operating system) using the MS DOS prompt, proceed as follows:

1. Open the MS DOS prompt window.
To do this, enter the command “cmd” in the input field under **Start > Execute...** > **Open:** (Windows® XP) or **Start > Search programs/files** (Windows® 7) and then click **[OK]** or press **[Enter]**.
2. In the MS DOS prompt enter the command “ipconfig” and then press **[Enter]**.
3. The IP address, subnet mask and standard gateway, including the appropriate parameters, are displayed.

7.3 Setting an IP Address

In the controller's initial state the following IP addresses are active for the ETHERNET interface (Port X1 and Port X2):

Table 36: Default IP Addresses for ETHERNET Interfaces

Ethernet interface	Default setting
X1/X2	Dynamic assignment of IP address using "Dynamic Host Configuration Protocol" (DHCP)

Adapt IP addressing for your specific system structure to ensure that the PC and the controller can communicate with one another using one of the available configuration tools (WBM, "WAGO Ethernet Settings", CBM) (see section "Configuration").

Example for incorporating the controller (192.168.2.17) into an existing network:

If the IP address of your host PC is 192.168.1.2, for example, then the controller must be on the same subnet. That is, with the net mask **255.255.255.0**, the first three digits of the controller must match those of your PC. This yields the following address range for the controller:

Table 37: Network Mask 255.255.255.0


Host PC	Subnet address range for the controller
192.168.1.2	192.168.1.3 ... 192.168.1.254

7.3.1 Assigning an IP Address using DHCP

The Controller can obtain dynamic IP addresses from a server (DHCP/BootP). In contrast to fixed IP addresses, dynamically assigned addresses are not stored permanently. Therefore, a BootP or DHCP server must be available each time the controller is restarted.

If an IP address has been assigned by means of DHCP (default setting), it can be determined through the settings and the output of the specific DHCP server.

In the example figure shown here, the corresponding output of “Open DHCP” is presented.

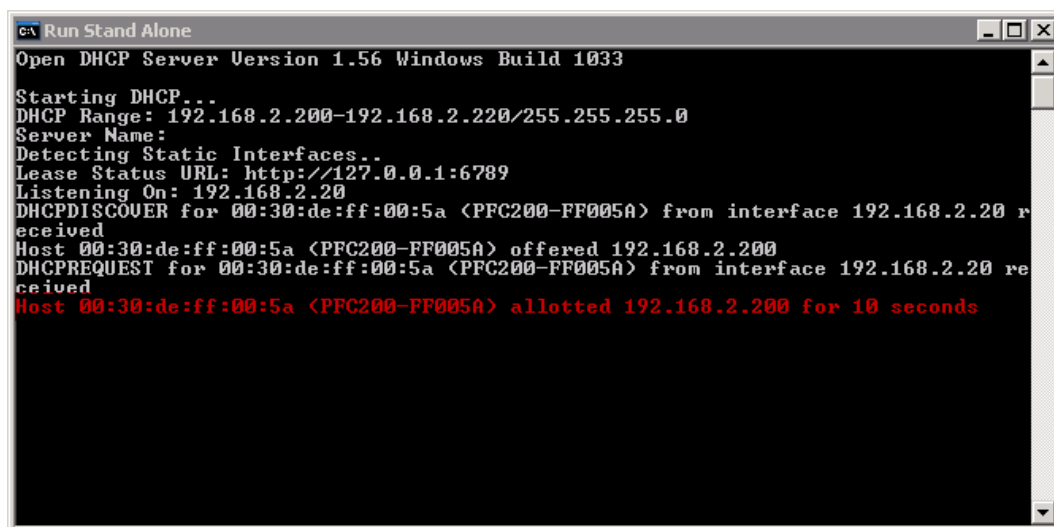

```
Run Stand Alone
Open DHCP Server Version 1.56 Windows Build 1033

Starting DHCP...
DHCP Range: 192.168.2.200-192.168.2.220/255.255.255.0
Server Name:
Detecting Static Interfaces..
Lease Status URL: http://127.0.0.1:6789
Listening On: 192.168.2.20
DHCPDISCOVER for 00:30:de:ff:00:5a <PFC200-FF005A> from interface 192.168.2.20 received
Host 00:30:de:ff:00:5a <PFC200-FF005A> offered 192.168.2.200
DHCPPREQUEST for 00:30:de:ff:00:5a <PFC200-FF005A> from interface 192.168.2.20 received
Host 00:30:de:ff:00:5a <PFC200-FF005A> allotted 192.168.2.200 for 10 seconds
```

Figure 29: “Open DHCP”, Example Figure

In conjunction with the DNS server associated with DHCP, the device can be reached using its host name.

This name consists of the prefix “PFCx00-“ and the last six places of the MAC address (in the example shown here: “00:30:DE:FF:00:5A”). The MAC address of the device can be printed on the label on the side of the device.

The host name of the device in the example shown here is thus “PFC200-FF005A”.

7.3.2 Changing an IP Address Using the “CBM” Configuration Tool via the Serial Interface

You can also assign a new IP address to the ETHERNET interfaces X1 and X2 using the “CBM” configuration tool provided on the Linux[®] console. More information about “CBM” is given in the Section “Configuration.”

1. Link a PC to the X3 serial interface using a terminal program.
2. Log in to the Linux[®] system as a “super user.”
The user name and the password are provided in the Section “Users and Passwords” > “Linux[®] User Group.”
3. Start the configuration tool by entering the command “cbm” on the command line and then press **[Enter]**.

```
=====
WAGO Console Based Management Tool
=====
Main Menu
-----
0. Quit
1. Information
2. PLC Runtime
3. Networking
4. Firewall
5. Clock
6. Administration
7. Package Server
8. Mass Storage
9. Software Uploads
10. Ports and Services
11. SNMP
12. PROFIBUS DP
-----
Select an entry or Q to quit
-----
```

Figure 30: CBM Starting Screen

4. In the **Main menu** use the keyboard (arrow keys or numeric keypad) to move to and select **Networking** and then press **[Enter]**.

```
=====
WAGO Console Based Management Tool
=====
Main Menu
-----
0. Quit
1. Information
2. PLC Runtime
3. Networking
4. Firewall
5. Clock
6. Administration
7. Package Server
8. Mass Storage
9. Software Uploads
10. Ports and Services
11. SNMP
12. PROFIBUS DP
-----
Select an entry or Q to quit
-----
```

Figure 31: CBM – Selecting “Networking”

5. In the **Networking** menu select **TCP/IP** and press **[Enter]**.

```
=====
WAGO Console Based Management Tool
=====
Networking
-----
0. Back to Main Menu
1. Host-/Domain Name
2. TCP/IP
3. Ethernet
-----
Select an entry or Q to quit
-----
```

Figure 32: CBM – Selecting “TCP/IP”

6. In the menu **TCP/IP** select **IP Address** and press **[Enter]**.

```
=====
WAGO Console Based Management Tool
=====
TCP/IP
-----
0. Back to Networking Menu
1. IP Address
2. Default Gateway
3. DNS Server
-----
Select an entry or Q to quit
-----
```

Figure 33: CBM – Selecting “IP address”

7. In the menu **TCP/IP Configuration** select **IP Address** and press **[Enter]**.

```
=====
WAGO Console Based Management Tool
=====
TCP/IP Configuration of X1
-----
0. Back to TCP/IP Menu
1. Type of IP Address Configuration....Static IP
2. IP Address.....192.168.1.18
3. Subnet Mask.....255.255.255.0
-----
Select an entry or Q to quit
-----
```

Figure 34: CBM – Selecting the IP Address

8. In the menu **Change IP Address** enter the new IP address and confirm by clicking **[OK]**. If you want to return to the main menu without making changes, click **[Abort]**.

```
=====
WAGO Console Based Management Tool
=====
Main Menu
-----
0. Quit
1. Information
2. PLC Runtime
3. Networking
4. Firewall
5. Clock
6. Administration
7. Package Server
8. Mass Storage
9. Software Uploads
10. Ports and Services
11. SNMP
12. PROFIBUS DP
-----
Select an entry or Q to quit
-----
WAGO Console Based Management Tool
=====
Change IP Address
-----

Enter new IP Address:
+-----+
|192.168.1.17 |
+-----+

< OK >    <Abort>

-----
OK: confirm value, Abort: quit without changes
-----
```

Figure 35: CBM – Entering a New IP Address

7.3.3 Changing an IP Address using “WAGO Ethernet Settings”

The Microsoft Windows[®] application “WAGO Ethernet Settings” is a software used to identify the controller and configure network settings.

Note

**Observe the software version!**

To configure the controller use at least Version 6.4.1.1 dated 2015-06-29 of “WAGO Ethernet Settings”!

You can use WAGO communication cables or WAGO radio adapters or even the IP network for data communication.

1. Switch off the power supply to the controller.
2. Connect the 750-920 communication cable to the Service interface on the controller and to a serial interface of your PC.
3. Switch the power supply to the controller on again.
4. Start the “WAGO Ethernet Settings” program.

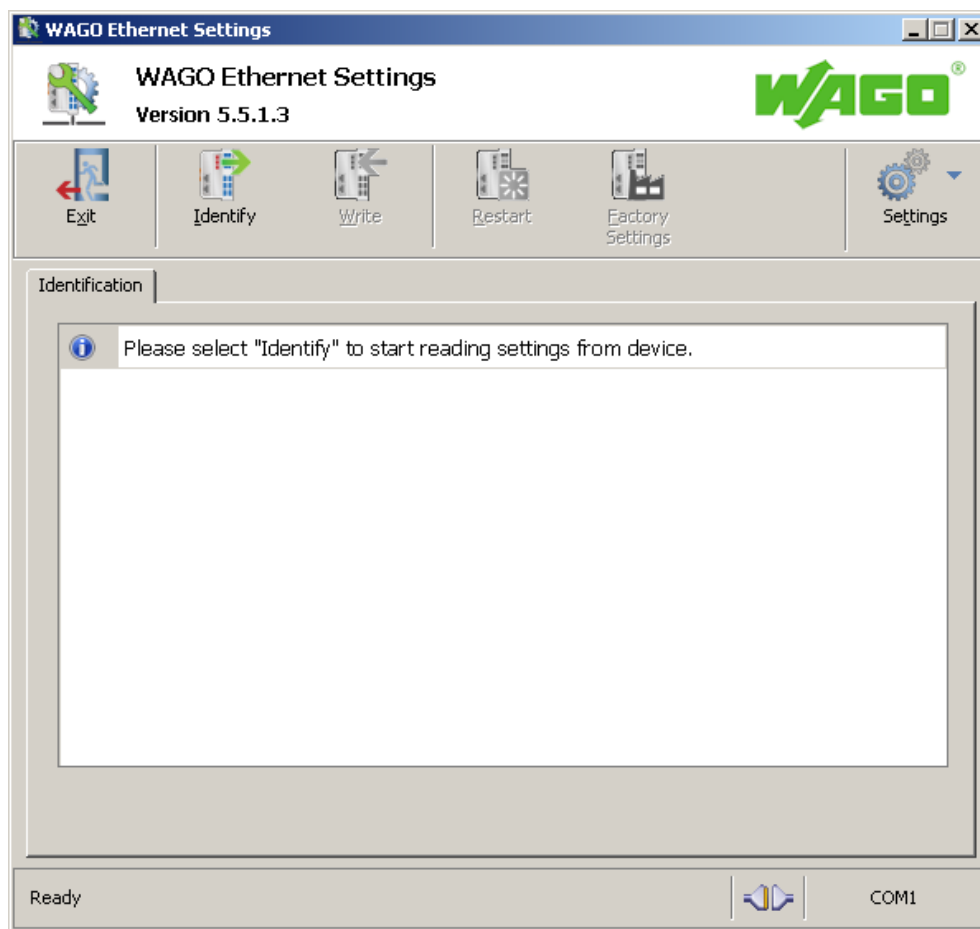


Figure 36: “WAGO Ethernet Settings” – Starting Screen (Example)

5. Click **[Identify]** to read in and identify the connected controller.
6. Select the “Network” tab:

Parameter	Edit	Currently used
Address Source	Static Configuration	Static Configuration
IP address	192.168.1.17	192.168.1.17
Subnet Mask	255.255.255.0	255.255.255.0
Gateway	192.168.1.2	192.168.1.2
Preferred DNS-Server	192.168.1.2	192.168.1.2
Alternative DNS-Server	0.0.0.0	0.0.0.0
Time Server	192.168.1.50	192.168.1.50
Hostname		PFC200-FF009B
Domain name		
DIP-Switch IP address	DST not supported!	DST not supported!

Figure 37: “WAGO Ethernet Settings” – “Network” Tab

7. To assign a fixed address, select “Static configuration” on the “Source” line under “Input”. DHCP is normally activated as the default setting.
8. In the column “Input” enter the required IP address and, if applicable, the address of the subnet mask and of the gateway.
9. Click on **[Write]** to accept the address in the controller. (If necessary, “WAGO Ethernet Settings” will restart your controller. This action may require about 30 seconds.)
10. You can now close “WAGO Ethernet Settings”, or make other changes directly in the Web-based Management system as required. To do this, click on **[WBM]** at the right in the window.

7.3.4 Temporarily Setting a Fixed IP Address

This procedure temporarily sets the IP address for the X1 interface to the fixed address “192.168.1.17”.

When the switch is enabled, the fixed address is also used for interface X2.

When the switch is disabled, the original address setting for interface X2 is not changed.

No reset is performed.

To make this setting, set the mode selector switch to STOP and press and hold the Reset button (RST) for longer than 8 seconds.

Execution of the setting is signaled by the “SYS” LED flashing orange.

To cancel this setting, perform a software reset or switch off the controller and then switch it back on.

7.4 Testing the Network Connection

Carry out a ping network function to check whether you can reach the controller at the IP address you have assigned in the network.

1. Open the MS DOS prompt window.
To do this, enter the command “cmd” in the input field under **Start > Execute...** > **Open:** (Windows® XP) or **Start > Search programs/files** (Windows® 7) and then click **[OK]** or press **[Enter]**.
2. In the MS DOS window, enter the command “ping” and the IP address of the controller (for example, ping 192.168.1.17) and then press **[Enter]**.

Note



Host entries in the ARP table!

It may also be useful to delete the current host entries in the ARP table with the command “arp -d *” before executing the “ping” command (as administrator in Windows® 7). This ensures that older entries will not impair the success of the “ping” command.

3. Your PC sends out a query that is answered by the controller. This reply appears in the MS DOS prompt window. If the error message “Timeout” appears, the controller has not responded properly. You then need to check your network settings.

```
C:\WINDOWS\system32\cmd.exe
U:\>ping 192.168.1.17

Ping wird ausgeführt für 192.168.1.17 mit 32 Bytes Daten:

Antwort von 192.168.1.17: Bytes=32 Zeit=1ms TTL=64
Antwort von 192.168.1.17: Bytes=32 Zeit<1ms TTL=64
Antwort von 192.168.1.17: Bytes=32 Zeit<1ms TTL=64
Antwort von 192.168.1.17: Bytes=32 Zeit<1ms TTL=64

Ping-Statistik für 192.168.1.17:
    Pakete: Gesendet = 4, Empfangen = 4, Verloren = 0 (0% Verlust),
    Ca. Zeitangaben in Millisek.:
        Minimum = 0ms, Maximum = 1ms, Mittelwert = 0ms
U:\>
```

Figure 38: Example of a Function Test

4. If the test is completed successfully, close the MS DOS window.

7.5 Changing Standard Passwords



Note

Change passwords

The standard passwords are documented in these instructions and therefore do not offer adequate protection! Change the passwords to meet your particular needs!

To increase security all passwords should contain a combination of lower case letters (a ... z), upper case letters (A ... Z), numbers (0 ... 9), spaces and special characters: (!"#\$%&'()*+,-./:;<=>?@[\\^_`{|}~). Passwords should not contain generally known names, dates of birth and other information that is easy to guess.

Therefore change the standard passwords before commissioning the controller. Standard passwords are issued for the user groups "WBM Users" and "Linux[®] Users."

The table in the Section "Function Description" > ... > "Users and Passwords" > "WBM Users Group" shows the standard passwords for the WBM users. Proceed as follows to change these passwords:

1. Connect the controller to a PC via one of the network interfaces (X1, X2).
2. Start a web browser program on the PC and call up the WBM of the controller.
3. Log in on the controller as "admin" user with the standard password.
4. Change the password for all users on the WBM "Configuration of the users for the WBM" page.
5. Select each user and enter a new password and confirm it.

The table in the Section "Functional Description" > ... > "Users and Passwords" > "Linux[®] Users Group" shows the standard passwords for the Linux[®] users. Proceed as follows to change these passwords:

1. Connect the controller to a PC via the serial interface (X3).
2. Start a terminal program on the PC.
3. Log in on the controller as user "root" with the standard password.
4. Change the password for all users with the "passwd root," "passwd admin" and "passwd user" commands.

7.6 Shutdown/Restart

Switch off the power supply to shut down the controller.

To perform a controller restart, press the Reset button as described in the Section “Triggering Reset Functions” > “Software Reset (Restart).”

Alternatively, you can switch off the controller and switch it back on again.

Note



Do not power cycle the controller after changing any parameters!

Some parameter changes require a controller restart for the changes to apply.

Saving changes takes time.

Do not power cycle the controller to perform a restart, i.e., changes may be lost by shutting down the controller too soon.

Only restart the controller using the software reboot function. This ensures that all memory operations are completed correctly and completely.

7.7 Initiating Reset Functions

You can initiate various reset functions using the mode selector switch and the Reset button (RST).

7.7.1 Warm Start Reset

The warm start reset function depends on the activated runtime system (CODESYS 2 or *e!RUNTIME*).

7.7.1.1 CODESYS 2 Runtime System

The CODESYS 2 application is reset on a warm start reset. This corresponds to the WAGO I/O PRO IDE “Reset” command.

To perform a warm start reset, set the mode selector switch to "Reset" and hold it there for two to seven seconds.

Execution of the reset is signaled by the red “RUN LED” briefly going out when the mode selector switch is released.

7.7.1.2 *e!RUNTIME* Runtime System

All *e!RUNTIME* applications are reset with a warm start reset. All global data is set to its initialization values. This corresponds to the *e!COCKPIT* IDE “Reset warm” command.

To perform a warm start reset, set the mode selector switch to "Reset" and hold it there for two to seven seconds.

Execution of the reset is signaled by the red “RUN LED” briefly going out when the mode selector switch is released.

7.7.2 Cold Start Reset

The cold start reset function depends on the activated runtime system (CODESYS 2 or *e!RUNTIME*).

7.7.2.1 CODESYS 2 Runtime System

On a cold start reset the CODESYS 2 application is reset and the memory containing the retain variables is cleared.

This corresponds to the WAGO I/O PRO IDE “Reset (Cold)” command.

To perform a cold start reset, set the mode selector switch to “Reset” and hold it there for more than seven seconds.

Execution of the reset is signaled after seven seconds by the “RUN” LED going out for an extended period. You can then release the mode selector switch.

7.7.2.2 *e!RUNTIME* Runtime System

All *e!RUNTIME* applications are reset with a cold start reset. All global data and the retain variables are set to their initialization values.
This corresponds to the *e!COCKPIT* IDE “Reset Cold” command.

To perform a cold start reset, set the mode selector switch to “Reset” and hold it there for more than seven seconds.
Execution of the reset is signaled after seven seconds by the “RUN” LED going out for an extended period. You can then release the mode selector switch.

7.7.3 Software Reset

The controller is restarted on a software reset.

To perform a software reset, set the mode selector switch to RUN or STOP and then press the Reset button (RST) for one to eight seconds.
All LEDs will light up briefly in green to signal reset completion.

7.8 Configuration

The following methods are available for configuring the controller:

- Access to the Web-based management system via the PC using an Internet browser (“Configuration using Web-Based Management (WBM)”)
- Access to the “Console-Based Management” system (CBM) via the PC using a terminal program (via ETHERNET and/or RS-232 interface) (“Configuration using a Terminal Program”)
- Access via the CODESYS PLC program using the WagoConfigToolLIB.lib library (“Appendix” > “WagoConfigToolLIB.lib”)
- Access via the PC using “WAGO Ethernet Settings” (“Configuration using 'WAGO Ethernet Settings'”).

The CBM basically provides the same parameters for configuration of the controller as the WBM, except for parameters which cannot be represented in a useful manner in a terminal window.

For an explanation of these parameters refer to the sections starting at “Information' Page”.

7.8.1 Configuration via Web-Based-Management (WBM)

The HTML pages (from here on referred to as “pages”) of the Web-Based Management are used to configure the controller. Proceed as follows to access the WBM using an Internet browser:

1. Connect the controller to the ETHERNET network via the ETHERNET interface X1.
2. To access the pages, enter the controller's IP address in the address line of your browser followed by “/wbm,” e.g., “http://192.168.1.17/wbm.” Note that the PC and the controller must be located within the same subnet (see Section “Setting an IP Address”). If you do not know the IP address and cannot determine it, switch the controller to the pre-set address “192.168.1.17” using the “Fixed IP address” function (see Section “Initiate Reset Functions” > “Set Fixed IP Address”).

If you have installed a DHCP server on your PC and would like to access WBM through DHCP, use the other interface. You can find detailed information about this in the section “Assigning an IP Address Using DHCP.”

Note



Displaying the Controller Start Page

If the controller does not display the start page, ensure that your Internet browser settings permit the bypassing of the proxy server for local addresses. Also check whether your PC is located in the same subnet as the controller.

Note



Take usage by the CODESYS program into account

If the controller is at capacity due to a CODESYS program, this may result in slower processing in the WBM. As a result, timeout errors are sometimes reported in some circumstances. It is therefore important to stop the CODESYS application prior to performing complicated configurations using WBM.

Some pages of the WBM are accessible only for certain users. They are only displayed if you have logged into the WBM. You can access the login form via the “Login” link. Pages which cannot be accessed with your current user name are already grayed out in the navigation. You can nevertheless select the entries in the navigation bar and are then routed directly to the login form.

As soon as you have logged in, your current user name is displayed in the header of the WBM. By clicking the “Logout” link you can log out again and then log in again with a different user name. When using the WBM without logging in, you are granted “Guest” access rights.

You must be logged into the WBM in order to have write or read access to (most) parameters. This is checked with every access to the device.

If you have disabled cookies in your browser, you can continue to use the WBM as long as you move directly inside it. However, if you fully reload the website (e.g., with F5), you must log in again since the browser is then not able to store the data of your login session.

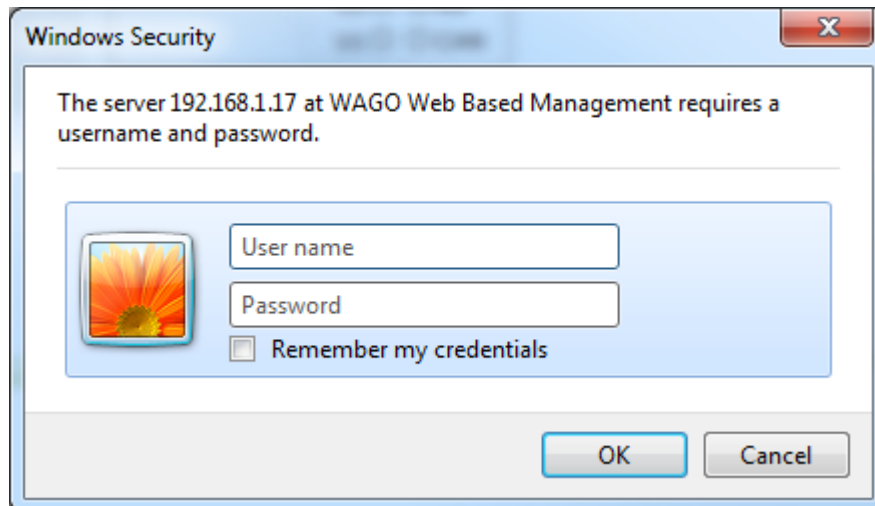


Figure 39: Entering Authentication

7.8.1.1 WBM User Administration

To allow settings to be made only by a select number of users, limit access to WBM functions through User Administration.



Note

Change passwords

The standard passwords are documented in these instructions and thus do not offer adequate protection. Change the passwords to meet your particular needs. See Section “Administration - Users Page.”

If you do not change these passwords, a warning will appear each time you call up a website after logging in.

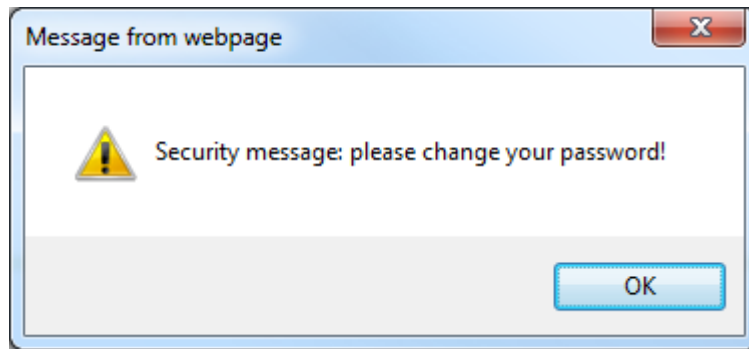


Figure 40: Password Reminder

Table 38: User Settings in the Default State

Users	Password
user	user
admin	wago



Note

Observe access rights

Users in WBM are authorized exclusively for access to websites. User administration for controller applications is configured separately.

Access to the WBM pages is as follows:

Table 39: Access Rights for WBM Pages

Navigation	WBM page	User
Information	Status Information	guest
PLC Runtime		
– Information	PLC Runtime Information	guest
– General Configuration	General PLC Runtime Configuration	user
– WebVisu	PLC WebVisu	guest
Networking		
– Host/Domain Name	Configuration of Host and Domain Name	user
– TCP/IP	TCP/IP Configuration	user
– Ethernet	Ethernet Configuration	user
Firewall		
– General Configuration	General Firewall Configuration	user
– MAC Address Filter	Configuration of MAC Address Filter	user
– User Filter	Configuration of User Filter	user
Clock	Configuration of Time and Date	user
Administration		
– Users	Configuration of the users for the Web-based Management	admin
– Create Image	Create bootable Image	admin
– Serial Interface	Configuration of Serial Interface RS233	admin
– Service Interface	Configuration of Service Interface	admin
– Reboot	Reboot Controller	admin
Package Server		
– Firmware Backup	Firmware Backup	admin
– Firmware Restore	Firmware Restore	admin
– System Partition	System Partition	admin
Mass Storage	Mass Storage	admin
Software Uploads	Software Uploads	admin
Ports and Services		
– Network Services	Configuration of Network Services	user
– NTP Client	Configuration of NTP Client	user
– PLC Runtime Services	Configuration of PLC Runtime Services	user
– SSH	SSH Server Settings	user
– TFTP	TFTP Server	user
– DHCP	DHCP Configuration	user
– DNS	Configuration of DNS Service	user
– MODBUS	MODBUS Services Configuration	user
SNMP		
– General Configuration	Configuration of general SNMP parameters	admin
– SNMP v1/v2c	Configuration of SNMP v1/v2c parameters	admin
– SNMP v3	Configuration of SNMP v3 Users	admin
Diagnostic	Diagnostic Information	guest

Table 39: Access Rights for WBM Pages

Navigation	WBM page	User
Modem	Configuration of internal 3G Modem	admin
OpenVPN / IPsec	Configuration of OpenVPN / IPsec	admin

7.8.1.2 General Information about the Page

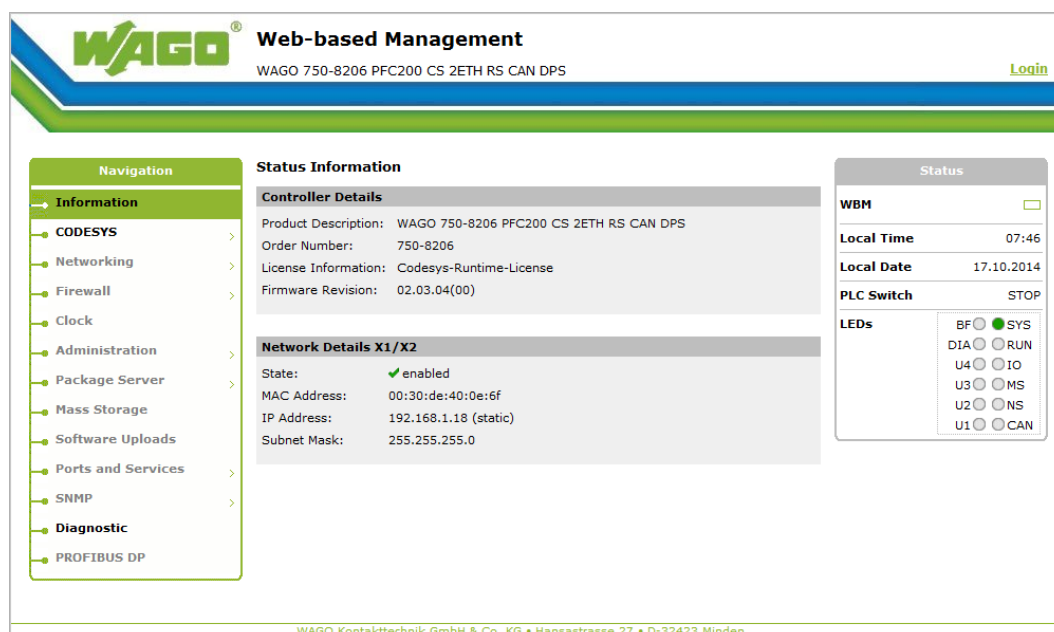


Figure 41: WBM Browser Window (Example)

The device name is displayed in the header of the browser window. When the user has logged out, a **[Login]** button is displayed on the right in the header line, when logged in a **[Logout]** button is displayed.

The navigation tree is shown on the left of the browser window. You can use this navigation tree to go to the individual pages and, where provided, subpages included in these pages. Some pages can only be called after a successful login. To log in click the **[Login]** button and enter the user name and password in the login window.

A status area with the following elements is displayed on the right:

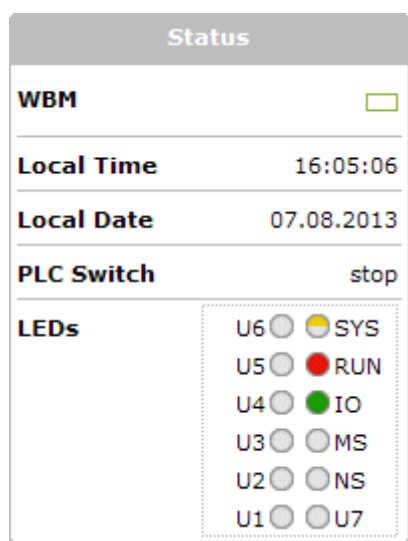


Figure 42: WBM Status Information (Example)

- **WBM status:**
This indicates whether the WBM is currently communicating with the device in the background. In other words, one or more requests have been sent and the browser is waiting for a response. Movement is then visible in the graphic. This occurs when data is read on initial call-up of the page, when the user has sent off a change form or when data is reloaded automatically in cycles, e.g., the contents of the status area.
- **Local Time:**
Local time on the device
- **Local Date:**
Local date on the device
- **PLC Switch:**
Setting of the mode selector switch
- **LEDs:**
This indicates the status of the device LEDs. All LEDs are graphically represented and are labeled with their particular designation (e.g., SYS, RUN, ...). The following colors are possible:
 - gray:
LED is off.
 - full color (green, red, yellow, orange):
The LED is activated in the particular color.
 - half color:
The LED is flashing in the corresponding color. The other half of the surface is then either gray or also colored. The latter case indicates that the LED is flashing sequentially in different colors.

A tooltip containing more detailed information opens as long as the cursor is positioned over an LED. The text that is displayed also contains the message that put the LED into its current status. The time of the message is also shown.

The states displayed in the WBM will not always correspond at the precise time to those on the controller. Data has a runtime during transmission and can only be queried at a certain interval. The time period between two queries is 30 seconds.

The contents of the individual pages and sub-pages are explained in the following sections.



Note

Do not power cycle the controller after changing any parameters!

Some parameter changes require a controller restart for the changes to apply.

Saving changes takes time.

Do not power cycle the controller to perform a restart, i.e., changes may be lost by shutting down the controller too soon.

Only restart the controller using the software reboot function. This ensures that all memory operations are completed correctly and completely.

7.8.1.3 “Status Information” Page

The following tables explain the parameters listed on this page:

7.8.1.3.1 “Controller Details” Group

This group displays the properties of the controller.

Table 40: WBM “Status Information” Page – “Controller Details” Group

Parameter	Explanation
Product Description	Controller identification
Order Number	Item number of the controller
License Information	Notification that the CODESYS runtime system is available
Firmware Revision	Firmware status

7.8.1.3.2 “Network Details (Xn)” Group(s)

This group displays the network and interface properties of the controller.

If the switch is enabled, one group (“Network Details X1/X2”) is shown for both connections.

If the switch is disabled, a separate group (“Network Details X1” / “Network Details X2”) is shown for each connection.

Table 41: WBM “Status Information Page – “Network Details (Xn)” Group(s)

Parameter	Explanation
State	Status of the ETHERNET interface (enabled/disabled)
Mac Address	MAC address identifies and addresses the controller
IP Address	Current IP address of the controller and (in brackets) the reference type (static/bootp/dhcp)
Subnet Mask	Current subnet mask of the controller

7.8.1.4 “General PLC Runtime Configuration” Page

The settings for the boot project created with the programming software are given on the “General PLC Runtime Configuration” page.

7.8.1.4.1 “General PLC Runtime Configuration” Group

Table 42: WBM “General PLC Runtime Configuration” Page – “General PLC Runtime Configuration” Group

Display Fields	Explanation	
PLC runtime version	Select here the PLC runtime system to be enabled.	
	None	No runtime system is enabled.
	CODESYS 2	CODESYS 2 runtime system is enabled.
	<i>e!RUNTIME</i>	<i>e!RUNTIME</i> runtime system is enabled.
Home directory on memory card enabled	Define if the home directory for the runtime system should be moved to the memory card.	
	Disabled	The home directory is stored in the internal memory.
	Enabled	The home directory is moved to the memory card.

Note



All data is deleted when switching the runtime system!

When the runtime system is changed, all data of the current runtime system is deleted! This is the same as the runtime system function “Reset Original”.

Note



Insert a memory card before switching the home directory!

When moving the home directory to the memory card, insert a memory card formatted to support file system. Only the first partition of a memory card can be accessed at /media/sd and can be used as the home directory.

Note



Perform a reset before switching the home directory!

Stop IEC-61131 applications in use before switching the home directory of the runtime system.

Restore the device to its initial state using the “Reset” function. Any boot project is deleted.

Click [Submit] to apply the change.

The runtime system change is effective immediately.

The home directory change only takes effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.5 “PLC Runtime Information” Page

All information about the enabled runtime system and PLC program created in the programming software is provided on the “PLC Runtime Information” page.

7.8.1.5.1 “PLC Runtime” Group

Table 43: WBM “PLC Runtime Information” Page – “PLC Runtime” Group

Display Fields	Explanation	
Version	The version of the currently activated runtime system is shown here. If the runtime system is disabled, “None” is displayed and the subsequent fields of this group are disabled.	
Web Server Version	This shows the version number of the web server. This field is only visible when CODESYS 2 is enabled as the runtime system.	
State	The PLC operating state is shown. This field is only visible when CODESYS 2 is enabled as the runtime system.	
	STOP	PLC program is not executed.
	RUN	PLC program is executed.
Number of Tasks	The number of tasks in the PLC program is shown. This field is only visible when CODESYS 2 is enabled as the runtime system.	

7.8.1.5.2 “Project Details” Group

This group is only visible if CODESYS 2 is enabled as the runtime system.

Table 44: WBM “PLC Runtime Information” Page – “Project Details” Group

Display Fields	Explanation
Date	Display of project information that the programmer entered in the PLC program (in programming software under Project > Project Information...).
Title	
Version	The information only appears when a PLC program is run. Descriptive texts up to 1024 characters long are given under “Description.”
Author	
Description	

7.8.1.5.3 “Task n” Group(s)

This group is only visible if CODESYS 2 is enabled as the runtime system.

One dedicated group is displayed for each task when the PLC program is executed. As a rule, only the group title is displayed with the task number, the task name and the task ID.

Click [+] to expand the group and display the following information.

Table 45: WBM “PLC Runtime Information” Page – “Task n” Group(s)

Display Field	Explanation
Cycle count	Number of task cycles since the system start
Cycle time (µsec)	Currently measured task cycle time for the task
Cycle time min (µsec)	Minimum task cycle time for the task since the system start
Cycle time max (µsec)	Maximum task cycle time for the task since the system start
Cycle time avg (µsec)	Average task cycle time since the system start
Status	Task status (e.g., RUN, STOP)
Mode	Task execution mode (e.g., in cycles)
Priority	Set task priority
Interval (msec)	Set task interval

To hide this information, click [-].

7.8.1.6 “PLC WebVisu” Page

The settings for the web visualization created in the runtime system are shown on the “PLC WebVisu” page.

7.8.1.6.1 “Web Server Configuration” Group

Table 46: WBM “PLC WebVisu” Page – “Web Server Configuration” Group

Display Fields	Explanation	
CODESYS 2 Webserver State	This indicates the status (enabled/disabled) of the CODESYS 2 web server.	
<i>e!RUNTIME</i> Webserver State	This indicates the status (enabled/disabled) of the <i>e!RUNTIME</i> web server.	
Default Webserver	Choose here whether the Web-based Management or web visualization of the runtime system should be displayed when only entering the IP address of the controller.	
	Web-based Management	The Web-based Management is displayed.
	Web-Visu	The web visualization of the runtime system is displayed.

Click [**Submit**] to apply change. The change is effective immediately.

In its default setting, the WBM is called up when only entering the IP address.

To update the display after switching, enter the IP address again in the address line of the web browser.

To display the web visualization, the web server must be enabled (in WBM under “Ports and Services” -> “PLC Runtime Services”) and there must be a suitably configured application.

Regardless of the default web browser setting, the WBM can be called up at any time with “http://<IP address>/wbm” and the web visualization with “http://<IP address>/webvisu.”

You can obtain additional information on CODESYS 2 web visualization in the section of the same name.



Note

Possible error messages when calling up the web visualization

The “500 – Internal Server Error” message indicates that the web server is not enabled.

A page with the header “WebVisu not available” means that no application has been loaded in the controller using web visualization.

7.8.1.7 “Configuration of Host and Domain Name” Page

The settings for the general TCP/IP parameters are found on the “Configuration of Host and Domain Name” page.

7.8.1.7.1 “HostName” Group

Table 47: WBM “Configuration of Host and Domain Name” Page – “Hostname” Group

Parameters	Explanation
Currently used	If you have selected dynamic assignment of an IP address via DHCP, the name of the host currently being used is displayed.
Configured	Enter here the hostname of your controller to be used if the network interface is changed to a static IP address or if no hostname is transmitted with a DHCP response.

Click **[Submit]** to apply the change. The change is effective immediately.

If a hostname is supplied via a DHCP response, this is enabled in the system. If there are several network interfaces with DHCP always the last received hostname is valid.

If only the hostname configured here is to be valid, the configuration of the DHCP server must be adapted so that no hostnames are transferred in the DHCP response.

7.8.1.7.2 “Domain Name” Group

Table 48: WBM “Configuration of Host and Domain Name” Page – “Domain Name” Group

Parameters	Explanation
Currently used	The domain name currently used is displayed. It may differ from the configured domain name if you have selected dynamic assignment of an IP address via DHCP or BootP.
Configured	Enter the domain name. The default entry is “localdomain.lan”.

Click **[Submit]** to apply the change. The change is effective immediately.

If a domain name is supplied via a DHCP response, this is enabled in the system. If there are several network interfaces with DHCP, the last received domain name is always valid.

If only the domain name configured here is to be valid, the configuration of the DHCP server must be adapted so that no domain names are transferred in the DHCP response.

7.8.1.8 “TCP/IP Configuration” Page

The TCP/IP settings for the ETHERNET interfaces are shown on the “TCP/IP configuration” page.

7.8.1.8.1 “IP Configuration (Xn)” Group(s)

If the switch is enabled, one group (“IP Configuration”) is shown for both connections.

If the switch is disabled, a separate group (“IP Configuration X1” / “IP Configuration X2”) is shown for each connection.

Table 49: WBM “TCP/IP Configuration” Page – “IP Configuration (Xn)” Group(s)

Parameters	Explanation	
Configuration Type	Select a static or dynamic IP address.	
	Static IP	Static IP addressing
	DHCP	Dynamic IP addressing
	BootP	Dynamic IP addressing
IP Address	Enter here a static IP address. This is enabled if “Static IP” is enabled in the Configuration Type field.	
Subnet Mask	Enter the subnet mask. This is enabled if “Static IP” is enabled in the Configuration Type field.	

Click [**Submit**] to apply changes. The changes are effective immediately.

7.8.1.8.2 “Default Gateway n” Groups

You can configure two default gateways. The controller transmits all network data not going to a station on the local network to a default gateway. First the gateway with the lowest metric is addressed. If this is not reached, the second gateway is used. The selection is random if the metric is the same.

A default gateway can also be configured via DHCP. These default gateways are given the metric 10, by which they are normally used before the static gateways.

Table 50: WBM “TCP/IP Configuration” Page – “Default Gateway n” Group

Parameters	Explanation	
Gateway enabled	Set here whether the selected default gateway is to be used.	
	Disabled	The default gateway is not used.
	Enabled	The default gateway is used.
Gateway Address	Enter the address of the default gateway.	
Gateway Metric	Set here a number as the metric. With multiple default gateways, the metric defines the gateway to which data packets are first sent. Priority is given to the gateway with the lower metric. The default value for the metric is 20. The lowest value is 0. The highest value is 4.294.967.295.	

Click **[Submit]** to apply the change. The change is effective immediately.

7.8.1.8.3 “DNS Server” Group

Table 51: WBM “TCP/IP Configuration” Page – “DNS Server” Group

Parameters	Explanation
Configured: None/ DNS Server n	The addresses of the defined DNS servers are displayed. If no server has been defined, “Configured: None” is displayed.
New Server IP	Add additional DNS addresses.
Additionally used (assigned by DHCP)	The DNS servers assigned if necessary by DHCP (or BootP) are displayed. If no DNS server has been assigned by DHCP (or BootP), “none” is displayed.

Click **[Delete]** to remove the selected DNS server. The change is effective immediately.

Click **[Add]** to add the entered DNS server. The change is effective immediately.

7.8.1.9 “Ethernet Configuration” Page

The settings for Ethernet TCP/IP are located on the “Ethernet Configuration” page.

7.8.1.9.1 “Switch Configuration” Group

Table 52: WBM “Ethernet Configuration” Page – “Switch Configuration” Group

Parameter	Explanation	
Interfaces	Enable or disable the switch.	
	Switched	Both interfaces are operated with one IP address.
	Separated	Each interface is operated with its own IP address.
Port Mirror	Enable or disable the mirroring of the data traffic between the ports.	
	None	Both Ethernet ports operating normally.
	X1	The entire data traffic between X1 and the PFC system is mirrored at port X2.
	X2	The entire data traffic between X2 and the PFC system is mirrored at port X1.
Fast Aging enabled	Set here the aging time of unused entries in the list of MAC addresses with a port assignment to external network stations.	
	Disabled	An unused address entry becomes obsolete after 200 seconds.
	Enabled	An unused address entry becomes obsolete after 800 microseconds.
Broadcast Protection	Set here the broadcast limit for protection against overloads.	
	Disabled	No limitation of broadcast packets.
	1 % ... 5 %	Limitation of incoming broadcast packets to the selected percentage of the total possible data throughput (10/100Mbit).
Rate Limit	Set here the basic limitation of the incoming data traffic.	
	Disabled	No limitation of the incoming data traffic
	64 kbps ... 99 mbps	Limitation of the incoming data traffic to the entered value

Click [**Submit**] to apply the change. The change is effective immediately.

7.8.1.9.2 “Interface Xn” Groups

One group (“Interface X1” / “Interface X2”) is displayed for each connection.

Table 53: WBM “Ethernet Configuration” Page – “Interface Xn” Groups

Parameter	Explanation	
Enabled	You can enable or disable the interface.	
Autonegotiation on	When Autonegotiation is enabled, the connection modalities are negotiated automatically with the peer devices.	
Speed/Duplex	Select the transmission speed and the duplex method:	
	10 Mbit half-duplex	Information can only be sent or received.
	100 Mbit half-duplex	
	10 Mbit full-duplex	Information can be sent and received simultaneously.
	100 Mbit full-duplex	

Click **[Submit]** to apply changes. The changes are effective immediately.

7.8.1.10 “General Firewall Configuration” Page

7.8.1.10.1 “Global Firewall Parameters” Group

Table 54: WBM “General Firewall Configuration” Page – “Global Firewall Parameters” Group

Parameters	Explanation
Firewall enabled entirely	Enables/disables the complete functionality of the firewall. This setting has the highest priority. If the firewall is disabled, all other settings have no direct effect. The configuration of the other parameters is possible nevertheless so that you can set the firewall parameters correctly before you enable the firewall.
ICMP echo broadcast protection	Enable or disable the “ICMP echo broadcast” protection.
Max. UDP connections per second	You can specify the maximum number of UDP connections per second.
Max. TCP connections per second	You can specify the maximum number of TCP connections per second.

Click **[Submit]** to apply the change. The change is effective immediately.

7.8.1.10.2 “Firewall Parameters Interface Xn” Group

These settings in this group refer to the configuration of the firewall at IP level.

Table 55: WBM “General Firewall Configuration” Page – “Firewall Parameter Interface Xn” Group

Parameters	Explanation	
Firewall enabled for Interface	Enable or disable the firewall for the specific interface.	
ICMP echo protection	Enable or disable the “ICMP echo” protection for the respective interface.	
ICMP echo limit per second	You can specify the maximum number of “ICMP echo bursts” per second.	
Service enabled	Telnet	<p>Enable or disable the firewall for the respective service.</p> <p>The services themselves must be enabled or disabled separately on the “Ports and Services” page.</p>
	FTP	
	FTPS	
	HTTP	
	HTTPS	
	I/O-CHECK	
	PLC Runtime	
	PLC WebVisu – direct link (port 8080)	
	SSH	
	TFTP	
	BootP/DHCP	
	DNS	
	MODBUS TCP	
	MODBUS UDP	
	SNMP	

Click **[Submit]** to apply the change. The change is effective immediately.

7.8.1.10.3 “Firewall Parameter Interface VPN” Group

These settings in this group refer to the configuration of the firewall at IP level.

Table 56: WBM “General Firewall Configuration” Page – “Firewall Parameter Interface VPN” Group

Parameters	Explanation
Firewall enabled for Interface	Enable or disable the firewall for the VPN interface.
ICMP echo protection	Enable or disable the “ICMP echo” protection for the VPN interface.
ICMP echo limit per second	You can specify the maximum number of “ICMP echo bursts” per second.
Service enabled	Telnet
	FTP
	FTPS
	HTTP
	HTTPS
	I/O-CHECK
	PLC Runtime
	PLC WebVisu – direct link (port 8080)
	SSH
	TFTP
	BootP/DHCP
	DNS
	MODBUS TCP
	MODBUS UDP
	SNMP

Enable or disable the firewall for the respective service.
The services themselves must be enabled or disabled separately on the “Ports and Services” page.

Click [**Submit**] to apply the change. The change is effective immediately.

7.8.1.11 “Configuration of MAC Address Filter” Page

You set the firewall configuration at ETHERNET level on this page.

The “MAC Address Filter Whitelist” contains a default entry with the following values:

MAC address: 00:30:DE:00:00:00
MAC mask: ff:ff:ff:00:00:00

If you enable the default entry, this already allows communication between different WAGO devices in the network.

Note



Enable the MAC address filter before activation!

Before activating the MAC address filter, you must enter and activate your own MAC address in the “MAC Address Filter Whitelist.”

Otherwise you cannot access the device via the ETHERNET. This also applies to other services that are used by your device, e.g., the IP configuration via DHCP. If the “MAC Address Filter Whitelist” does not contain the MAC address of your DHCP server, your device will lose its IP settings after the next refresh cycle and is then no longer accessible.

If the “MAC Address Filter Whitelist” does not contain an entry, the activation of the filter is prevented.

If at least one activated address is entered, you will receive an appropriate warning before activation, which you have to acknowledge.

The check described above is only performed in the WBM but not in the CBM!

7.8.1.11.1 “Global MAC Address Filter State” Group

Table 57: WBM “Configuration of MAC Address Filter” Page – “Global MAC Address Filter State” Group

Parameters	Explanation
Filter enabled	Enable or disable the global MAC address filter here.

Click [Submit] to apply change. The change is effective immediately.

7.8.1.11.2 “MAC Address Filter State Xn” Group

Table 58: WBM “Configuration of MAC Address Filter” Page – “MAC Address Filter State Xn” Group

Parameters	Explanation
Filter enabled	Enable or disable here the MAC address filter for the specific interface.

Click **[Submit]** to apply change. The change is effective immediately.

7.8.1.11.3 “MAC Address Filter Whitelist” Group

Table 59: WBM “Configuration of MAC Address Filter” Page – “MAC Address Filter Whitelist” Group

Parameters	Explanation
MAC address	Displays the MAC address of the relevant list entry.
MAC mask	This displays the MAC mask of the relevant list entry.
Filter enabled	Enable or disable the filter for the relevant list entry here.
MAC address	Enter here the MAC address for a new list entry. You can enter 10 filters.
MAC mask	Enter the MAC mask for the new list entry here. You can enter 10 filters.
Filter enabled	Enable or disable the filter for the new list entry here.

Click **[Submit]** to apply the change. The change is effective immediately.

Click the appropriate **[Delete]** button to remove an existing list entry. The change is effective immediately.

Click **[Add]** to accept a new list entry. The change is effective immediately. You can enter 10 filters.

7.8.1.12 “Configuration of User Filter” Page

7.8.1.12.1 “User Filter” Group

Table 60: WBM “Configuration of User Filter” Page – “User Filter” Group

Parameters	Explanation
Count	The number of configured user filters is displayed.

7.8.1.12.2 “User Filter n” Group

Table 61: WBM “Configuration of User Filter” Page – “User Filter n” Group

Parameters	Explanation
Source IP address	The source IP address for the respective filter entry is displayed.
Source netmask	This displays the source network for the corresponding filter entry.
Source port	The source port number for the respective filter entry is displayed.
Destination IP address	The destination IP address for the respective filter entry is displayed.
Destination subnet mask	The destination network mask for the respective filter entry is displayed.
Destination port	The designation port number for the respective filter entry is displayed.
Protocol	The permitted protocols for the respective filter is displayed.
Input interface	The permitted interfaces for the respective filter are displayed.

Click the appropriate **[Delete]** button to remove a configured filter. The change is effective immediately.

7.8.1.12.3 “Add New User Filter” Group

You only have to enter values in the fields that are to be set for the filter. At least one value must be entered, all other fields can remain empty.

Table 62: WBM “Configuration of User Filter” Page – “Add New User Filter” Group

Parameters	Explanation	
Source IP address	Enter here the source IP address for the new filter entry.	
Source netmask	Enter here the source network mask for the new filter entry.	
Source port	Enter here the source port address for the new filter entry.	
Destination IP address	Enter here the destination IP address for the new filter entry.	
Destination subnet mask	Enter here the destination network mask for the new filter entry.	
Destination port	Enter the destination port number for the new filter entry.	
Protocol	Enter here the permitted protocols for the new filter.	
	TCP	The TCP service is permitted.
	UDP	The UDP service is permitted.
Input interface	Enter here the permitted interfaces for the new filter.	
	X1	The X1 interface is permitted.
	X2	The X2 interface is permitted.
	VPN	The VPN interface is permitted.

To accept the new filter click **[Add]**. The change is effective immediately.

7.8.1.13 “Configuration of Time and Date” Page

The settings for date and time are shown on the “Configuration of Time and Date” page.

7.8.1.13.1 “Date on Device” Group

Table 63: WBM “Configuration of Time and Date” Page – “Date on Device” Group

Parameter	Explanation
Local	Set date here.

Click **[Change date]** to apply change. The change is effective immediately.

7.8.1.13.2 “Time on Device” Group

Table 64: WBM “Configuration of Time and Date” Page – “Time on Device” Group

Parameter	Explanation
Local	Set local time.
UTC	Set GMT time.
12 h format	For switching between 12-hour and 24-hour time display.

Click **[Change time]** to apply change to the time. The change is effective immediately.

Click **[Change format]** to apply change to the time format. The change will be effective at once.

7.8.1.13.3 “Timezone” Group

Table 65: WBM “Configuration of Time and Date” Page – “Timezone” Group

Parameter	Explanation
Time zone	Specify the appropriate time zone for your location here. Default setting:
	AST/ADT “Atlantic Standard Time,” Halifax
	EST/EDT “Eastern Standard Time,” New York, Toronto
	CST/CDT “Central Standard Time,” Chicago, Winnipeg
	MST/MDT “Mountain Standard Time,” Denver, Edmonton
	PST/PDT “Pacific Standard Time,” Los Angeles, Whitehouse:
	GMT/BST Greenwich Mean Time, “GB, P, IRL, IS, ...
	CET/CEST “Central European Time,” B, DK, D, F, I, CRO, NL, ...
	EET/EEST “East European Time,” BUL, FI, GR, TR, ...
	CST “China Standard Time”
	JST “Japan/Korea Standard Time”

Click [**Change**] to apply time zone change. The change is effective immediately.

7.8.1.13.4 “TZ String” Group

Table 66: WBM “Configuration of Time and Date” Page – “TZ String” Group

Parameter	Explanation
TZ String	Enter the name of your time zone or country and town if the time zone is not available for selection using the “Timezone” parameter. You can define a valid name for the time zone here: http://www.timeanddate.com/time/map/

Click [**Change**] to apply the change. The change is effective immediately.

7.8.1.14 “Configuration of the Users for the Web-based Management” Page

The settings for user administration are shown on this page.

7.8.1.14.1 “Change Password for Selected User” Group



Note

Change passwords

Default passwords are documented in these instructions and therefore do not offer adequate protection! Change the passwords to meet your particular needs.

Table 67: WBM “Configuration of the users for the Web-based Management” Page – “Change Password for Selected User” Group

Parameters	Explanation
Select User	Select the user (“user” or “admin”) for new password assignment.
New Password	Enter the new password for the user selected under “Select User”. The following ASCII characters for passwords are valid: a ... z, A ... Z, 0 ... 9 and spaces. These special characters are also valid:]!"#\$%&'()*+,-./:;<=>?@[^_`{}~-
Confirm password	Enter the new password again for confirmation.

Click [**Change Password**] to apply change. The change is effective immediately.



Note

Observe the valid characters for WBM passwords!

If WBM passwords with invalid characters are set outside the WBM system (e.g. via CBM), then accessing the WBM pages is no longer possible!



Note

Observe access rights

Authorized WBM users only have access to the Web pages. User administration for controller applications is configured separately.

7.8.1.15 “Create Bootable Image” Page

You can create a bootable image on the “Create Bootable Image” page.

7.8.1.15.1 "Create Bootable Image from Active Partition (<Active Partition>" Group

The active partition that boot-up was performed from is displayed in brackets in the heading.

Table 68: WBM “Create Bootable Image” page – “Create bootable image from active partition” Group

Parameters	Explanation		
Destination	The possible destination partition that an image will be saved to is displayed. Depending on which medium has been booted, the following destination is available for selection after boot-up for the image to be generated:		
	System was booted from		Target partition for “bootable image”
	Memory Card	→	Internal Flash
	Internal memory	→	Memory Card
Size of created image	Define the size of the image on the memory card. This field is only visible when “Memory Card” is set as the target.		
	Reduced to content	The storage space of the copied image is kept as small as possible.	
	Full card size	The image is created so that the entire memory card is filled.	

Once the destination has been determined and output, it is then checked and the results of this check are displayed below the settings:

- Free space on target device:
If the available memory space is less than 5% a warning is displayed. You can still start the copy process despite the warning. If the available space is definitively too low, a corresponding message is displayed and copying cannot be started.
- Device being used by CODESYS:
If the device is being used by CODESYS a warning is displayed. Although it is not recommended, you can still start the copying procedure despite this warning.

Click **[Start Copy]** to start the copying procedure. If the outcome of the test is positive, copying begins immediately. If errors have been detected, a corresponding message is displayed and copying is not started. If warnings have been issued, these are displayed again and you must then confirm that you still wish to continue.



Note

Remove the memory card write protection!

Because write access to the memory card is possible during the boot process, the memory card cannot be write protected when creating the image and during operation.

7.8.1.16 “Configuration of Serial Interface RS232” Page

The settings for the serial interface are shown on the “Configuration of Serial Interface RS232” page.

7.8.1.16.1 “Serial Interface Assigned to” Group

The application that the serial interface is currently assigned to is displayed.

7.8.1.16.2 “Assign Owner of Serial Interface (Active after Next Controller Reboot)” Group

You can specify the application that the serial interface is assigned to after the next controller reboot.

Table 69: WBM “Configuration of Serial Interface RS232” Page – “Assign Owner of Serial Interface” Group

Parameters	Explanation
Linux [®] Console	Specify that the serial interface is assigned to the Linux [®] console.
Unassigned (usage by applications, libraries, CODESYS)	Specify that the serial interface is not to be assigned to any particular application and is available, so that the CODESYS program, for example, can access it via function blocks.

NOTICE

Remove RS-485 devices before switching to “Linux Console”!

Connected RS-485 devices can be damaged when switching to “Linux Console”.
Remove these devices before switching!

Click [**Change Owner**] to apply the change. The change only takes effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.17 “Configuration of Service Interface” Page

The settings for the service interface are shown on the “Configuration of the Service Interface” page.

7.8.1.17.1 “Service Interface assigned to” Group

The application that the service interface is currently assigned to is displayed.

7.8.1.17.2 “Assign Owner of Service Interface (enabled after next controller reboot)” Group

You can specify the application to which the service interface is assigned after the next controller reboot.

Table 70: WBM “Configuration of Serial Interface RS-232” page – “Assign Owner of Service Interface” Group

Parameters	Explanation
WAGO Service Communication	Specify that the service interface is used for the WAGO Service communication or runtime system communication.
Linux [®] Console	Specify that the service interface is assigned to the Linux [®] console.
Unassigned (usage by applications, libraries, CODESYS)	Specify that the service interface is not to be assigned to any application and is available, so that the CODESYS program, for example, can access it via function blocks.

Click **[Change Owner]** to apply the change. The changes only take effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.18 “Reboot Controller” Page

The settings for the system reboot are shown on the “Reboot Controller” page.

7.8.1.18.1 “Reboot Controller” Group

Click the **[Reboot]** button to reboot the system.



Note

Account for boot-up time!

The boot process takes time. You cannot access the controller while this is occurring.

7.8.1.19 “Firmware Back-up” Page

The settings for a firmware backup are shown on the “Firmware Backup” page.

Select the packages to be restored in the **Packages** group. Select the corresponding entries.

Note



Only one package may be copied to the network!

If you have specified “Network” as the storage location, only one package may be selected for each storing process.

In the selection box **Destination**, select the target storage location.

Note



No backup of the memory card!

Backup from the memory card to the internal flash memory is not possible.

To activate the automatic update function mark check box **Activate “auto update feature”**.

Note



Account for backup time

Generation of backup files can take several minutes. Stop the CODESYS program before you start the backup procedure to help shorten the time required.

To begin the backup procedure, click the **[Submit]** button.

7.8.1.20 “Firmware Restore” Page

The settings for restoring the firmware are shown on the “Firmware Restore” page.



Note

Restoration only possible from internal memory!

If the device was booted from the memory card, the firmware cannot be restored.



Note

Reset by restore

A reset is performed when the system or settings are restored by CODESYS!



Note

Connection loss through restore

If the restore changes the parameters of the ETHERNET connection, the WBM may then no longer be able to open a connection to the device. You must call the WBM again by entering the correct IP address of the device in the address line.

In the **Source** selection box, select the storage location.

Select the packages to be restored in the **Packages** group. To do this, select the corresponding entries.

In the **CODESYS backup file** input field, enter the name of the backup file for the CODESYS project or click the **[Browse]** button to select the file in Explorer.

In the **Settings backup file** input field, enter the name of the backup file for the settings or click the **[Browse]** button to select the file in Explorer.

In the **System backup file** input field, enter the name of the backup file for the system data or click the **[Browse]** button to select the file in Explorer.

To start the restore procedure, click the **[Submit]** button.

7.8.1.21 “System Partition” Page

The settings for specifying the partition that the system will be started from are shown on the “System Partition” page.

7.8.1.21.1 “Current Active Partition” Group

The partition currently in use is displayed here.

7.8.1.21.2 “Set Inactive Partition Active” Group

Click [**Activate Partition**] to start the system from a different partition at the next controller reboot.



Note

Ensure bootable partition!

A functional firmware backup must be present in the boot partition!

7.8.1.22 “Mass Storage” Page

A group containing information about the storage volume is displayed for each storage volume that is found, along with an additional group for formatting (when this is possible).

The group title contains the designation for the storage volume (“SD card” or “Internal Flash”) and, if this storage volume is also the active partition, the text “Active Partition”.

7.8.1.22.1 “<Device Name>” Group(s)

Table 71: WBM “Mass Storage” Page – “<Device Name>” Group

Parameters	Explanation
Device	The name of the storage volume in the operating system file system is displayed here.
Volume name	The name of the storage volume is displayed here.

7.8.1.22.2 “<Device Name> - FAT Format” Group(s)

Table 72: WBM “Mass Storage” Page – “<Device Name>” Group

Parameters	Explanation
Volume Name	Specify the name for the storage volume when formatted.



Note

Data are deleted!

Any data stored in the storage volume is deleted during formatting!

To format the specified storage volume, click **[Start Formatting]**.

7.8.1.23 “Software Uploads” Page

The settings for a device update are shown on the “Software Uploads” page.

7.8.1.23.1 “Upload New Software” Group

Table 73: WBM “Software Uploads” Page – “Upload New Software” Group

Parameter	Explanation
Software Files	You can select fieldbus software, program licenses and update scripts, for example, for transfer from a PC to the controller.

To select a file on the PC, click the **[Browse]** button.

To transfer the selected file to the controller, click **[Start Upload]** button.

7.8.1.23.2 “Activate New Software” Group

Table 74: WBM “Software Uploads” Page – “Activate New Software” Group

Parameter	Explanation
Software File	This shows the file name of the transferred software package. If no new uploaded software package is present on the controller, the message “No upload file exists” is displayed.
Action	Select here the action required.
	Activate The transferred software package is activated.
	Discard (delete upload) The transferred software package is deleted again by the controller.

To perform the action, click the **[Submit]** button. The process starts immediately.

The file with the software package is deleted again after the installation is completed or when the controller is restarted.

7.8.1.24 “Configuration of Network Services” Page

The settings for various services are shown on the “Configuration of Network Services” page.

Besides enabling/disabling the individual services, you can limit the services for each particular interface also via the firewall on the “General Firewall Configuration” page.

7.8.1.24.1 “Telnet” Group

Table 75: WBM “Configuration of Network Services” Page – “Telnet” Group

Parameters	Explanation
Service active	Enable/disable the Telnet service here.

Click the **[Submit]** button to apply the changes. The change is effective immediately.

7.8.1.24.2 “FTP” Group

Table 76: WBM “Configuration of Network Services” Page – “FTP” Group

Parameters	Explanation
Service active	Enable/disable the FTP service here.

Click the **[Submit]** button to apply the changes. The change is effective immediately.

7.8.1.24.3 “FTPS” Group

Table 77: WBM “Configuration of Network Services” Page – “FTPS” Group

Parameters	Explanation
Service active	Enable/disable the FTPS service here.

Click the **[Submit]** button to apply the changes. The change is effective immediately.

7.8.1.24.4 “HTTP” Group

Table 78: WBM “Configuration of Network Services” Page – “HTTP” Group

Parameters	Explanation
Service active	Enable/disable the HTTP service here.

Click the **[Submit]** button to apply the changes. The change is effective immediately.



Note

Disconnection abort on disabling

If the HTTP service is disabled, the connection to the controller can be closed. Then call up the WBM page again.

7.8.1.24.5 “HTTPS” Group

Table 79: WBM “Configuration of Network Services” Page – “HTTPS” Group

Parameters	Explanation
Service active	Enable/disable the HTTPS service here.

Click the **[Submit]** button to apply the changes. The change is effective immediately.



Note

Disconnection abort on disabling

If the HTTPS service is disabled, the connection to the controller can be closed. Then call up the WBM page again.

7.8.1.24.6 “I/O-CHECK” Group

Table 80: WBM “Configuration of Network Services” Page – “I/O-CHECK” Group

Parameters	Explanation
Service active	Enable/disable the WAGO-I/O CHECK service here.

Click the **[Submit]** button to apply the changes. The change is effective immediately.

7.8.1.25 “Configuration of NTP Client” Page

The settings for the NTP service are shown on the “Configuration of NTP Client” page.

7.8.1.25.1 “NTP Client Configuration” Group

Table 81: WBM “Configuration of NTP Client” Page – “NTP Client Configuration” Group

Parameters	Explanation	
Service enabled	Enable/disabled time update.	
Service Result	This displays whether time data was accessible and updated via NTP. This field is only displayed with the NTP service enabled.	
	Time server not available until now	The time data was not yet updated.
	Time server available	The time data was updated.
Time Server n	Enter here the IP addresses of up to 4 time servers. Time server No. 1 is requested first of all. If no data is accessible via this server, time server No. 2 is requested etc.	
Update interval (sec)	Specify here the update interval of the time server.	
Additionally used (assigned by DHCP)	The NTP servers assigned if necessary by DHCP (or BootP) are displayed. If no NTP server has been assigned by DHCP (or BootP), “none” is displayed.	

Click the **[Submit]** button to apply the changes. The changes are effective immediately.

7.8.1.25.2 “NTP Single Request” Group

To update the time immediately, irrespective of the update interval, click **[Update Time Now]**.

7.8.1.26 “Configuration of PLC Runtime Services” Page

The settings for various services of the activated runtime system are shown on the “Configuration of PLC Runtime Services” page.

7.8.1.26.1 “General Configuration” Group

Table 82: WBM “Configuration of PLC Runtime Services” Page – “General Configuration” Group

Parameter	Explanation
Port Authentication Password	Specify the new password for port authentication.
Confirm Password	Enter the new password again for confirmation.

Click **[Submit]** to apply change. The change is effective immediately.

7.8.1.26.2 “CODESYS 2” Group

Table 83: WBM “Configuration of CODESYS Services” Page – “CODESYS 2 Web Server” Group

Parameter	Explanation
CODESYS 2 State	This displays the status (enabled/disabled) of the CODESYS 2 runtime system.
Web server enabled	Enable or disable the CODESYS 2 web server for the CODESYS web visualization here.
Communication enabled	Enable or disable the communication between the CODESYS 2 runtime system and the CODESYS 2 programming system.
Communication Port Number	Enter here the port number for communication with the CODESYS 2 programming system. Default value is 2455.
Port authentication enabled	Define here whether port authentication is enabled. If this is enabled, the password specified under “General Configuration” must be entered when logging in via CODESYS 2 IDE.

Click **[Submit]** to apply change. The change is effective immediately.

7.8.1.26.3 “e!RUNTIME” Group

Table 84: WBM “Configuration of CODESYS Services” Page – “e!RUNTIME Web Server” Group

Parameter	Explanation
<i>e!RUNTIME</i> State	This displays the status of the <i>e!RUNTIME</i> system (enabled/disabled).
Web server enabled	Enable or disable the <i>e!WEBSERVER</i> for the <i>e!RUNTIME</i> web visualization here.
Port authentication enabled	Enter here whether a login is required for connecting to the device. The user name is admin and the password specified at “General Configuration.”

Click **[Submit]** to apply change. The change is effective immediately.

7.8.1.27 “SSH Server Settings” Page

The settings for the SSH service are shown on the “SSH Server Settings” page.

7.8.1.27.1 “SSH Server” Group

Table 85: WBM “SSH Server Settings” Page – “SSH Server” Group

Parameter	Explanation
Service active	You can enable/disable the SSH server here.
Port Number	Specify the port number here.
Allow root login	You can enable or inhibit root access.
Allow password login	Activate or deactivate the password query function here.

Click on **[Submit]** to accept the changes. The changes will be effective immediately.

7.8.1.28 “TFTP Server” Page

The settings for the TFTP service are shown on the “TFTP Server” page.

7.8.1.28.1 “TFTP Server” Group

Table 86: WBM “TFTP Server” Page – “TFTP Server” Group

Parameter	Explanation
Service active	Activate or deactivate the TFTP server.
Download directory	Specify here the path for downloading the server directory.

Click on **[Submit]** to accept the changes. The changes will be effective immediately.

7.8.1.29 “DHCP Configuration” Page

The settings for the DHCP service are shown on the “DHCP Configuration” page.

7.8.1.29.1 “DHCP Configuration Xn” Group

Table 87: WBM “DHCP Configuration” – “DHCP Configuration Xn” Group

Parameter	Explanation
Service active	Enable or disable the DHCP service for the interface Xn.
IP Range	Enter here a range of available IP addresses.
Lease time (sec)	Specify the lease time here in seconds. 120 seconds are entered by default.
Static hosts/ Static host n	This displays the static assignments of MAC IDs to IP addresses. If no assignment was defined, “No static hosts configured” is displayed.
New static host	Enter here a new static assignment, e.g., “01:02:03:04:05:06=192.168.1.20” or “hostname=192.168.1.20.”

Click on **[Submit]** to accept the changes. The changes will be effective immediately.

To accept a new assignment click the **[Add]** button. The change is effective immediately.

Click **[Delete]** to delete an existing assignment. The change is effective immediately.

7.8.1.30 “Configuration of DNS Service” Page

The settings for the DNS service are shown on the “Configuration of DNS Service” page.

7.8.1.30.1 “DNS Service” Group

Table 88: WBM “Configuration of DNS Service” Page – “DNS Service” Group

Parameter	Explanation	
Service active	You can enable/disable the DNS server service here.	
Mode	Select here the operating mode of the DNS server:	
	Proxy	Requests are buffered to optimize throughput.
	Relay	All requests are routed directly.
Static hosts	Enter here up to 15 fixed assignments of names to IP addresses, e.g. “192.168.1.20:hostname.”	

Click on **[Submit]** to accept the changes. The changes will be effective immediately.

To accept a new assignment click the **[Add]** button. The change is effective immediately.

Click **[Delete]** to delete an existing assignment. The change is effective immediately.

7.8.1.31 “MODBUS Services Configuration” Page

The settings for various MODBUS services are shown on the “MODBUS Services Configuration” page. The groups are only visible if the *e!RUNTIME* system is enabled. Otherwise an information text is displayed.

7.8.1.31.1 “MODBUS TCP” Group

Table 89: WBM “MODBUS Services Configuration” Page – “MODBUS TCP” Group

Parameter	Explanation
Service active	Disable or enable the MODBUS/TCP service here.

Click the [**Submit**] button to apply the changes. The change is effective immediately.

7.8.1.31.2 “MODBUS UDP” Group

Table 90: WBM “MODBUS Configuration Services” Page – “MODBUS UDP” Group

Parameter	Explanation
Service active	Disable/enable the MODBUS-UDP service here.

Click the [**Submit**] button to apply the changes. The change is effective immediately.

7.8.1.32 “Configuration of General SNMP Parameters” Page

The general settings for SNMP are given on the “Configuration of General SNMP Parameters” page.

7.8.1.32.1 “General SNMP Configuration” Group

Table 91: WBM “Configuration of General SNMP Parameters” Page – “General SNMP Configuration” Group

Parameter	Explanation
Service active	Activate/deactivate the SNMP service.
Name of device	Enter here the device name (sysName).
Description	Enter here the device description (sysDescription).
Physical location	Enter here the location of the device (sysLocation).
Contact	Enter here the email contact address (sysContact).

Click the **[Submit]** button to apply the changes. The changes only take effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.33 “Configuration of SNMP v1/v2c Parameters” Page

The general settings for SNMP v1/v2c are shown on the “Configuration of SNMP v1/v2c Parameters” page.

7.8.1.33.1 “SNMP v1/v2c Manager Configuration” Group

Table 92: WBM “Configuration of SNMP v1/v2c Parameters” Page – “SNMP v1/v2c Manager Configuration” Group

Parameter	Explanation
Protocol enabled	It is displayed the SNMP protocol for v1/v2c is activated. The local community name is deleted when the protocol is deactivated.
Local Community Name	Specify here the community name for the SNMP manager configuration. The community name can establish relationships between SNMP managers and agents who are respectively referred to as “Community” and who control identification and access between SNMP participants. The community name can be up to 32 characters long and must not include spaces. To use the SNMP protocol, a valid community name must always be specified. The default community name is “public.”

Click **[Change]** to apply changes. The changes only take effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.33.2 “Actually Configured Trap Receivers” Group(s)

Table 93: WBM “Configuration of SNMP v1/v2c Parameters” Page – “Actually Configured Trap Receivers” Group

Parameter	Explanation
Count	This displays number of configured trap receivers.

7.8.1.33.3 “Trap Receiver n” Group(s)

A dedicated group with the following information is displayed for each trap receiver:

Table 94: WBM “Configuration of SNMP v1/v2c Parameters” Page – “Trap Receiver n” Group(s)

Parameter	Explanation
IP Address	The IP address for the trap receiver (management station) is displayed here.
Community Name	This displays the community name for the trap receiver configuration. The community name can be evaluated by the trap receiver.
Version	This displays the SNMP version, via which the traps are sent: v1 or v2c (traps higher than v3 are displayed in a separate form).

Click **[Delete]** to delete the trap receiver. The changes only take effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.33.4 “Add New Trap Receiver” Group

Table 95: WBM “Configuration of SNMP v1/v2c Parameters” Page – “Add New Trap Receiver” Group

Parameter	Explanation
IP Address	Specify the IP address for the new trap receiver (management station) here.
Community Name	Specify here the community name for the new trap receiver configuration. The community name can be evaluated by the trap receiver. The community name can be up to 32 characters long and must not include spaces.
Version	Specify the SNMP version that will send the traps: v1 or v2c (traps higher than v3 are configured in a separate form).

Click **[Add]** to add a new trap receiver. The changes only take effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.34 “Configuration of SNMP v3 Users” Page

The general settings for SNMP v3 are shown on the “Configuration of SNMP v3 Users” page.

7.8.1.34.1 “Actually Configured v3 Users” Group(s)

Table 96: WBM “Configuration of SNMP v3” Page – “Actually Configured v3 Users” Group

Parameters	Explanation
Count	The number of configured v3 users is displayed.

7.8.1.34.2 “v3 User n” Group(s)

A group with the following information is displayed for each user:

Table 97: WBM “Configuration of SNMP v3 Users” Page – “v3 User n” Group(s)

Parameters	Explanation
Security Authentication Name	The user name is displayed.
Authentication Type	The authentication type for the SNMP v3 packets is displayed here. Possible values: - Use no authentication (“None”) - Message Digest 5 (“MD5”) - Secure Hash Algorithm (“SHA”)
Authentication Key (min. eight char.)	The authentication key is displayed.
Privacy	The encryption algorithm for the SNMP message is displayed here. Possible values: - No encryption (“None”) - Data Encryption Standard (“DES”) - Advanced Encryption Standard (“AES”)
Privacy Key (min. eight char.)	The key for encryption of the SNMP message is displayed here. If nothing is displayed here, the “authentication key” is automatically used.
Notification Receiver IP	The IP address of a trap receiver for v3 traps is displayed here. If no v3 traps are to be sent for this user, this field remains blank.

Click **[Delete]** to delete the user. The changes only take effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.34.3 “Add New v3 User” Group

Table 98: WBM “Configuration of SNMP v3 Users” Page – “Add New v3 User” Group

Parameters	Explanation
Security Authentication Name	Enter the user name here. This name must be unique; a pre-existing user name is not accepted when entered here. The security authentication name can have a maximum 32 characters, without any spaces.
Authentication Type	Specify the authentication type for the SNMP v3 packets. Possible values: - Use no authentication (“None”) - Message Digest 5 (“MD5”) - Secure Hash Algorithm (“SHA”)
Authentication Key (min. eight char.)	Specify the authentication key here. This authentication key must have between eight and 32 characters, without any spaces.
Privacy	Specify the encryption algorithm for the SNMP message here. Possible values: - No encryption (“None”) - Data Encryption Standard (“DES”) - Advanced Encryption Standard (“AES”)
Privacy Key (min. eight char.)	Enter the key for encryption of the SNMP message here. If nothing is specified here, the “authentication key” is automatically used. The privacy key must have between eight and 32 characters, without any spaces.
Notification Receiver IP	Specify an IP address for a trap receiver for v3 traps here. If no v3 traps are to be sent for this user, this field remains blank.

Click **[Add]** to add a new user. The changes only take effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.35 “Diagnostic Information” Page

The settings for displaying diagnostic messages are shown on the “Diagnostic Information” page.

Table 99: WBM “Diagnostic Information” Page

Parameter	Explanation
Read all notifications	Activate display of all messages.
Read only the last n	Activate display of only the last n messages. You also specify the number of messages to be displayed.
Automatic refresh cycle (sec)	Select the check box to enable cyclic refresh. Enter the cycle time in seconds in which a cyclic refresh is performed. The label of the button (“Refresh”/“Start”/“Stop”) changes depending on status.

To refresh the display or to enable cyclic refresh, click the **[Refresh]** button. This button is only visible if the cyclic refresh is not enabled or stopped.

To enable cyclic refresh, click the **[Start]** button. The button is only visible if cyclic refresh is enabled and has not yet started.

To stop cyclic refresh again, click the **[Stop]** button. The button is only visible if cyclic refresh is enabled.

The cyclical update is performed for as long as the “Diagnostic” page is opened. If you change the WBM page, the update is stopped until you call up the “Diagnostic” Page again.

The messages are displayed below the settings.

7.8.1.36 “Configuration of internal 3G Modem” Page

The modem settings are available on the “Configuration of internal 3G Modem” page.

7.8.1.36.1 “SIM Authentication” Group

Table 100: WBM “Configuration of internal 3G Modem” Page – “SIM Authentication” Group

Parameters	Explanation	
State	The status of the SIM authentication is displayed.	
	Ready	Authentication was successful.
	PIN requested	The PIN must be entered. The number of remaining attempts is displayed.
	PUK requested	The PIN was not entered correctly, the PUK must be specified along with a new PIN.
PIN	Enter the PIN. The field is only displayed if PIN entry is required.	
PUK	Enter the PUK. The field is only displayed if PUK try is required.	

To apply the entries, click the **[Submit]** button. The changes will be effective immediately.

7.8.1.36.2 “Mobile Network Configuration” Group

Table 101: WBM “Configuration of internal 3G Modem” Page – “Mobile Network Configuration” Group

Parameters	Explanation
State	The network status is displayed.
Signal Quality (%)	The current signal quality is displayed.
Operator	The provider and network type currently in use are displayed.
Selection Mode	Select the mode for selecting the provider used:
	Automatic The network is selected by the modem itself based on the SIM card settings.
	Automatic – UMTS preferred Like “Automatic”, but the UMTS network is preferred.
	Automatic – GSM preferred Like “Automatic”, but the GSM network is preferred.
	Automatic – UMTS only Like “Automatic”, but restricted to the UMTS network.*
	Automatic – GSM only Like “Automatic”, but restricted to the GSM network.*
	Manual Manual network selection from the Provider selection list; if you set the “Manual” mode, the provider list is then refreshed. This may take some time (see section “‘Provider List’ Group”).
Provider	Select the provider. The field is only visible if Selection Mode is set to “Manual”. The selection list contains all providers from the provider list that are actually available. The selection list is only available if the provider list has been refreshed.
* However, the restriction applies only when more than one possible network is available, e.g., if “Automatic UMTS only” is selected, but only a GSM network is available from the provider, then the modem still logs into the GSM network.	

Click on **[Submit]** to accept the changes. The changes will be effective immediately.

7.8.1.36.3 “Provider List” Group

Table 102: WBM “Configuration of internal 3G Modem” Page – “Provider List” Group

Parameters	Explanation
<Provider> <Network> <ID>, <Status>	All available providers with the respective network, its ID and the current status are displayed.

Refreshing the provider list may take some time (approx. 1 minute), during which the WBM waits for the modem response. The process is canceled after 2 minutes or immediately if the modem executes another, non-interruptible action.

The list is therefore refreshed only on request, either by clicking the **[Refresh]** button or setting the **Selection Mode** to “Manual”.

The selection list for the provider (“Mobile Network Configuration” Group) can only be filled in when the provider list has been refreshed.

In normal operation, the provider list changes only rarely, i.e., continuous refreshing is not required.

Click **[Refresh]** to refresh the list.

7.8.1.36.4 “Network Package Service” Group

Table 103: WBM “Configuration of internal 3G Modem” Page – “Network Package Service” Group

Parameters	Explanation	
State	The registry state of the “Network Package Service” is displayed.	
APN	Enter the APN access point (Access Point Name) of the SIM card provider.	
User	Enter the user name for the access point of the SIM card provider.	
Password	Enter the password for the access point of the SIM card provider.	
Authentication Type	Select the authentication type:	
	None	No authentication
	PAP	Password Authentication Protocol
	CHAP	Challenge Handshake Authentication Protocol
	PAP or CHAP	When possible, the secure CHAP is used, otherwise PAP.

Click on **[Submit]** to accept the changes. The changes will be effective immediately.

7.8.1.36.5 “Upload and activate new Modem Software” Group

Table 104: WBM “Configuration of internal 3G Modem” Page – “Upload and activate new Modem Software” Group

Parameters	Explanation
Currently used	The current modem firmware version is displayed.
New Software	Enter the firmware version to be installed.

To select a firmware file in Explorer, click the **[Browse]** button.

To install and enable the firmware, click the **[Start Upload]** button. The changes will be effective immediately.

7.8.1.37 “Configuration of OpenVPN and IPsec” Page

The general settings for SNMP v1/v2c are shown on the “Configuration of SNMP v1/v2c Parameters” page.

7.8.1.37.1 “OpenVPN” Group

Table 105: WBM “Configuration of OpenVPN and IPsec” Page – “OpenVPN” Group

Parameters	Explanation	
Current State	The current status of the OpenVPN service is displayed.	
	stopped	The service is disabled.
	running	The service is enabled.
OpenVPN enabled	Enable or disable the OpenVPN service.	
openvpn.config	Select an OpenVPN configuration file to be transferred from PC to controller or vice versa.	

To apply a status change, click the **[Submit]** button.

To select a file on the controller or PC, click the **[Browse]** button.

To transfer the selected file from the PC to the controller, click **[Start Upload]** button.

To transfer the selected file from the controller to the PC, click **[Start Download]** button.

The changes only take effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.37.2 “IPsec” Group

Table 106: WBM “Configuration of OpenVPN and IPsec” Page – “IPsec” Group

Parameters	Explanation	
Current State	The current status of the IPsec service is displayed.	
	stopped	The service is disabled.
	running	The service is enabled.
IPsec enabled	Enable or disable the IPsec service.	
ipsec.config	Select an IPsec configuration file to be transferred from PC to controller or vice versa.	
ipsec.secrets	Select an IPsec configuration file to be transferred from PC to controller.	

To apply a status change, click the **[Submit]** button.

To select a file on the controller or PC, click the **[Browse]** button.

To transfer the selected file to the controller, click **[Start Upload]** button.

To transfer the selected file from the controller to the PC, click **[Start Download]** button.

The changes only take effect after restarting the controller. For this purpose, use the WBM reboot function. Do not shut down the controller too early!

7.8.1.37.3 “Certificate Upload” Group

Table 107: WBM “Configuration of OpenVPN and IPsec” Page – “Certificate Upload” Group

Parameters	Explanation
New Certificate	Select an certificate for transfer from a PC to the controller.
New Private Key	Select a key for transfer from a PC to the controller.

To select a file on the PC, click the **[Browse]** button.

To transfer the selected file to the controller, click **[Start Upload]** button. The changes will be effective immediately.

The certificates are saved in the directory “/etc/certificates/” and the keys in the directory “/etc/certificates/keys/”.

7.8.1.37.4 “Certificate List” Group

Table 108: WBM “Configuration of OpenVPN and IPsec” Page – “Certificate List” Group

Parameters	Explanation
<certificate name>	The loaded certificates are displayed. If no certificate has been loaded. “No certificates existing” is displayed.

Click **[Delete]** to delete an entry. The changes will be effective immediately.

7.8.1.37.5 “Private Key List” Group

Table 109: WBM “Configuration of OpenVPN and IPsec” Page – “Private Key List” Group

Parameters	Explanation
<key name>	The loaded keys are displayed. If no keys has been loaded. “No keys existing” is displayed.

Click **[Delete]** to delete an entry. The changes will be effective immediately.

7.8.2 Configuration using a Terminal Program (CBM)

You can use the Console-Based Management Tool (CBM) to configure the controller via the ETHERNET interface and SSH, as well as the RS-232 interface and Linux[®] console.

To establish a connection via the serial interface, set the baud rate to 115200 baud in the terminal program. The settings for data bits, stop bits and parity do not need to be adjusted.

To launch the CBM, log in to the Linux[®] console and enter the command "cbm" (case sensitive).

```
=====
WAGO Console Based Management Tool
=====
Main Menu
-----
0. Quit
1. Information
2. PLC Runtime
3. Networking
4. Firewall
5. Clock
6. Administration
7. Package Server
8. Mass Storage
9. Software Uploads
10. Ports and Services
11. SNMP
12. PROFIBUS DP
-----
Select an entry or Q to quit
-----
```

Figure 43: CBM main menu (example)

7.8.2.1 CBM Menu Structure Overview

Table 110: CBM Menu Structure

Menu Hierarchy
0. Quit
1. Information
0. Back to Main Menu
1. Controller Details
2. Network Details
2. PLC Runtime
0. Back to Main Menu
1. Information
2. General Configuration
3. WebVisu
3. Networking
0. Back to Main Menu

Table 110: CBM Menu Structure

Menu Hierarchy
1. Host-/Domain Name
2. TCP/IP
0. Back to Networking Menu
1. IP Address
2. Default Gateway
3. DNS Server
3. Ethernet
0. Back to Networking Menu
1. Switch Configuration
2. Ethernet Ports
0. Back to Ethernet Menu
1. Interface X1
2. Interface X2
4. Firewall
0. Back to Main Menu
1. General Configuration
2. MAC Address Filter
3. User Filter
5. Clock
0. Back to Main Menu
1. Date on device (local)
2. Time on device (local)
3. Time on device (UTC)
4. Clock Display Mode
5. Timezone
6. TZ-String
6. Administration
0. Back to Main Menu
1. Users
2. Create Image
3. Owner of Serial Interface
4. Reboot Controller
7. Package Server
0. Back to Main Menu
1. Firmware Backup
2. Firmware Restore
3. System Partition
8. Mass Storage
0. Back to Main Menu
1. Internal Flash (active partition)
9. Software Uploads
0. Back to Main Menu

Table 110: CBM Menu Structure

Menu Hierarchy
1. Update Script
10. Ports and Services
0. Back to Main Menu
1. Telnet
2. FTP
3. FTPS
4. HTTP
5. HTTPS
6. NTP
7. SSH
8. TFTP
9. DHCPD
10. DNS
11. IOCHECK PORT
12. Modbus TCP
13. Modbus UDP
14. PLC Runtime Services
11. SNMP
0. Back to Main Menu
1. General SNMP Configuration
2. SNMP v1/v2c Manager Configuration
3. SNMP v1/v2c Trap Receiver Configuration
4. SNMP v3 Configuration
5. SNMP firewalling
6. Secure SNMP firewalling

7.8.2.2 “Information” Menu

This menu contains other submenus with information on the controller and network.

Table 111: “Information” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Controller Details	Opens a submenu with controller properties
2. Network Details	Opens a submenu with controller network and interface properties

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.2.1 “Information” > “Controller Details” Submenu

In this submenu, the controller properties are displayed.

Table 112: “Information” > “Controller Details” Submenu

Parameters	Explanation
Product Description	Controller identification
Order Number	Item number of the controller
License Information	Notification that the CODESYS runtime system is available
Firmware Revision	Firmware status

To return to the higher-level menu, press [Q] or [Return].

7.8.2.2.2 “Information” > “Network Details” Submenu

In this submenu, the network and interface properties of the controller are displayed.

If the ETHERNET interfaces are operated in “Switched” mode, a common table (“X1/X2”) is displayed for both connections.

If the ETHERNET interfaces are operated in “Separated” mode, an individual table (“X1” / “X2”) is displayed for each connection.

Table 113: “Information” > “Network Details” Submenu

Parameters	Explanation
State	Status of the ETHERNET interface (enabled/disabled)
Mac Address	MAC address identifies and addresses the controller
IP Address	Current IP address of the controller and (in brackets) the reference type (static/bootp/dhcp)
Subnet Mask	Current subnet mask of the controller

To return to the higher-level menu, press **[Q]** or **[Return]**.

7.8.2.3 “PLC Runtime” Menu

This menu contains other submenus with information and settings for the runtime system.

Table 114: “PLC Runtime” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Information	Opens a submenu with information on the runtime system
2. General Configuration	Opens a submenu with settings for the runtime system
3. WebVisu	Opens a submenu with settings for the Web visualization

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.3.1 “PLC Runtime” > “Information” Submenu

This submenu contains other submenus with information on the runtime system and PLC program.

Menu items 2 ... 6 only appear if CODESYS 2 is set as the runtime system.

Table 115: “PLC Runtime” > “Information” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Runtime Version	Opens a submenu to display the runtime version
2. Webserver Version	Opens a submenu to display the Webserver version
3. State	Opens a submenu to display the PLC operating state
4. Number of Tasks	Opens a submenu to display the number of tasks in the PLC program
5. Project Details	Opens a submenu to display the PLC program project information
6. Tasks	Opens a submenu to display the tasks in the PLC program

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.3.2 “Information” > “Runtime Version” Submenu

In this submenu, the runtime version is displayed.

Table 116: “PLC Runtime” > “Information” > “Runtime Version” Submenu

Parameters	Explanation
Version	The version of the currently enabled runtime system is shown. If the runtime system is disabled, “None” is displayed.

To return to the higher-level menu, press **[Q]** or **[Return]**.

7.8.2.3.3 “Information” > “Webserver Version” Submenu

In this submenu, the Webserver version is displayed.

The submenu only appears when CODESYS 2 is enabled as the runtime system.

Table 117: “PLC Runtime” > “Information” > “Webserver Version” Submenu

Parameters	Explanation
Version	The Webserver version is displayed.

To return to the higher-level menu, press **[Q]** or **[Return]**.

7.8.2.3.4 “Information” > “State” Submenu

In this submenu, the PLC operating state is displayed.

The submenu only appears when CODESYS 2 is enabled as the runtime system.

Table 118: “PLC Runtime” > “Information” > “State” Submenu

Parameters	Explanation	
State	The PLC operating state is shown.	
	STOP	PLC program is not executed.
	RUN	PLC program is executed.

To return to the higher-level menu, press **[Q]** or **[Return]**.

7.8.2.3.5 “Information” > “Number of Tasks” Submenu

In this submenu, the number of tasks in the PLC program are displayed.
The submenu only appears when CODESYS 2 is enabled as the runtime system.

Table 119: “PLC Runtime” > “Information” > “Number of Tasks” Submenu

Parameters	Explanation
Number of Tasks	The number of tasks in the PLC program is shown.

To return to the higher-level menu, press **[Q]** or **[Return]**.

7.8.2.3.6 “Information” > “Project Details” Submenu

In this submenu, project information from the PLC program is displayed.
The submenu only appears when CODESYS 2 is enabled as the runtime system and the program is executed.

Table 120: “PLC Runtime” > “Information” > “Project Details” Submenu

Parameters	Explanation
Date	Display of project information that the programmer entered in the PLC program (in the programming software under Project > Project Information ...) Descriptive text with up to 1024 characters is displayed under “Description”.
Title	
Version	
Author	
Description	

To return to the higher-level menu, press **[Q]** or **[Return]**.

7.8.2.3.7 “Information” > “Tasks” Submenu

In this submenu, tasks from the PLC program are displayed. An entry is generated for each task.
The submenu only appears when CODESYS 2 is enabled as the runtime system.

Table 121: “PLC Runtime” > “Information” > “Tasks” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
n. Task n	Opens a submenu with information on the selected task

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press **[Q]**.

7.8.2.3.8 “Tasks” > “Task n” Submenu

In this submenu, information on the selected task is displayed.
The submenu only appears when CODESYS 2 is enabled as the runtime system.

Table 122: “PLC Runtime” > “Information” > “Tasks” > “Task n” Submenu

Parameters	Explanation
Cycle count	Number of task cycles since the system start
Cycle time (µsec)	Currently measured task cycle time for the task
Cycle time min (µsec)	Minimum task cycle time for the task since the system start
Cycle time max (µsec)	Maximum task cycle time for the task since the system start
Cycle time avg (µsec)	Average task cycle time since the system start
Status	Task status (e.g., RUN, STOP)
Mode	Task execution mode (e.g., in cycles)
Priority	Set task priority
Interval (msec)	Set task interval

To return to the higher-level menu, press [Q] or [Return].

7.8.2.3.9 “PLC Runtime” > “General Configuration” Submenu

This submenu contains other submenus with general settings for the runtime system.

Table 123: “PLC Runtime” > “General Configuration” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. PLC Runtime Version	Opens a submenu for the CODESYS runtime system settings
2. Home Dir On SD Card	Opens a submenu for the home directory settings

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.3.10 “General Configuration” > “PLC Runtime Version” Submenu

In this submenu, select which PLC runtime system is enabled.

Table 124: “PLC Runtime” > “General Configuration” > “PLC Runtime Version” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. None	No runtime system is enabled.
2. CODESYS 2	The CODESYS 2 runtime system is enabled.
3. e!RUNTIME	The <i>e!RUNTIME</i> runtime system is enabled.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.3.11 “General Configuration” > “Home Dir On SD Card” Submenu

In this submenu, define if the home directory for the runtime system should be moved to the memory card.

Table 125: “PLC Runtime” > “General Configuration” > “Home Dir On SD Card” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Enable	The home directory is moved to the memory card.
2. Disable	The home directory is stored in the internal memory.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.3.12 “PLC Runtime” > “WebVisu” Submenu

This submenu contains information and settings for the Web visualization.

Table 126: “PLC Runtime” > “WebVisu” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. CODESYS 2 Webserver State	The status of the CODESYS 2 Webserver is displayed.	
2. e!RUNTIME Webserver State	The status of the <i>e!RUNTIME</i> Webserver is displayed.	
3. Default Webserver	Choose here whether the Web-based Management or web visualization of the runtime system should be displayed when only entering the IP address of the controller.	
	0. Back to ...	Back to the higher-level menu
	1. Web-based Management	The Web-based Management is displayed.
	2. CODESYS WebVisu	The web visualization of the runtime system is displayed.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.4 “Networking” Menu

This menu contains other submenus with settings for the network configuration.

Table 127: “Networking” Menu

Parameters	Explanation
0. Back to ...	Back to the higher-level menu
1. Host/Domain Name	Opens a submenu with setting options for the general TCP/IP parameters
2. TCP/IP	Opens a submenu with TCP/IP settings for the ETHERNET interfaces
3. Ethernet	Opens a submenu with settings for the ETHERNET configuration

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.4.1 “Networking” > “Host/Domain Name” Submenu

This submenu contains the “Hostname” and “Domain Name” submenu with setting options for the general TCP/IP parameters.

Table 128: “Networking” > “Host/Domain Name” Submenu

Parameters	Explanation
0. Back to ...	Back to the higher-level menu
1. Hostname	Opens a submenu with the hostname settings In addition to the menu item, the configured and current hostname are displayed.
2. Domain Name	Opens a submenu hostname settings In addition to the menu item, the configured and current domain name are displayed.

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.4.2 “Host/Domain Name” > “Hostname” Submenu

In this submenu, you can set the hostname of the controller.

Table 129: “Networking” > “Hostname” Submenu

Parameters	Explanation
Enter new Hostname	Enter here the hostname of the controller to be used if the network interface is changed to a static IP address or if no hostname is transmitted with a DHCP response.

Click [**<OK>**] to apply the entry.

Click [**<Abort>**] to discard the entry.

7.8.2.4.3 “Host/Domain Name” > “Domain Name” Submenu

In this submenu, you can set the domain name of the controller.

Table 130: “Networking” > “Host/Domain Name” > “Domain Name” Submenu

Parameters	Explanation
Enter new Domain Name	Enter the domain name. The default entry is “localdomain.lan”.

Click [**<OK>**] to apply the entry.

Click [**<Abort>**] to discard the entry.

7.8.2.4.4 “Networking” > “TCP/IP” Submenu

This submenu contains other submenus with the TCP/IP settings for the ETHERNET interfaces.

Table 131: “Networking” > “TCP/IP” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. IP Address	Opens a submenu with settings for the IP address(es)
2. Default Gateway	Opens a submenu with settings for the default gateway
3. DNS Server	Opens a submenu with settings for the DNS server(s)

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [**Q**].

7.8.2.4.5 “TCP/IP” > “IP Address” Submenu

This submenu contains other submenus with settings for the ETHERNET interfaces.

The submenu only appears if the controller is operated in “Separated” mode. If the controller is operated in “Switched” mode, then the “IP Address” > “X1” submenu is displayed directly.

Table 132: “Networking” > “IP Address” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. X1	Opens a submenu with settings for the X1 interface
2. X2	Opens a submenu with settings for the X2 interface

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press **[Q]**.

7.8.2.4.6 “IP Address” > “Xn” Submenu

This submenu contains the settings for the selected interface.

Table 133: “Networking” > “TCP/IP” > “IP Address” Submenu > “Xn”

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Type of IP Address Configuration	Select a static or dynamic IP address.	
	0. Back to ...	Back to the higher-level menu
	1. Static IP	Static IP addressing When selecting static addressing, the IP address and subnet mask are then retrieved.
	2. DHCP	Dynamic IP addressing
	3. BootP	Dynamic IP addressing
2. IP Address	Enter here a static IP address.	
3. Subnet Mask	Enter the subnet mask.	

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press **[Q]**.
Click **[<OK>]** to apply the entry.
Click **[<Abort>]** to discard the entry.

7.8.2.4.7 “TCP/IP” > “Default Gateway” Submenu

This submenu contains other submenus with settings for the default gateway.

Table 134: “Networking” > “TCP/IP” > “Default Gateway” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Default Gateway 1	Opens a submenu with settings for default gateway 1 In addition to the menu item, the current status of the gateway is displayed.
2. Default Gateway 2	Opens a submenu with settings for default gateway 2 In addition to the menu item, the current status of the gateway is displayed.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.4.8 “Default Gateway” > “Default Gateway n” Submenu

This submenu contains the settings for the selected gateway.

Table 135: “Networking” > “TCP/IP” > “Default Gateway” > “Default Gateway n” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Set here whether the selected default gateway is to be used.	
	0. Back to ...	Back to the higher-level menu
	1. Disabled	The default gateway is not used.
	2. Enabled	The default gateway is used.
2. Gateway IP Address	Enter the address of the default gateway.	
3. Gateway Metric	Set here a number as the metric. The default value for the metric is 20, the lowest value is 0, the highest value is 4.294.967.295.	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.4.9 “TCP/IP” > “DNS Server” Submenu

This submenu contains the settings for the DNS server.

Table 136: “Networking” > “TCP/IP” > “DNS Server” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
n. DNS Server n	The addresses of the defined DNS servers are displayed. Other submenus are available for the server entered.	
	0. Back to ...	Back to the higher-level menu
	1. Edit	You can change the selected DNS server address.
	2. Delete	You can delete the selected DNS server address.
(n+1). Add new DNS Server	Add additional DNS server addresses.	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.4.10 “Networking” > “Ethernet” Submenu

This submenu contains other submenus with settings for the ETHERNET configuration.

Table 137: “Networking” > “Ethernet” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Switch Configuration	Opens a submenu with settings for the IP address(es)
2. Ethernet Ports	Opens a submenu with settings for the ETHERNET interfaces

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.4.11 “Ethernet” > “Switch Configuration” Submenu

This submenu contains the settings for the Switch configuration.

Table 138: “Networking” > “Ethernet” > “Switch Configuration” Submenu

Submenu	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Network interfaces	Enable or disable the switch.	
	0. Back to ...	Back to the higher-level menu
	1. Separated	Each interface is operated with its own IP address.
	2. Switched	Both interfaces are operated with one IP address.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.4.12 “Ethernet” > “Ethernet Ports” Submenu

This submenu contains other submenus with settings for the ETHERNET interfaces.

Table 139: “Networking” > “Ethernet” > “Ethernet Ports” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Interface X1	Opens a submenu with settings for the X1 interface
2. Interface X2	Opens a submenu with settings for the X2 interface

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.4.13 “Ethernet Ports” > “Interface Xn” Submenu

This submenu contains the settings for the selected ETHERNET interface.

Table 140: “Networking” > “Ethernet” > “Ethernet Ports” > “Interface Xn” Submenu

Submenu	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Port	Set here whether the selected port is to be used.	
	0. Back to ...	Back to the higher-level menu
	1. Disabled	The port is not used.
	2. Enabled	The port is used.
2. Autonegotiation	Set here whether the Autonegotiation function is enabled for the selected port.	
	0. Back to ...	Back to the higher-level menu
	1. Disabled	Autonegotiation is disabled.
	2. Enabled	Autonegotiation is enabled.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.5 “Firewall” Menu

This menu contains other submenus for the firewall functionality settings.

Table 141: “Firewall” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. General Configuration	Opens a submenu with general firewall settings
2. MAC Address Filter	Opens a submenu with MAC address filter settings
3. User Filter	Opens a submenu with user filter settings

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.5.1 “Firewall” > “General Configuration” Submenu

This submenu contains the general settings for the firewall.

Table 142: “Firewall” > “General Configuration” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Firewall enabled entirely	Enables/disables the complete functionality of the firewall.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	Firewall is enabled.
	2. Disable	Firewall is disabled.
2. ICMP echo broadcast protection	Enable or disable the “ICMP echo broadcast” protection.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	“ICMP echo broadcast” protection is enabled.
	2. Disable	“ICMP echo broadcast” protection is disabled.
3. Max UDP connections per second	You can specify the maximum number of UDP connections per second. “0” = “Disabled”	
4. Max TCP connections per second	You can specify the maximum number of TCP connections per second. “0” = “Disabled”	
5. Interface WAN	Opens a submenu with firewall settings on the IP level for the selected interface	
6. Interface VPN		
7. Interface X1		
8. Interface X2		

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.5.2 “General Configuration” > “Interface xxx” Submenu

This submenu contains the firewall settings on the IP level for the selected interface.

Table 143: “Firewall” > “General Configuration” > “Interface xxx” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Interface state	Enable or disable the firewall for the selected interface.	
	0. Back to ...	Back to the higher-level menu
	1. Open	The firewall for the selected interface is disabled.
	2. Filtered	The firewall for the selected interface is enabled.
2. ICMP Policy	Enable or disable the “ICMP echo” protection for the respective interface.	
	0. Back to ...	Back to the higher-level menu
	1. Accept	The “ICMP echo” protection is disabled.
	2. Drop	The “ICMP echo” protection is enabled.
3. ICMP Limit	You can specify the maximum number of “ICMP pings” per second. “0” = “Disabled”	
4. ICMP Burst	You can specify the maximum number of “ICMP echo bursts” per second. “0” = “Disabled”	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.5.3 “Firewall” > “MAC Address Filter” Submenu

This submenu contains the settings for the MAC address filter.

Table 144: “Firewall” > “MAC Address Filter” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. MAC address filter whitelist	Opens a submenu to edit the MAC address filter whitelist	
2. MAC address filter state VPN	Enable or disable the firewall for the VPN interface.	
	0. Back to ...	Back to the higher-level menu
	1. Open	The firewall for the VPN interface is disabled.
	2. Filtered	The firewall for the VPN interface is enabled.
3. MAC address filter state WAN	Enable or disable the firewall for the WAN interface.	
	0. Back to ...	Back to the higher-level menu
	1. Open	The firewall for the WAN interface is disabled.
	2. Filtered	The firewall for the WAN interface is enabled.
4. MAC address filter state X1	Enable or disable the firewall for the X1 interface.	
	0. Back to ...	Back to the higher-level menu
	1. Open	The firewall for the X1 interface is disabled.
	2. Filtered	The firewall for the X1 interface is enabled.
5. MAC address filter state X2	Enable or disable the firewall for the X2 interface.	
	0. Back to ...	Back to the higher-level menu
	1. Open	The firewall for the X2 interface is disabled.
	2. Filtered	The firewall for the X2 interface is enabled.

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.5.4 “MAC Address Filter” > “MAC address filter whitelist” Submenu

This submenu displays all available filter entries.

Table 145: “Firewall” > “MAC Address Filter” > “MAC address filter whitelist” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Add new	Opens a submenu to add a new filter entry
2. Previous page	Displays the previous page of the list (if more than one page is filled)
3. Next Page	Displays the next page of the list (if more than one page is filled)
(n + 3.) No (n):	Opens a submenu to edit an existing filter entry

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.5.5 “MAC address filter whitelist” > “Add new / No (n)” Submenu

In this submenu, you can create, change or delete filter entries.

Table 146: “Firewall” > “MAC Address Filter” > “MAC address filter whitelist” > “Add new / No (n)” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. MAC address	Enter the MAC address.	
2. MAC mask	Enter the MAC mask.	
3. Filter state	Enable or disable the filter.	
	0. Back to ...	Back to the higher-level menu
	1. on	The filter is enabled.
	2. off	The filter is disabled.
4. accept	To apply the changes for the selected filter entry, choose this menu item.	
5. delete	To delete the selected filter entry, choose this menu item.	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

Click [<OK>] to apply the entry.

Click [<Abort>] to discard the entry.

7.8.2.5.6 “Firewall” > “User Filter” Submenu

This submenu displays all available filter entries.

Table 147: “Firewall” > “User Filter” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Add new	Opens a submenu to add a new filter entry
2. Previous page	Displays the previous page of the list (if more than one page is filled)
3. Next Page	Displays the next page of the list (if more than one page is filled)
(n + 3.) No (n):	Opens a submenu to edit an existing filter entry

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.5.7 “User Filter” > “Add New / No (n)” Submenu

In this submenu, you can create, change or delete filter entries.

Table 148: “Firewall” > “User Filter” > “Add New / No (n)” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Source IP address	Enter the source IP address.	
2. Source netmask	Enter the source network mask.	
3. Source port	Enter the source port number.	
4. Destination IP address	Enter the destination IP address.	
5. Destination netmask	Enter here the destination netmask.	
6. Destination port	Enter the destination port number.	
7. protocol	Select the permitted protocols.	
	0. Back to ...	Back to the higher-level menu
	1. tcp	The TCP protocol is permitted.
	2. udp	The UDP protocol is permitted.
	3. tcp & udp	Both protocols are permitted.
8. interface	Select the permitted interfaces.	
	0. Back to ...	Back to the higher-level menu
	1. all	All interfaces are permitted.
	2. VPN	The VPN interface is permitted.
	3. WAN	The WAN interface is permitted.
	4. X1	The X1 interface is permitted.
9. state	5. X2	The X2 interface is permitted.
	Enable or disable the filter.	
	0. Back to ...	Back to the higher-level menu
	1. on	The filter is enabled.
10. accept	2. off	The filter is disabled.
	To apply the changes for the selected filter entry, choose this menu item.	
11. delete	To delete the selected filter entry, choose this menu item.	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.6 “Clock” Menu

This menu contains other submenus for the date and time settings.

Table 149: “Clock” Menu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Date on device (local)	Set date.	
2. Time on device (local)	Set local time.	
3. Time on device (UTC)	Set GMT time.	
4. Clock Display Mode	Select the display format for the time.	
	0. Back to ...	Back to the higher-level menu
	1. 24 hours	The time is displayed in 24-hour format.
	2. 12 hours	The time is displayed in 12-hour format.
5. Timezone	Specify the appropriate time zone for your location. Basic setting:	
	0. Back to ...	Back to the higher-level menu
	1. AST/ADT	“Atlantic Standard Time,” Halifax
	2. EST/EDT	“Eastern Standard Time,” New York, Toronto
	3. CST/CDT	“Central Standard Time,” Chicago, Winnipeg
	4. MST/MDT	“Mountain Standard Time,” Denver, Edmonton
	5. PST/PDT	“Pacific Standard Time,” Los Angeles, Whitehouse
	6. GMT/BST	Greenwich Mean Time, “GB, P, IRL, IS, ...
	7. CET/CEST	“Central European Time,” B, DK, D, F, I, CRO, NL, ...
	8. EET/EEST	“East European Time,” BUL, FI, GR, TR, ...
	9. CST	“China Standard Time”
	10. JST	“Japan/Korea Standard Time”
6. TZ String	Enter the name of your time zone or country and town if the time zone is not available for selection using the “Timezone” parameter.	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.7 “Administration” Menu

This menu contains settings for controller administration.

Table 150: “Administration” Menu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Users	Opens a submenu with settings for the user passwords	
2. Create Image	Opens a submenu for creating a bootable image	
3. Owner of Serial Interface	Select the serial interface assignment.	
	0. Back to ...	Back to the higher-level menu
	1. Linux Console	The serial interface is assigned to the Linux [®] console.
	2. Un-assigned	The serial interface is not assigned and is available for applications or CODESYS.
4. Reboot Controller	Restart the controller following a security challenge.	
	0. Back to ...	Back to the higher-level menu
	1. Reboot	Restarts the controller

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.7.1 “Administration” > “Create Image” Submenu

This submenu contains the selection for creating the image.

In addition to the menu item for the enabled storage medium, the current status is displayed.

Table 151: “Administration” > “Create Image” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. SD Card	To create an image on the memory card, select this menu item. Enter the reserved memory size in another step. This menu item only appears if the memory card is inserted.
2. Internal Flash	To create an image on the internal memory, select this menu item.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

Click [<OK>] to apply the entry.

Click [<Abort>] to discard the entry.

7.8.2.7.2 “Administration” > “Users” Submenu

This submenu contains settings for the user passwords.

Table 152: “Administration” > “Users” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. user	Enter a new password for the “user” user.
2. admin	Enter a new password for the “admin” user.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

Click [<OK>] to apply the entry.

Click [<Abort>] to discard the entry.

7.8.2.8 “Package Server” Menu

This menu contains other submenus with functions for firmware backup and restore, as well as information and setting options for the current system partition.

Table 153: “Package Server” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Firmware Backup	Opens a submenu with functions for the firmware backup
2. Firmware Restore	Opens a submenu with functions for the firmware restore
3. System Partition	Opens a submenu with information and setting options for the current system partition

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.8.1 “Package Server” > “Firmware Backup” Submenu

This submenu contains a selection option for the data to be saved.

The submenu only appears if a memory card is inserted that does not contain a bootable system. Otherwise, a message is displayed.

Table 154: “Package Server” > “Firmware Backup” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. All	All data is saved.
2. PLC Runtime project	The PLC runtime project is saved.
3. Settings	The controller settings are saved.
4. System	The controller operating system is saved.

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

You are taken to the following submenu after making the selection.

7.8.2.8.2 “Firmware Backup” > “Auto Update Feature” Submenu

This submenu contains a setting option for the Auto Update function.

The submenu only appears if the data for the firmware backup has been selected.

Table 155: “Package Server” > “Firmware Backup” > “Auto Update Feature” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. No	The Auto Update function is OFF for the selected data.
2. Yes	The Auto Update function is ON for the selected data.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

You are taken to the following submenu after making the selection.

7.8.2.8.3 “Firmware Backup” > “Destination” Submenu

This submenu contains a selection option for the backup destination drive.

Table 156: “Package Server” > “Firmware Backup” > “Auto Update Feature” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. SD Card	The selected data is copied to the memory card.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

The copy progress is displayed during the backup process.

7.8.2.8.4 “Package Server” > “Firmware Restore” Submenu

This submenu contains a selection option for the restore source drive.

In addition to the enabled partition, the current status is displayed.

Table 157: “Package Server” > “Firmware Restore” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. SD Card	The data is copied from the memory card.
2. Internal Flash	The data is copied from the internal memory.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

You are taken to the following submenu after making the selection.

7.8.2.8.5 “Firmware Restore” > “Select Package” Submenu

This submenu contains a selection option for the data to be restored.

Table 158: “Package Server” > “Firmware Restore” > “Select Package” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. PLC Runtime project	The PLC runtime project is loaded.
2. Settings	The controller settings are loaded.
3. System	The controller operating system is loaded.
4. System + Setting	The controller operating system and settings are loaded.
5. All	All data is loaded.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

The copy progress is displayed during the restore process.

7.8.2.8.6 “Package Server” > “System Partition” Submenu

This submenu contains information and setting options for the current system partition.

Table 159: “Package Server” > “System Partition” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Current active partition	The partition currently in use is displayed.
2. Set inactive NAND partition active	Select this menu item to start the system from a different partition at the next controller reboot.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.9 “Mass Storage” Menu

This menu contains information on the internal flash memory and, if inserted, on the external memory card.

In addition to the menu item, the status is displayed for the enabled partition.

Table 160: “Mass Storage” Menu

Parameters	Explanation
0. Back to ...	Back to the higher-level menu
1. SD Card	Opens a submenu with information on the memory card and its formatting This menu item only appears if a memory card is inserted in the controller.
2. Internal Flash	Opens a submenu with information on the internal flash memory

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.9.1 “Mass Storage” > “SD Card” Submenu

This submenu contains information on the external memory card and its formatting.

This submenu only appears if a memory card is inserted in the controller.

Table 161: “Mass Storage” > “SD Card” Menu

Parameters	Explanation
0. Back to ...	Back to the higher-level menu
1. Show information	Displays information on the memory card
2. FAT format medium	To format the memory card in FAT format, select this menu item. Then specify a volume name.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

Click [<OK>] to apply the entry.

Click [<Abort>] to discard the entry.

7.8.2.10 “Software Uploads” Menu

This menu contains choices and settings for the device update.

You can select fieldbus software, program licenses and update scripts, for example, for transfer from a PC to the controller.

You can also enable transmitted packages or delete from the controller.

7.8.2.11 “Ports and Services” Menu

This submenu contains other submenus with settings for the respective services.

Table 162: “Ports and Services” Menu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. Telnet	Opens a submenu with settings for the Telnet service
2. FTP	Opens a submenu with settings for the FTP service
3. FTPS	Opens a submenu with settings for the FTPS service
4. HTTP	Opens a submenu with settings for the HTTP service
5. HTTPS	Opens a submenu with settings for the HTTPS service
6. NTP	Opens a submenu with settings for the NTP service
7. SSH	Opens a submenu with settings for the SSH server
8. TFTP	Opens a submenu with settings for the TFTP server
9. DHCPD	Opens a submenu with settings for the DHCPD service
10. DNS	Opens a submenu with settings for the DNS service
11. IOCHECK PORT	Opens a submenu with settings for the WAGO-I/O-CHECK port
12. Modbus TCP	Opens a submenu with settings for the MODBUS TCP service
13. Modbus UDP	Opens a submenu with settings for the MODBUS UDP service
14. PLC Runtime Services	Opens a submenu with settings for the PLC runtime system services

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.11.1 “Ports and Services” > “Telnet” Submenu

This submenu contains the settings for the Telnet service.

Table 163: “Ports and Services” > “Telnet” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable/disable the Telnet service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The Telnet service is enabled.
	2. Disable	The Telnet service is disabled.
2. Firewall status	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.11.2 “Ports and Services” > “FTP” Submenu

This submenu contains the settings for the FTP service.

Table 164: “Ports and Services” > “FTP” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable/disable the FTP service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The FTP service is enabled.
	2. Disable	The FTP service is disabled.
2. Firewall status	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.11.3 “Ports and Services” > “FTPS” Submenu

This submenu contains the settings for the FTPS service.

Table 165: “Ports and Services” > “FTPS” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable/disable the FTPS service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The FTPS service is enabled.
	2. Disable	The FTPS service is disabled.
2. Firewall status	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press **[Q]**.

7.8.2.11.4 “Ports and Services” > “HTTP” Submenu

This submenu contains the settings for the HTTP service.

Table 166: “Ports and Services” > “HTTP” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable/disable the HTTP service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The HTTP service is enabled.
	2. Disable	The HTTP service is disabled.
2. Firewall status	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press **[Q]**.

7.8.2.11.5 “Ports and Services” > “HTTPS” Submenu

This submenu contains the settings for the HTTPS service.

Table 167: “Ports and Services” > “HTTPS” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable/disable the HTTPS service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The HTTPS service is enabled.
	2. Disable	The HTTPS service is disabled.
2. Firewall status	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].

7.8.2.11.6 “Ports and Services” > “NTP” Submenu

This submenu contains the settings for the NTP service.

Table 168: “Ports and Services” > “NTP” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable/disable the NTP service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The NTP service is enabled.
	2. Disable	The NTP service is disabled.
2. Port	Enter the port number of the NTP server.	
3. Time Server 1	Enter here the IP addresses of up to 4 time servers. Time server No. 1 is requested first of all. If no data can be accessed via time server No. 1, time server No. 2 is requested.	
4. Time Server 2		
5. Time Server 3		
6. Time Server 4		
7. Update Time	Specify here the update interval of the time server.	
8. Issue immediate update	To update the time immediately, irrespective of the update interval, select this menu item.	

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press [Q].
Click [OK] to apply the entry.
Click [Abort] to discard the entry.

7.8.2.11.7 “Ports and Services” > “SSH” Submenu

This submenu contains the settings for the SSH service.

Table 169: “Ports and Services” > “SSH” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	You can enable/disable the SSH server.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The SSH server is enabled.
	2. Disable	The SSH server is disabled.
2. Port	Enter the port number.	
3. Allow root login	You can enable or inhibit root access.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	Root access is permitted.
	2. Disable	Root access is not permitted.
4. Allow password login	Enable or disable the password query function.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	Password query is enabled.
	2. Disable	Password query is disabled.
5. Status of firewalling	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.11.8 “Ports and Services” > “TFTP” Submenu

This submenu contains the settings for the TFTP service.

Table 170: “Ports and Services” > “TFTP” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable or disable the TFTP server.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The TFTP server is enabled.
	2. Disable	The TFTP server is disabled.
2. Transfer Directory	Specify here the path for downloading the server directory.	
3. Status of firewalling	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.11.9 “Ports and Services” > “DHCPD” Submenu

This submenu contains the settings for the DHCPD service.

Table 171: “Ports and Services” > “DHCPD” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. DHCPD Firewalling	Opens a submenu with firewall settings for the this service for the interfaces
2. X1	Opens a submenu with the DHCPD settings for the selected interface
3. X2	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.11.10 “DHCPD” > “Xn” Submenu

This submenu contains the settings for the DHCPD service for the selected interface.

Table 172: “Ports and Services” > “DHCPD” > “Xn” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable/disable the DHCPD service for the Xn interface.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The DHCPD service is enabled.
	2. Disable	The DHCPD service is disabled.
2. Range	Enter a range of available IP addresses.	
3. Lease Time (min)	Specify the lease time here in seconds. 120 seconds are entered by default.	
4. Add static hostname	Enter a new static assignment, e.g., “01:02:03:04:05:06=192.168.1.20” or “hostname=192.168.1.20”.	
(5 + n). Static Host (n)	This displays the static assignments of MAC IDs to IP addresses.	
	0. Back to ...	Back to the higher-level menu
	1. Edit	Opens a submenu to change the selected assignment
	2. Delete	Deletes the selected assignment

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

Click [<OK>] to apply the entry.

Click [<Abort>] to discard the entry.

7.8.2.11.11 “Ports and Services” > “DNS” Submenu

This submenu contains the settings for the DNS service.

Table 173: “Ports and Services” > “DNS” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable/disable the DNS service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The DNS service is enabled.
	2. Disable	The DNS service is disabled.
2. Mode	Select the operating mode of the DNS server.	
	0. Back to ...	Back to the higher-level menu
	1. Proxy	The requests are buffered to optimize throughput.
	2. Relay	All requests are routed directly.
3. Add static hostname	Enter up to 15 fixed assignments of names for IP addresses, e.g., “192.168.1.20:hostname”.	
4. Firewall status	Opens a submenu with firewall settings for the this service for the interfaces	
(5 + n). Static Host (n)	This displays the hostnames for IP addresses.	
	0. Back to ...	Back to the higher-level menu
	1. Edit	Opens a submenu to change the selected assignment
	2. Delete	Deletes the selected assignment

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

Click [<OK>] to apply the entry.

Click [<Abort>] to discard the entry.

7.8.2.11.12 “Ports and Services” > “IOCHECK PORT” Submenu

This submenu contains settings for the WAGO-I/O-*CHECK* port.

Table 174: “Ports and Services” > “IOCHECK PORT” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Enable/disable the WAGO-I/O- <i>CHECK</i> port.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The WAGO-I/O- <i>CHECK</i> port is enabled.
	2. Disable	The WAGO-I/O- <i>CHECK</i> port is disabled.
2. Firewall status	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.11.13 “Ports and Services” > “Modbus TCP” Submenu

This submenu contains the settings for the MODBUS TCP service.

Table 175: “Ports and Services” > “Modbus TCP” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Disable or enable the MODBUS/TCP service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The MODBUS TCP service is enabled.
	2. Disable	The MODBUS TCP service is disabled.
2. Firewall status	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.11.14 “Ports and Services” > “Modbus UDP” Submenu

This submenu contains the settings for the MODBUS UDP service.

Table 176: “Ports and Services” > “Modbus UDP” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. State	Disable/enable the MODBUS UDP service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The MODBUS UDP service is enabled.
	2. Disable	The MODBUS UDP service is disabled.
2. Firewall status	Opens a submenu with firewall settings for the this service for the interfaces	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

7.8.2.11.15 “Ports and Services” > “PLC Runtime Services” Submenu

This submenu contains the settings for the PLC runtime system services.

Table 177: “Ports and Services” > “PLC Runtime Services” Submenu

Menu Item	Explanation
0. Back to ...	Back to the higher-level menu
1. General Configuration	Enter the password for port authentication.
2. CODESYS 2	Opens a submenu with service settings for CODESYS 2
3. e!RUNTIME	Opens a submenu with service settings for <i>e!RUNTIME</i>
4. Change CODESYS Runtime firewalling settings	Opens a submenu with firewall settings for the this service for the interfaces
5. Change CODESYS WebVisu firewalling settings	Opens a submenu with firewall settings for the this service for the interfaces

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

Click [<OK>] to apply the entry.

Click [<Abort>] to discard the entry.

7.8.2.11.16 “PLC Runtime Services” > “CODESYS 2” Submenu

This submenu contains the settings for the CODESYS 2 service.

Table 178: “Ports and Services” > “PLC Runtime Services” > “CODESYS 2” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Webserver enable/disable	Enable or disable the Webserver for the CODESYS web visualization.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The Webserver is enabled.
	2. Disable	The Webserver is disabled.
2. Communication enable/disable	Enable or disable the communication between the CODESYS 2 runtime system and the CODESYS 2 programming system.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	Communication is enabled.
	2. Disable	Communication is disabled.
3. Communication Port Number	Enter here the port number for communication with the CODESYS 2 programming system. The default value is 2455.	
4. Port Authentication enable/disable	Enter here whether a login is required for connecting to the device.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	Authentication via login is required.
	2. Disable	Authentication is not required.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.11.17 “PLC Runtime Services” > “e!RUNTIME” Submenu

This submenu contains the settings for the *e!RUNTIME* service.

Table 179: “Ports and Services” > “PLC Runtime Services” > “e!RUNTIME” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Webserver enable/disable	Enable or disable the Webserver for the <i>e!RUNTIME</i> web visualization.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The Webserver is enabled.
	2. Disable	The Webserver is disabled.
2. Port Authentication enable/disable	Enter here whether a login is required for connecting to the device.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	Authentication via login is required.
	2. Disable	Authentication is not required.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.11.18 “...” > “Firewall Status” Submenu

This submenu contains firewall settings for the selected service.

Table 180: “Ports and Services” > “Firewall Status” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. VPN	Enable or disable the firewall for the VPN interface and respective service.	
	0. Back to ...	Back to the higher-level menu
	1. open	Data traffic via the VPN interface is permitted.
	2. close	Data traffic via the VPN interface is not permitted.
2. WAN	Enable or disable the firewall for the WAN interface and respective service.	
	0. Back to ...	Back to the higher-level menu
	1. open	Data traffic via the WAN interface is permitted.
	2. close	Data traffic via the WAN interface is not permitted.
3. X1	Enable or disable the firewall for the X1 interface and respective service.	
	0. Back to ...	Back to the higher-level menu
	1. open	Data traffic via the X1 interface is permitted.
	2. close	Data traffic via the X1 interface is not permitted.
4. X2	Enable or disable the firewall for the X2 interface and respective service.	
	0. Back to ...	Back to the higher-level menu
	1. open	Data traffic via the X2 interface is permitted.
	2. close	Data traffic via the X2 interface is not permitted.

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.12 “SNMP” Menu

This menu contains other submenus with the SNMP settings.

Table 181: “SNMP” Menu

Parameters	Explanation
0. Back to ...	Back to the higher-level menu
1. General SNMP Configuration	Opens a submenu with general SNMP settings
2. SNMP v1/v2c Manager Configuration	Opens a submenu with settings for the SNMP v1/v2c Manager
3. SNMP v1/v2c Trap Receiver Configuration	Opens a submenu with settings for the SNMP v1/v2c trap receivers
4. SNMP v3 Configuration	Opens a submenu with settings for the SNMP v3 configuration
5. SNMP firewalling	Opens a submenu with firewall settings for SNMP
6. Secure SNMP firewalling	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

7.8.2.12.1 “SNMP” > “General SNMP Configuration” Submenu

This submenu contains the general SNMP settings.

Table 182: “SNMP” > “General SNMP Configuration” Submenu

Parameters	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. SNMP status	Enable or disable the SNMP service.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The SNMP service is enabled.
	2. Disable	The SNMP service is disabled.
2. Name of device	Enter here the device name (sysName).	
3. Description	Enter here the device description (sysDescription).	
4. Physical location	Enter here the location of the device (sysLocation).	
5. Contact	Enter here the email contact address (sysContact).	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.12.2 “SNMP” > “SNMP v1/v2c Manager Configuration” Submenu

This submenu contains the SNMP v1/v2c Manager settings.

Table 183: “SNMP” > “SNMP v1/v2c Manager Configuration” Submenu

Parameters	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. Protocol state	Enable or disable the SNMP v1/v2c protocol.	
	0. Back to ...	Back to the higher-level menu
	1. Enable	The SNMP v1/v2c protocol is enabled.
	2. Disable	The SNMP v1/v2c protocol is disabled.
2. Local community name	Specify here the community name for the SNMP manager configuration (max. 32 characters, no spaces).	

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

Click [<OK>] to apply the entry.

Click [<Abort>] to discard the entry.

7.8.2.12.3 “SNMP” > “SNMP v1/v2c Trap Receiver Configuration” Submenu

This submenu contains settings for the v1/v2c trap receivers.

Table 184: “SNMP” > “SNMP v1/v2c Trap Receiver Configuration” Submenu

Parameters	Explanation
0. Back to ...	Back to the higher-level menu
(n). Trap Receiver (n)	Opens a submenu with information on the selected v1/v2c trap receiver to delete the trap receiver
(n + 1). Add new Trap Receiver	<p>Opens a series of submenus to create a new v1/v2c trap receiver</p> <p>The following entries/selections are possible:</p> <ul style="list-style-type: none"> • IP address of the new trap receiver (management station) • Community name for the new trap receiver configuration (max. 32 characters, no spaces) • SNMP version via which the traps are sent (v1/v2c)

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press [Q].

Click [<OK>] to apply the entry.

Click [<Abort>] to discard the entry.

7.8.2.12.4 “SNMP” > “SNMP v3 Configuration” Submenu

This submenu contains settings for SNMP v3.

Table 185: "SNMP" > "SNMP v3 Configuration" Submenu

Parameters	Explanation
0. Back to ...	Back to the higher-level menu
(n). Username	Opens a submenu with information on the selected v3 user and to delete the user
(n + 1). Add new v3 User	<p>Opens a series of submenus to create a new v3 user The following entries/selections are possible:</p> <ul style="list-style-type: none"> • Authentication name (max. 32 characters, no spaces) • Authentication type (None/MD5/SHA) • Authentication key (min. 8 characters, max. 32 characters, no spaces) • Privacy type (None/DES/AES) • Privacy key (min. 8 characters, max. 32 characters, no spaces) • IP address for a trap receiver for v3 traps

To make a selection, choose the appropriate menu item.

To return to the higher-level menu, press **[Q]**.

Click **[<OK>]** to apply the entry.

Click **[<Abort>]** to discard the entry.

7.8.2.12.5 “SNMP” > “(Secure)SNMP firewalling” Submenu

These submenus contain the SNMP firewall settings.

Table 186: “SNMP” > “(Secure)SNMP firewalling” Submenu

Menu Item	Submenu Item / Explanation	
0. Back to ...	Back to the higher-level menu	
1. VPN	Enable or disable the firewall for the VPN interface and respective service.	
	0. Back to ...	Back to the higher-level menu
	1. open	Data traffic via the VPN interface is permitted.
	2. close	Data traffic via the VPN interface is not permitted.
2. WAN	Enable or disable the firewall for the WAN interface and respective service.	
	0. Back to ...	Back to the higher-level menu
	1. open	Data traffic via the WAN interface is permitted.
	2. close	Data traffic via the WAN interface is not permitted.
3. X1	Enable or disable the firewall for the X1 interface and respective service.	
	0. Back to ...	Back to the higher-level menu
	1. open	Data traffic via the X1 interface is permitted.
	2. close	Data traffic via the X1 interface is not permitted.
4. X2	Enable or disable the firewall for the X2 interface and respective service.	
	0. Back to ...	Back to the higher-level menu
	1. open	Data traffic via the X2 interface is permitted.
	2. close	Data traffic via the X2 interface is not permitted.

To make a selection, choose the appropriate menu item.
To return to the higher-level menu, press **[Q]**.

7.8.3 Configuration using “WAGO ETHERNET Settings”

The “WAGO ETHERNET Settings” program enables you to read system information about your controller, make network settings and enable/disable the Web server.

Note

**Observe the software version!**

To configure the controller, use at least Version 6.4.1.1 dated 2015-06-29 or newer of “WAGO ETHERNET Settings”!

You must select the correct COM port after starting “WAGO ETHERNET Settings”.

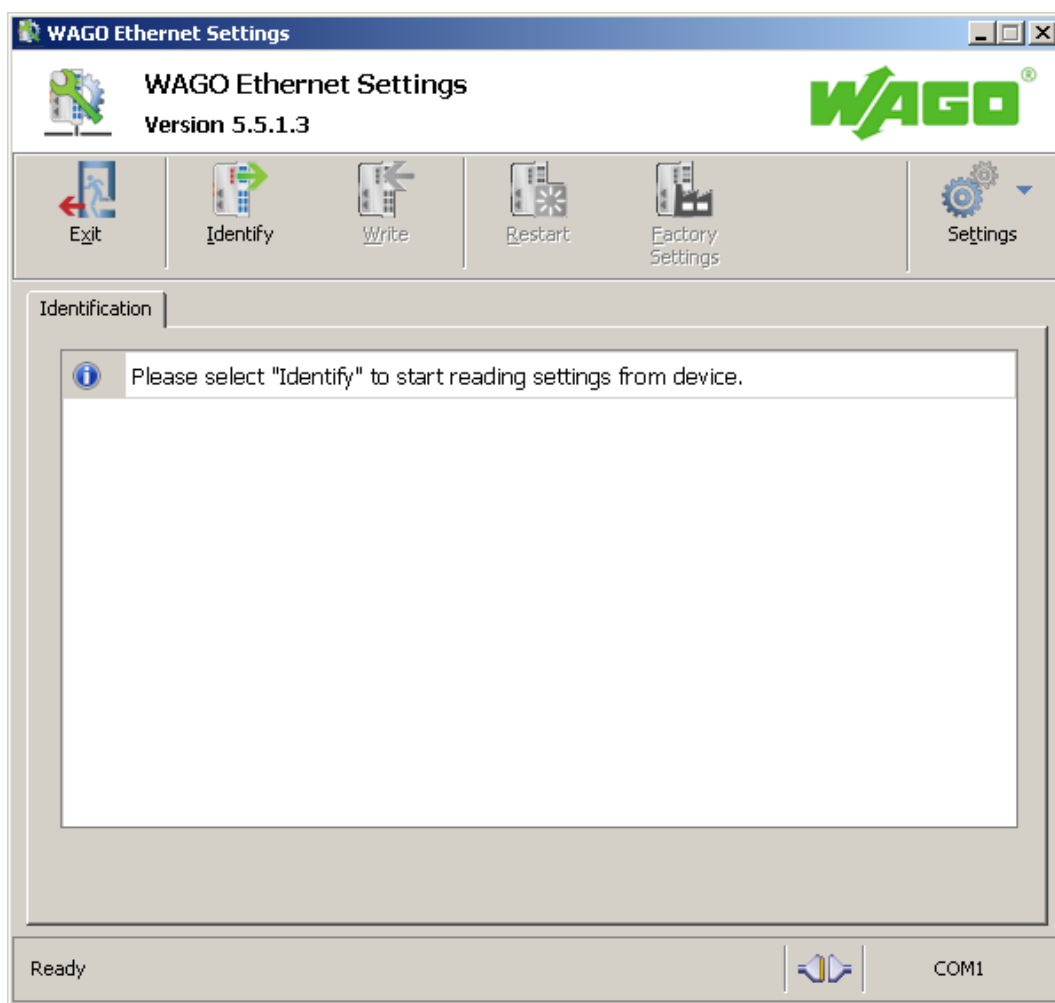


Figure 44: “WAGO ETHERNET Settings” – Start Screen

For this, click “Settings” and then “Communication”.

In the “Communication settings” window that then opens, adapt the settings to your needs.

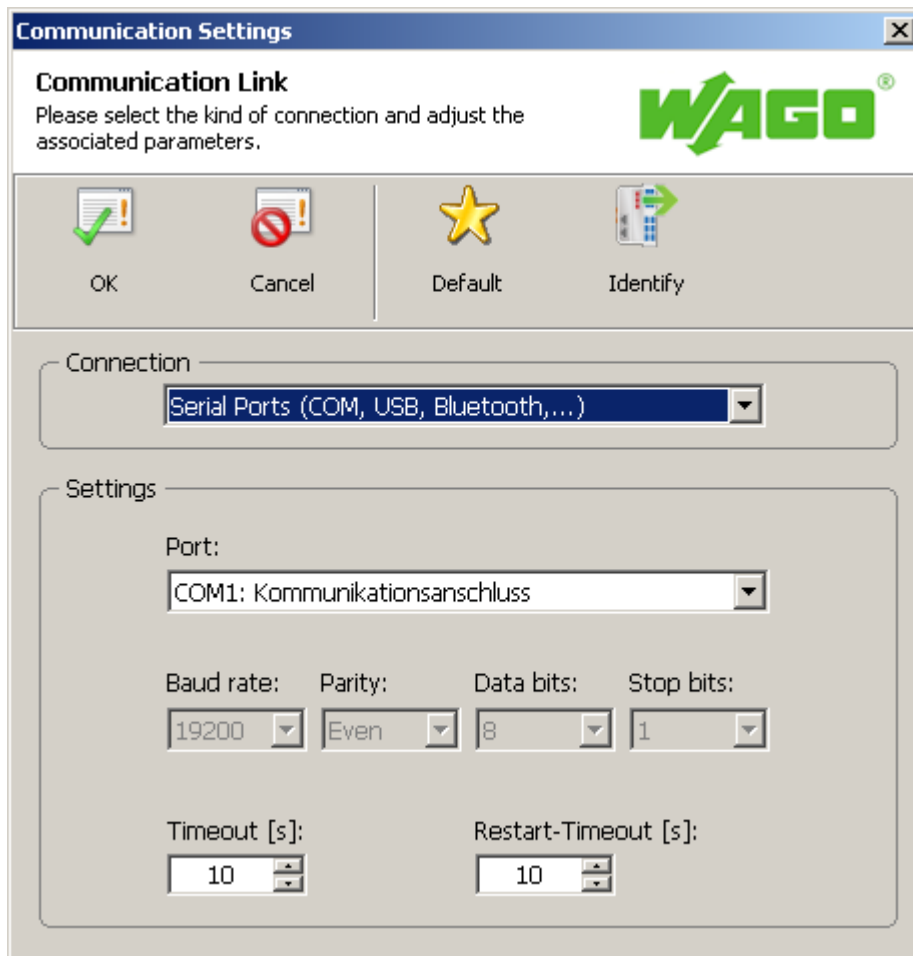


Figure 45: “WAGO ETHERNET Settings” – Communication Link


Once you have configured “WAGO ETHERNET Settings” and have clicked **[OK]**, connection to the controller is established automatically.

If “WAGO ETHERNET Settings” has already been started with the correct parameters, you can establish connection to the controller by clicking **[Identify]**.

7.8.3.1 Identification Tab

An overview of the connected device is given here.

Besides some fixed values — e.g., item No., MAC address and firmware version — the currently used IP address and the configuration method are also shown here.

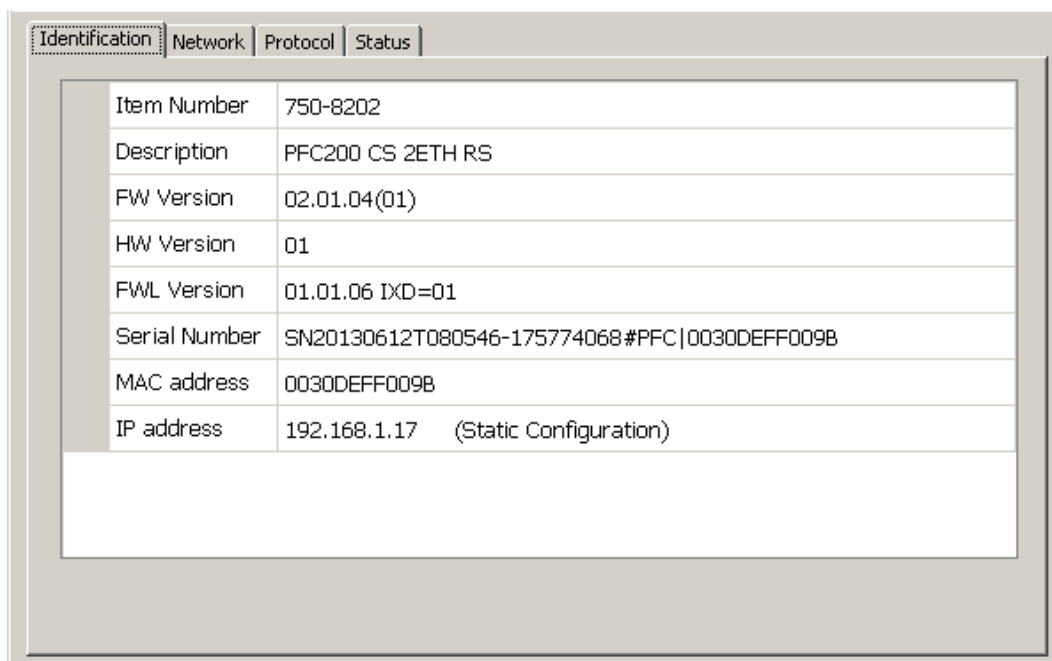

Item Number	750-8202
Description	PFC200 CS 2ETH RS
FW Version	02.01.04(01)
HW Version	01
FWL Version	01.01.06 IXD=01
Serial Number	SN20130612T080546-175774068#PFC 0030DEFF009B
MAC address	0030DEFF009B
IP address	192.168.1.17 (Static Configuration)

Figure 46: “WAGO ETHERNET Settings” – Identification Tab (Example)

7.8.3.2 Network Tab

This tab is used to configure network settings.

Values can be changed in the “Input” column, while the parameters in use are shown in the “Currently in use” column.

Parameter	Edit	Currently used
Address Source	Static Configuration	Static Configuration
IP address	192.168.1.17	192.168.1.17
Subnet Mask	255.255.255.0	255.255.255.0
Gateway	192.168.1.2	192.168.1.2
Preferred DNS-Server	192.168.1.2	192.168.1.2
Alternative DNS-Server	0.0.0.0	0.0.0.0
Time Server	192.168.1.50	192.168.1.50
Hostname		PFC200-FF009B
Domain name		
DIP-Switch IP address	DST not supported!	DST not supported!

Figure 47: “WAGO ETHERNET Settings” – Network Tab

Source

Specify how the controller will determine its IP address: Static, via DHCP or via BootP.

IP address, subnet mask, gateway

Specify the specific network parameters for static configuration.

Note



Restricted setting for default gateways!

Only the default gateway 1 can be set via “WAGO Ethernet Settings.”
The default gateway 2 can only be set in the WBM!

Preferred DNS server, alternative DNS server

Enter the IP address (when required) for an accessible DNS server when identifying network names.

Time server

Specify the IP address for a time server if setting the controller's system time via NTP.

Host name

The host name of the controller is displayed here. In the controller's initial state,

this name is composed of the string “PFCx00” and the last three bytes of the MAC address.

This standard value is also used whenever the chosen name in the “Input” column is deleted.

Domain name

The current domain name is displayed here. This setting can be automatically overwritten with dynamic configurations, e.g., DHCP.

7.8.3.3 Protocol Tab

Identification Network **Protocol** Status

☒ Web Server

HTTP-Port: 80

Additional Protocols

Please use the web base management of the device for additional protocol settings.

Figure 48: “WAGO ETHERNET Settings” – Protocol Tab

You can enable or disable the Web server.

7.8.3.4 Status Tab

Identification | Network | Protocol | **Status**

Status

- ☐ Field bus active
- ☐ Write access enabled
- ☐ Monitor-Mode enabled
- ☐ Control-Mode enabled
- ☐ Factory test mode enabled
- ☒ Terminal bus extension enabled

Blink code

Error code: 0

Argument: 0

No Error

Figure 49: “WAGO ETHERNET Settings” – Status Tab

General information about the controller status is displayed here.

The **Bus extension** check box has no function for the controller PFCx00, i.e., the bus extension is always active.

8 Run-time System CODESYS 2.3

8.1 Installing the CODESYS 2.3 Programming System

The WAGO target files must also be included for the installation of CODESYS. These contain all device-specific information for the WAGO 750/758 product series.

Proceed as described below to install the CODESYS 2.3 programming software on a personal computer.

1. Insert the “WAGO-I/O-PRO” CD into your computer drive.
2. To install the programming system, follow the instructions that appear on your screen. A successful installation is indicated by a CODESYS icon on your desktop.

8.2 First Program with CODESYS 2.3

This section uses an example to explain the relevant steps required for the creation of a CODESYS project. It is intended as a set of quick start instructions and does not address the full functional range of CODESYS 2.3.



Note

Additional information

For a detailed description of the full range of functions, refer to the “Manual for PLC Programming using CODESYS 2.3” manual available on the “WAGO-I/O-PRO” (759-911) CD.

8.2.1 Start the CODESYS Programming System

Start CODESYS by double clicking on the CODESYS pictogram on your desktop using the Start menu in your operating system. To do this, click on the “Start” button and choose **Programs > WAGO Software > CODESYS > CODESYS V2.3**.

8.2.2 Creating a Project and Selecting the Target System

1. In the menu bar click on **File** and select **New**. The “Target system settings” window then opens. Here, all available target systems that can be programmed with CODESYS 2.3 are listed.
2. Open the selection box in the “Target system settings” window and select the fieldbus controller you are using. In the example show here this is the PFC200 CS 2ETH RS 3G “WAGO_750-8207”.

3. Click on **[OK]**. The “Target system settings” configuration window then opens.

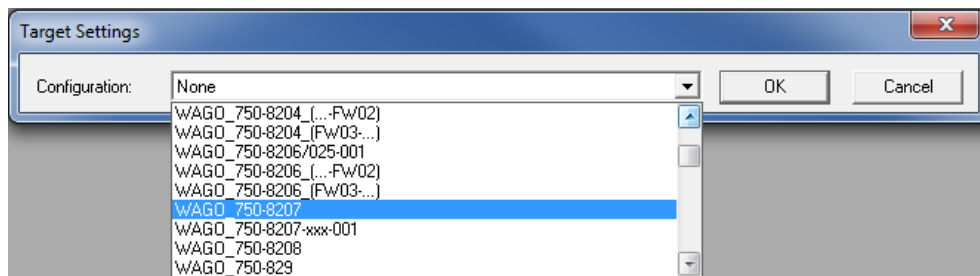


Figure 50: Target System Settings (1)

4. To accept the default configuration for the fieldbus controller click **[OK]**. The “New component” window opens.

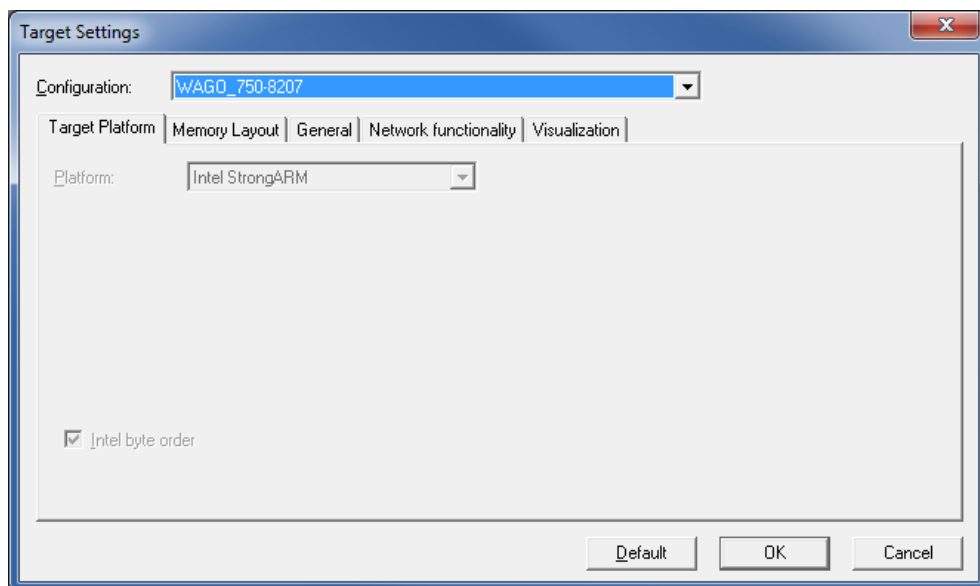


Figure 51: Target System Settings (2)

5. In this “New component” window create a new program function block. In the example shown here, the new function block “PLC_PRG” is created in the “ST” programming language.
6. Click on [OK] to create the project. The programming interface opens.

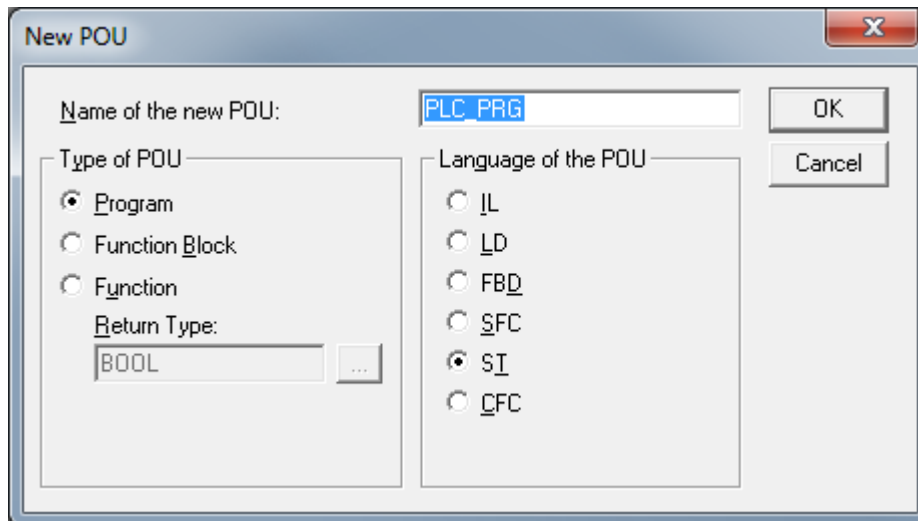


Figure 52: Creating a New Function Block

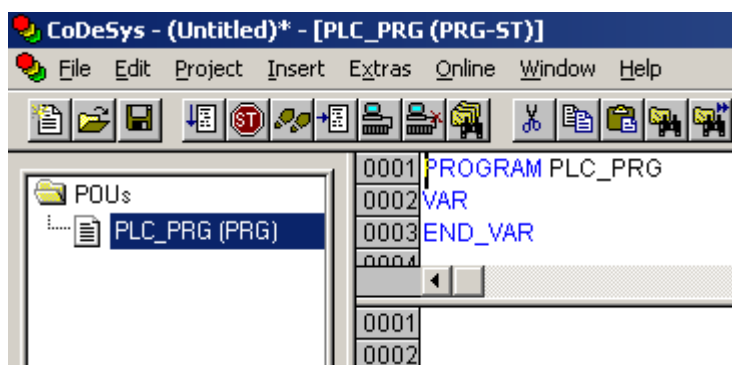


Figure 53: Programming Interface with the PLC_PRG Program Module

8.2.3 Creating the PLC Configuration



Note

Procedure for Creating the PLC Configuration

The procedure explained in this section describes the PLC configuration for the I/O modules connected to the controller.

Information about the controller function for any fieldbuses connected to the system is given in the section on the specific fieldbus.

The PLC configuration is used to configure the fieldbus controller, along with the connected I/O modules and to declare variables for accessing the inputs and outputs of the I/O modules.

1. Click on the “Resources” tab.

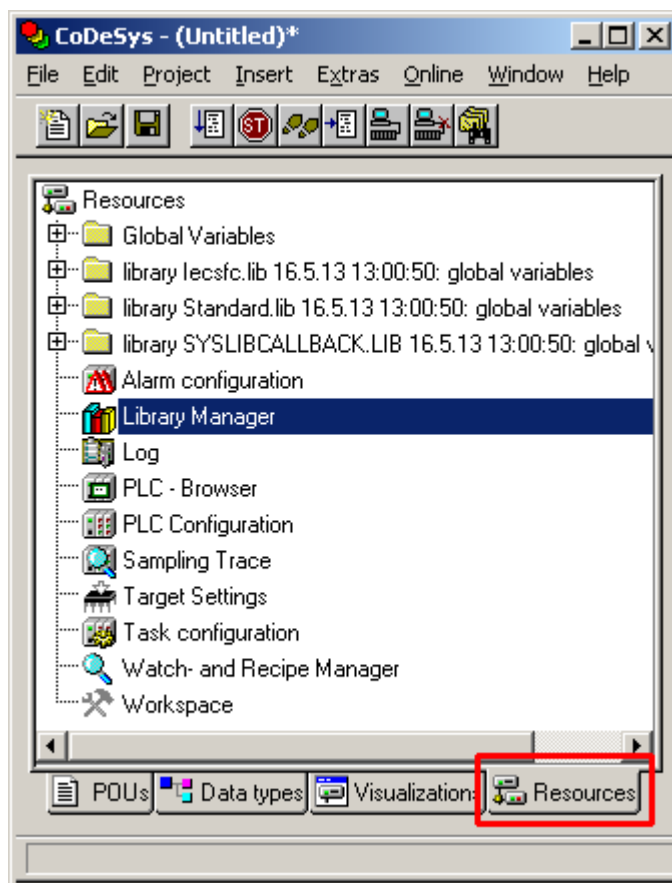


Figure 54: “Resources” Tab

2. In the left window double-click on “PLC configuration”. The PLC configuration for the controller opens.

3. Right-click on the entry “K-Bus[FIX]” and then select “Edit” in the contextual menu. The “configuration” dialog window then opens.

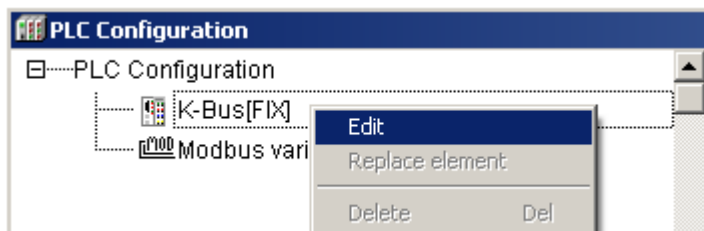


Figure 55: Control Configuration – Edit

4. There are three options for accepting the topology for the I/O modules connected to the fieldbus controller. The simplest way is to scan in the topology using WAGO-I/O-CHECK. To do this, click on the “Start WAGO-I/O-CHECK and scan” button.

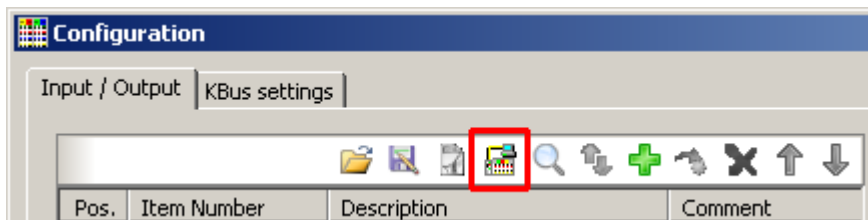


Figure 56: “Start WAGO-I/O-CHECK and Scan” Button

Note



Ensure proper installation of WAGO-I/O-CHECK!

This function requires that the latest version of WAGO-I/O-CHECK be installed and the IP address set under “Online > Communication parameters”, as otherwise communication will not be possible.

5. WAGO-I/O-CHECK is started.

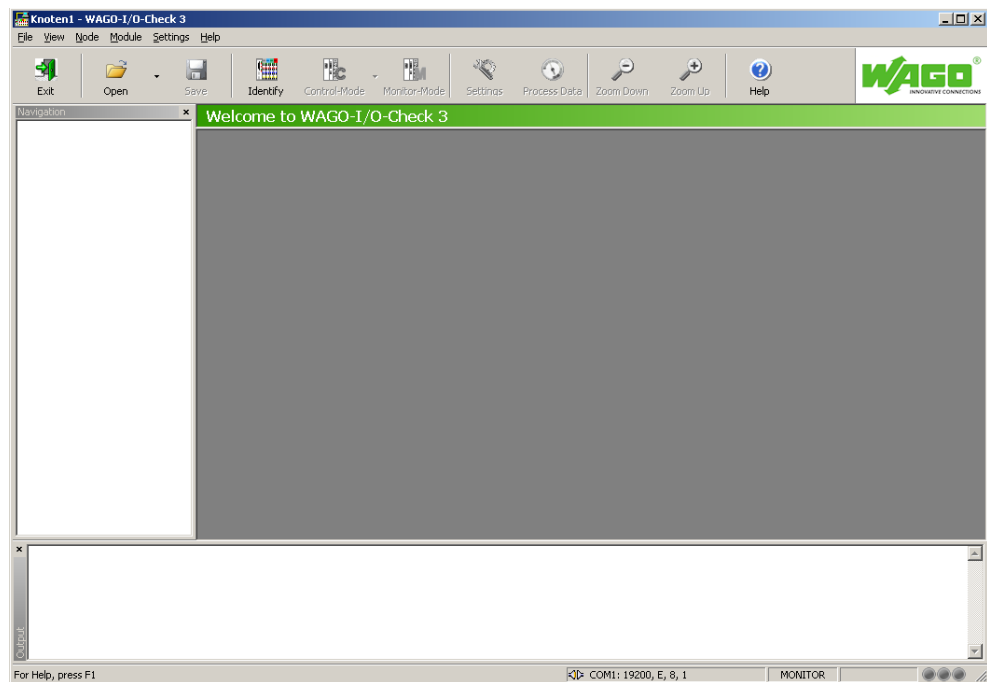


Figure 57: WAGO-I/O-CHECK – Starting Screen

6. To connect to the controller and read in the module configuration, click **[Identify]**.
7. If this action is successful click **[Save]** and exit WAGO-I/O-CHECK.

8. The detected I/O modules then appear in the configuration window.

Note



Passive I/O Modules

Remember that passive I/O modules, such as a power supply module (750-602) or end module (750-600) will not be shown in the I/O configurator.

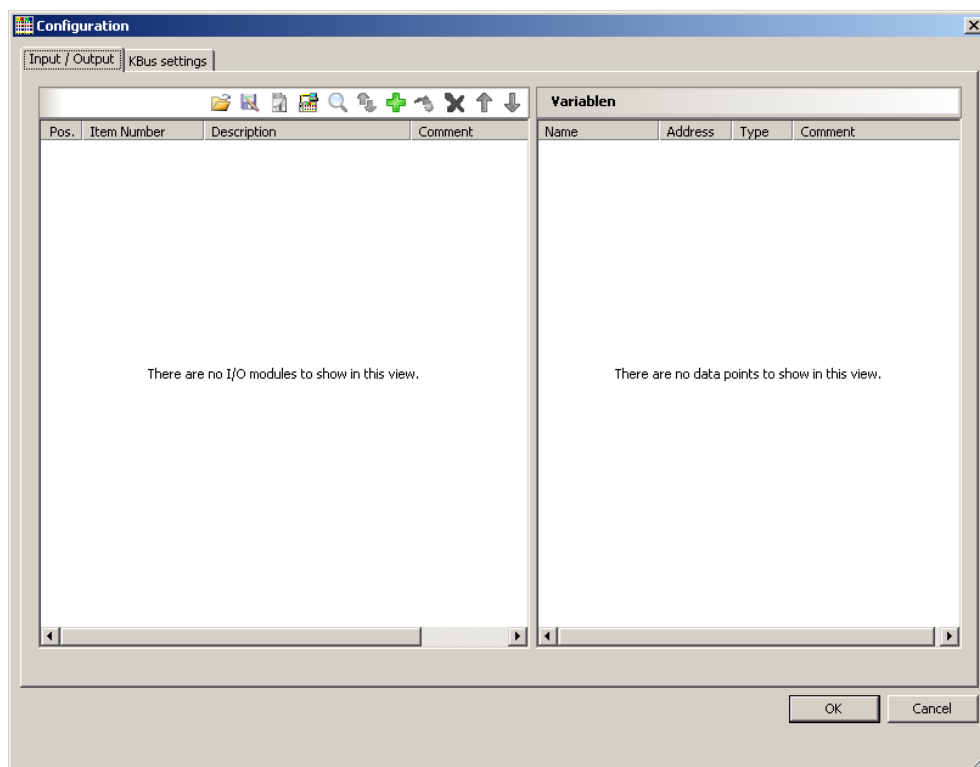


Figure 58: I/O Configurator Empty

9. You can use the **[Add]** button to add new I/O modules to manually define or change the configuration.



Figure 59: "Add I/O Modules" Button

10. You can select a module in the new “Module selection” window that then appears.

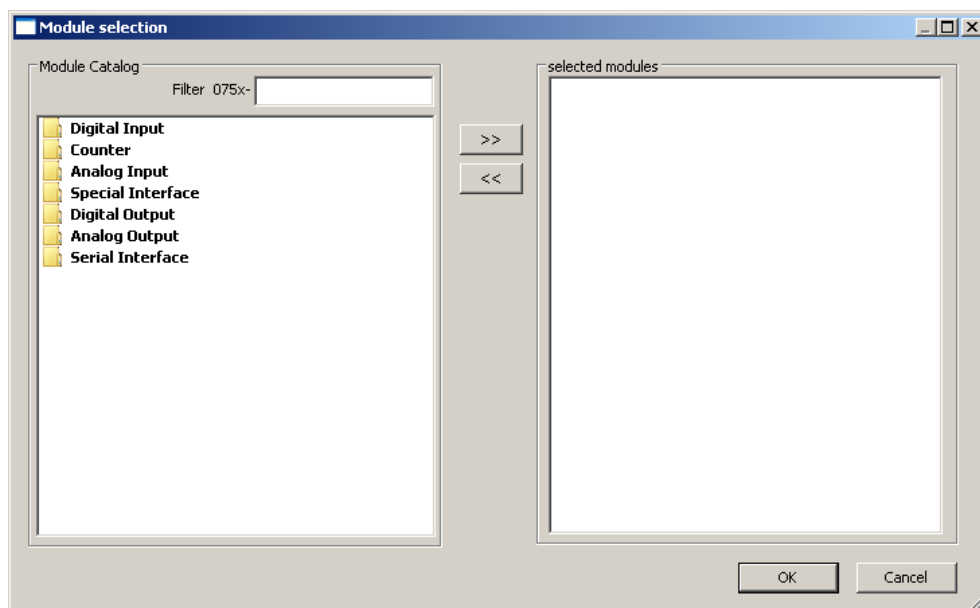


Figure 60: “Module Selection” Window

11. You can change the position of an I/O module by marking it and then using the arrow buttons at the right edge of the window to move it up or down.

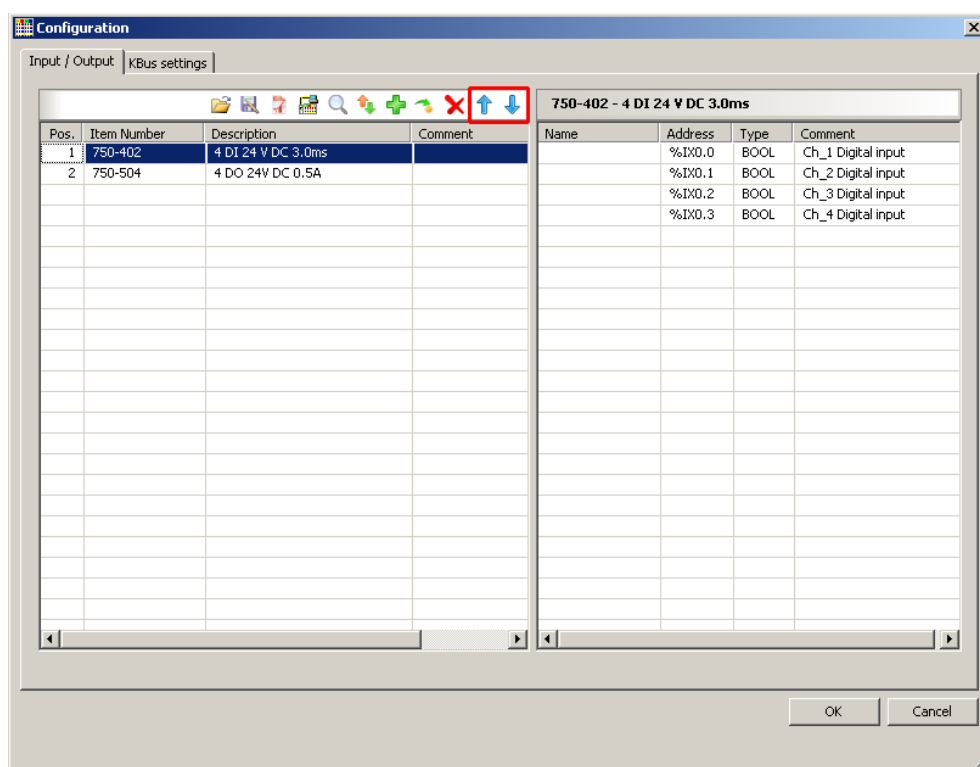


Figure 61: I/O Configurator with Defined I/O Modules

12. Use **[Import configuration from file]** to add a configuration imported previously using WAGO-I/O-CHECK.

13. To close the I/O Configurator, click **[OK]**.
14. The individual inputs and outputs of the selected I/O module are displayed in the right half of the configuration window.
Here, you can declare a dedicated variable in the “Name” column for each input and output, e.g., “Output_1”, “Output_2”, “Input_1”, “Input_2”.

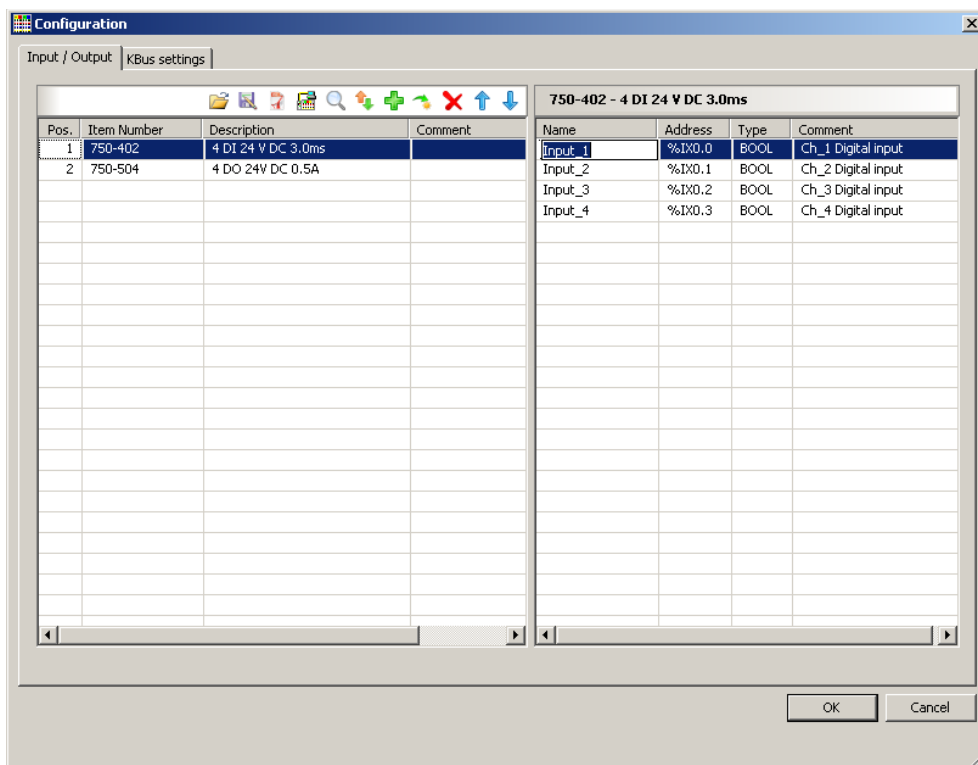


Figure 62: Variable declaration

15. The added I/O modules appear in the control configuration under “K-Bus[FIX]” with their associated fixed addresses and, where applicable, their previously set variable name.

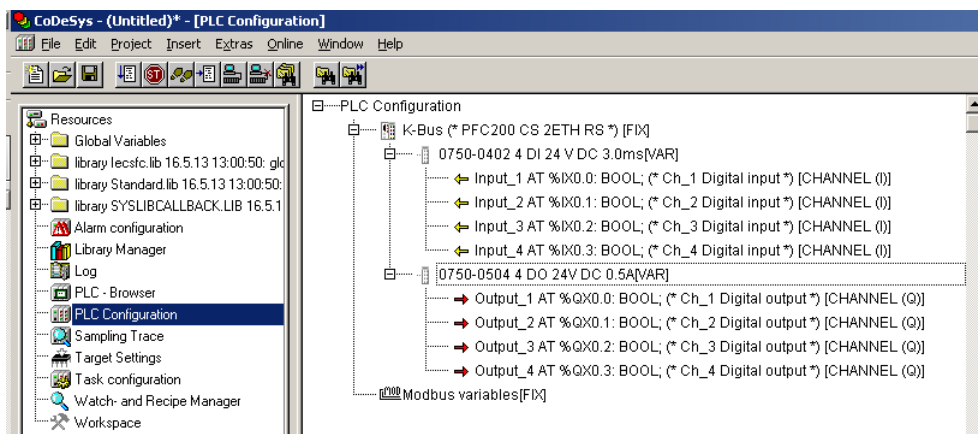


Figure 63: Control Configuration: I/O Modules with Their Associated Addresses

8.2.4 Editing the Program Function Block

To edit the PLC_PRG program function block, go to the “Function block” tab and double-click on the PLC_PRG program module.

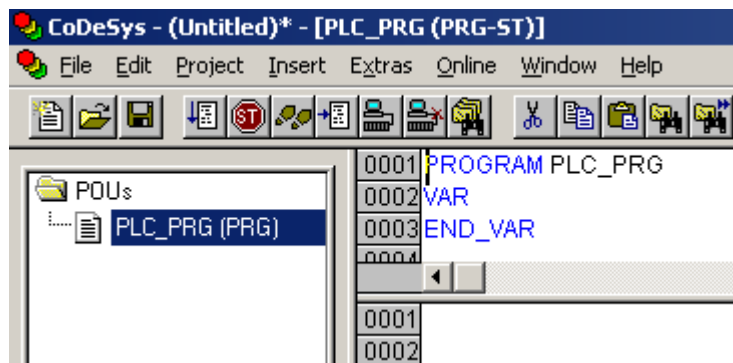


Figure 64: Program Function Block

The following example illustrates the editing of the program function block. To do this, an input is assigned to an output:

1. Press **[F2]** to open the Input assistant, or right click and select “Input assistant” from the contextual menu.

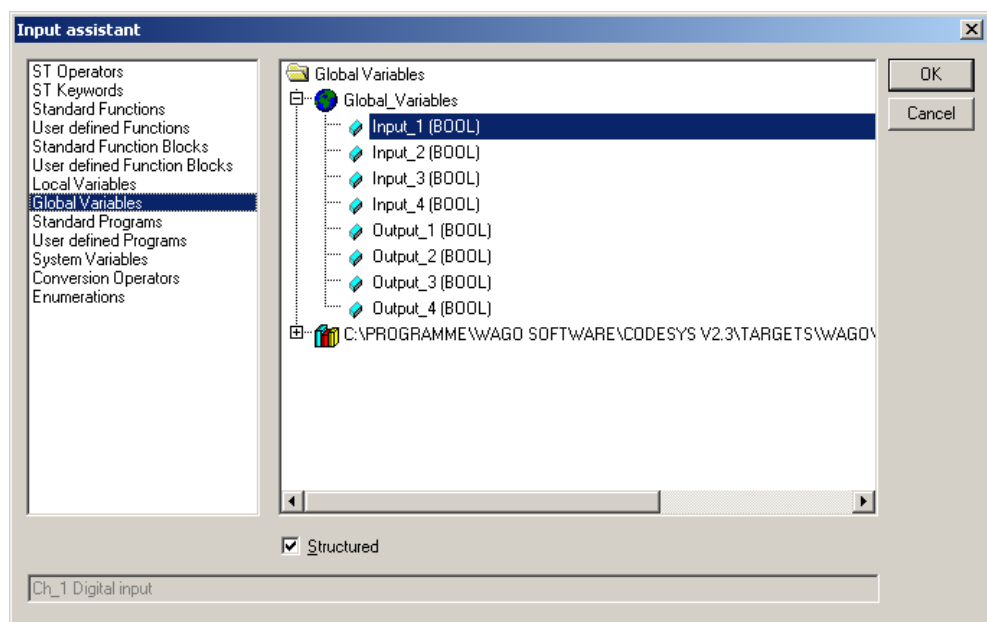


Figure 65: Input Assistant for Selecting Variables

2. Under “Global variables” select the previously declared variable “Output_1” and click **[OK]** to add it.
3. Enter the allocation “=” behind the variable name.

4. Repeat Step 2 for the “Input_1” variable.

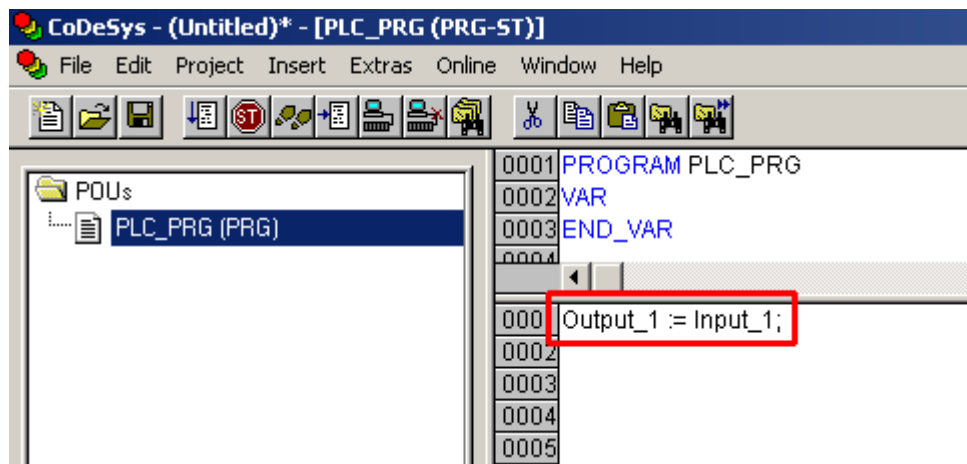


Figure 66: Example of an Allocation

5. To compile, click on **Project > Compile all** in the menu bar.

8.2.5 Loading and Running the PLC Program in the Fieldbus Controller (ETHERNET)

Requirement:

- The simulation is deactivated (**Online** > **Simulation**).
- The PC is linked to the controller via ETHERNET. Refer to Section “Device Description” > ... > “ETHERNET – X1, X2 Network Connection”.

Proceed as follows:

1. In the menu bar click on **Online** and select **Communication parameters** The “Communication Parameters” window opens.
2. To select a communication link, click on [New ...] in the “Communication Parameters” window. A window opens in which you can define a communication link.

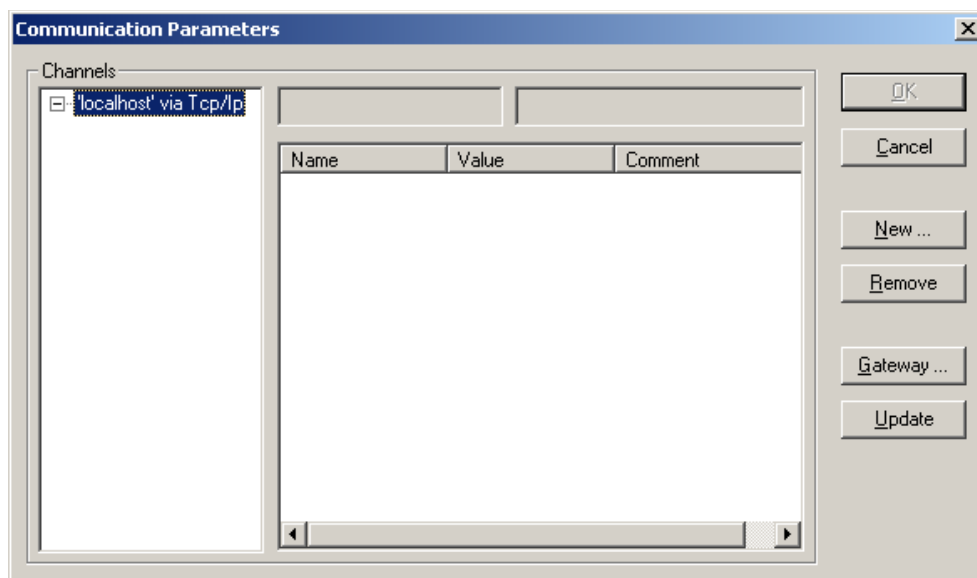


Figure 67: Creating a Communication Link – Step 1

3. In the “Name” field enter a designation for your fieldbus controller and then click on “Tcp/Ip (Level 2 Route)”. Then click **[OK]**.

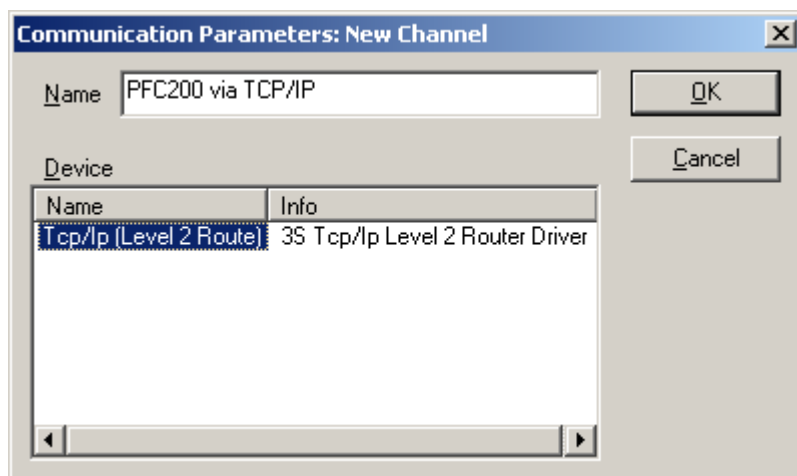


Figure 68: Creating a Communication Link – Step 2

4. In the “Communication Parameters” window enter the **IP address of your fieldbus controller** in the “Address” field and then press Enter. To close the window, click on **[OK]**.
To select an already created controller, select it in the left window and then click on **[OK]**.

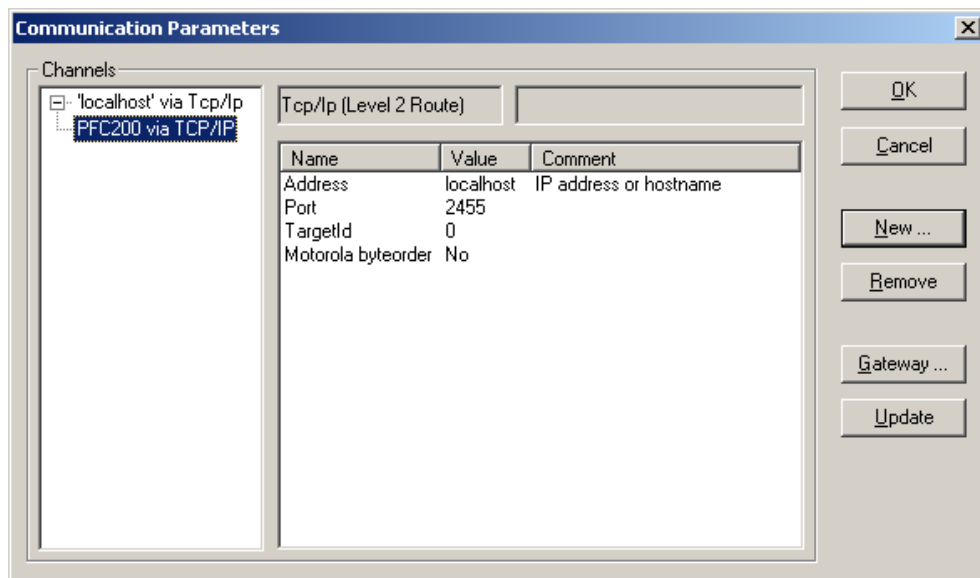


Figure 69: Creating a Communication Link – Step 3

5. Transfer the PLC program by clicking on **Online** in the menu bar and select **Login**.
6. Ensure that the Run/Stop switch for the fieldbus controller is set to “Run”.
7. Start the PLC program by clicking on **Online > Start** in the menu bar.

8.2.6 Creating a Boot Project

Create a boot project to ensure that the PLC program starts automatically again after a fieldbus controller restart. In the menu bar select **Online > Create boot project**. You must be logged in to CODESYS to use this function.



Note

Automatic loading of the boot project

In addition, you can load the boot project automatically when starting the fieldbus controller. Click on the “Resources” tab and open “Target system settings”. Select the “General” tab and “Load boot project automatically”.

If a boot project (DEFAULT.PRG and DEFAULT.CHK) is present under */home/codesys* and the “Run/Stop” switch of the fieldbus controller is set to “Run”, the fieldbus controller automatically starts with the processing of the PLC program. The PLC program is not started if the switch is set to “Stop”.

If a PLC program is running in the fieldbus controller, a PLC task starts with the reading of the fieldbus data (only with fieldbus controllers and fieldbus connection), the integrated input and output data and the I/O modules. The output data changed in the PLC program is updated after the PLC task is processed. A change in operating mode (“Stop/Run”) is only carried out at the end of a PLC task. The cycle time includes the time from the start of the PLC program to the next start. If a larger loop is programmed within a PLC program, the task time is prolonged accordingly. The inputs and outputs are updated during processing. These updates only take place at the end of a PLC task.

8.3 Syntax of Logical Addresses

Access to individual memory elements according to IEC 61131-3 is possible using only the following special symbols:

Table 187: Syntax of Logical Addresses

Item	Prefix	Description	Notes:
1	%	Starts the absolute address	-
2	I	Input	
	Q	Output	
3	M	Flag	Data width
	X	Single bit	
	B-	Byte (8 bits)	
	W	Word (16 bits)	
4	D	Double word (32 bits)	
		Address	

Two examples:

Addressing by word	%QW27 (28th word)
Addressing by bit	%IX1.9 (10th bit in word 2)

Enter the character string of the absolute address without empty spaces. The first bit of a word has an address of 0.

8.4 Creating Tasks

Set the time response and the priority of individual tasks in the task configuration.

Note



Watchdog

In an application program without task configuration, there is no watchdog that monitors the cycle time of the application program (PLC_PRG).

Create a task as follows:

1. Open the task configuration by double-clicking on the “Task configuration” module in the “Resources” tab.

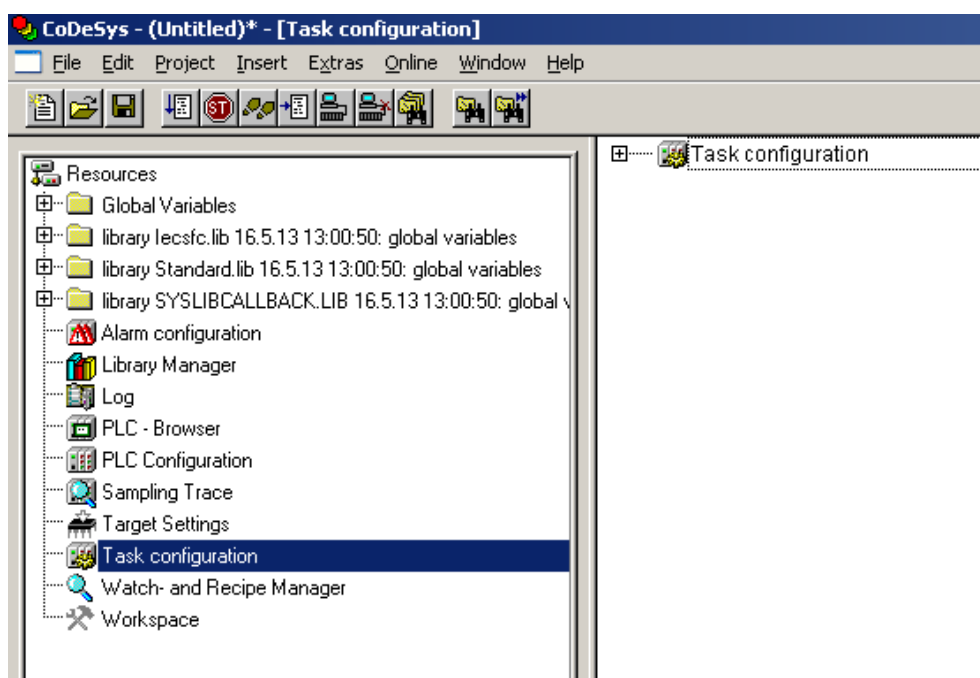


Figure 70: Task Configuration

2. To create a task right-click on “Task configuration” and in the contextual menu select “Attach task”.

3. To assign a new name to the task (e.g. PLC_Prog), click on “New Task”. Then select the type of task. In this example, this is the “cyclic” type.

Note



Observe the cycle time!

The minimum cycle time for I/O-based tasks is 2 milliseconds (ms)!

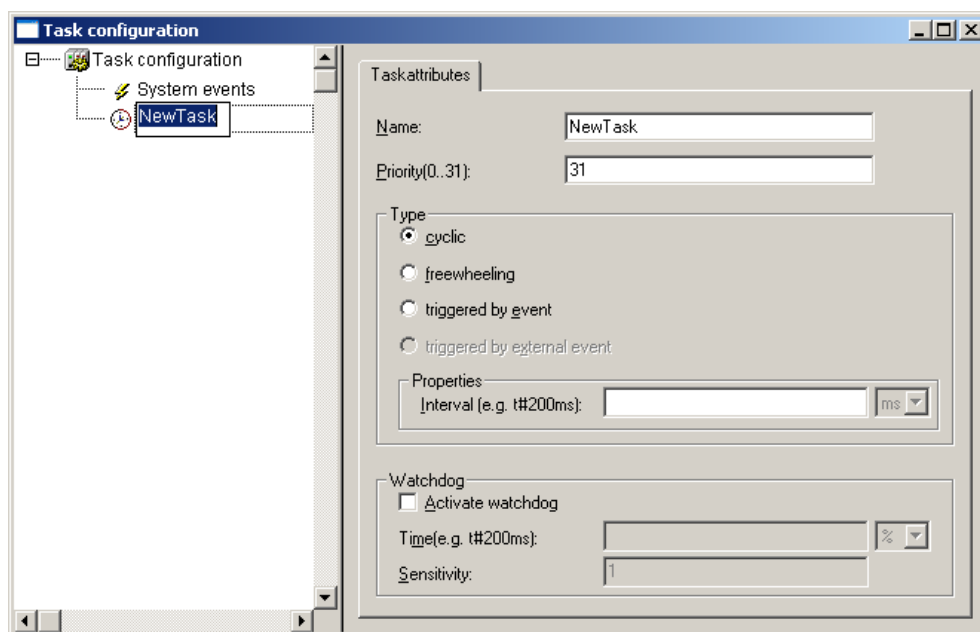


Figure 71: Changing Task Names 1

4. Add the program module PLC_PRG that you have just created (see Section “Editing the Program Modules”). To do this, right-click on the “Clock” symbol and in the contextual menu select “Attach program call-up”. Then, click the [...] button and [OK].

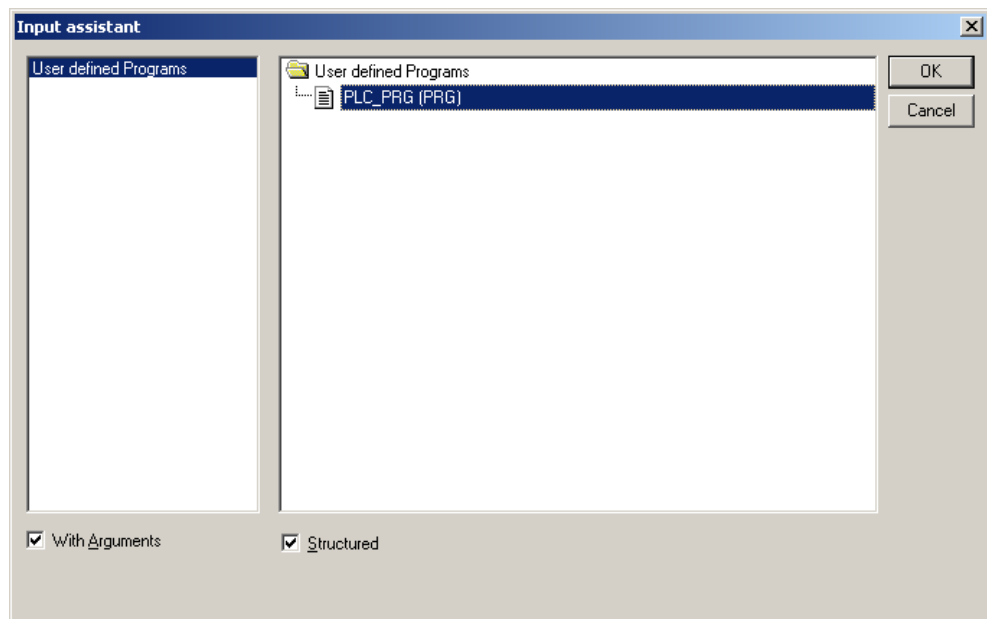


Figure 72: Call-up to Add to the Program Module

5. Compile the example program by selecting **Project > Rebuild all** in the context menu.

8.4.1 Cyclic Tasks

You can assign a priority for each task in order to establish the task processing sequence.

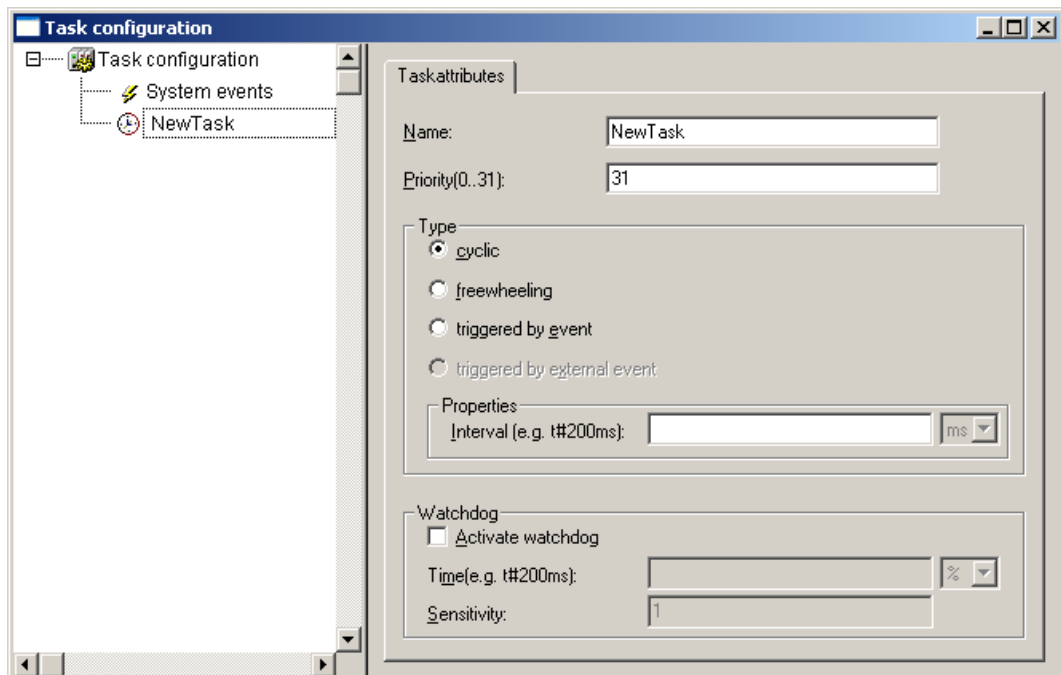


Figure 73: Cyclic Task



Note

Order of Task Processing

The priorities given below do not specify the order of task processing. The tasks start in an arbitrary order.

Priority 0 ... 5:

Important arithmetic operations and synchronized access to I/O module process images are to be carried out as tasks with the highest priorities 0 ... 5. These tasks are processed fully according to priority and correspond to Linux[®] RT priorities -79 through -74.

Priority 6 ... 20:

Real-time access, such as access to ETHERNET and the file system, to fieldbus data and to the RS-232 interface (when available) are to be carried out as tasks with average priorities 6 ... 20. These tasks are processed fully according to priority and correspond to Linux[®] RT priorities -40 through -26.

Priority 21 ... 31:

Applications such as long-lasting arithmetic operations and non-real-time-relevant access to ETHERNET and the file system, to fieldbus data and the RS-232 interface (when provided) are to be carried out as tasks with the lowest priorities 21 ... 31. No priority distinction is made between tasks of priorities 21 ... 31.

These tasks all receive the same computing time from the operating system (“Completely Fair Scheduler” procedure).

8.4.2 Freewheeling Tasks

So-called freewheeling tasks are not processed in cycles. Their processing depends solely on the current capacity of the system. The input field “Priority (0 ... 31)” is provided for freewheeling tasks without a function. These tasks are handled as tasks with priority 21 ... 31.

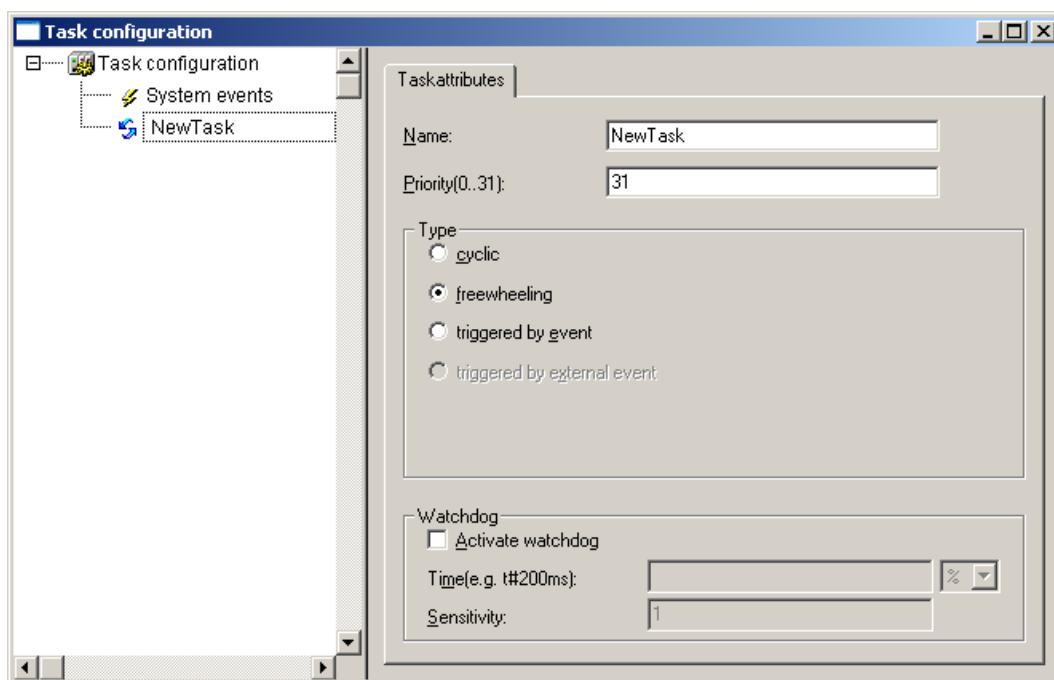


Figure 74: Freewheeling Task

Note



PLC-PRG as Freewheeling Task without Task Configuration

If you do not perform any task configuration, the program PLC_PRG is carried out with the lowest priority at an interval of 10 ms. The runtime of “freewheeling tasks” is not monitored by a CODESYS watchdog.

8.4.3 Debugging an IEC Program

If the IEC program is debugged with breakpoints, the behavior on actuation of the mode selector switch is defined as follows:

Provided that a task is not located on a breakpoint, RUN and STOP from the user interface (IDE) and from the mode selector switch (BAS) always have an effect on all tasks (case 1 and case 2).

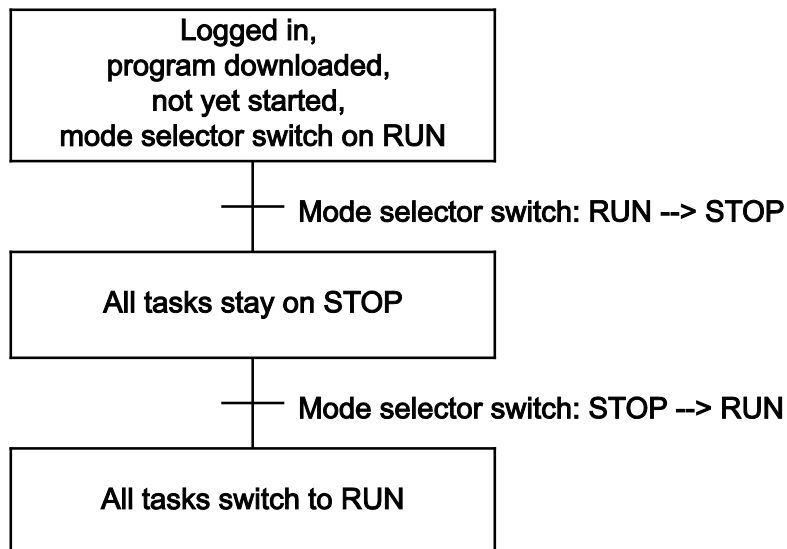


Figure 75: Debugging (Case 1)

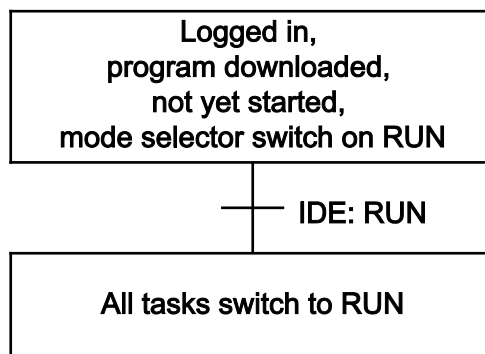


Figure 76: Debugging (Case 2)

If the mode selector switch and the STOP function of the user interface are used simultaneously, the mode selector switch has priority (case 3 and case 4).

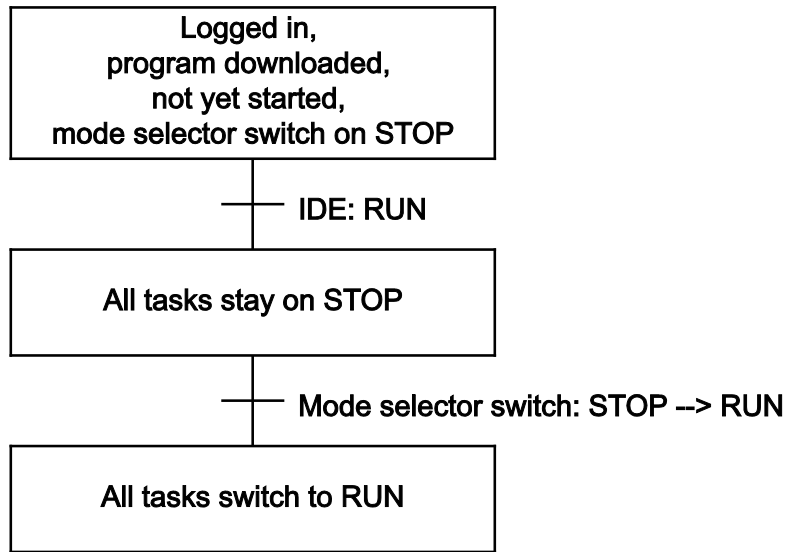


Figure 77: Debugging (Case 3)

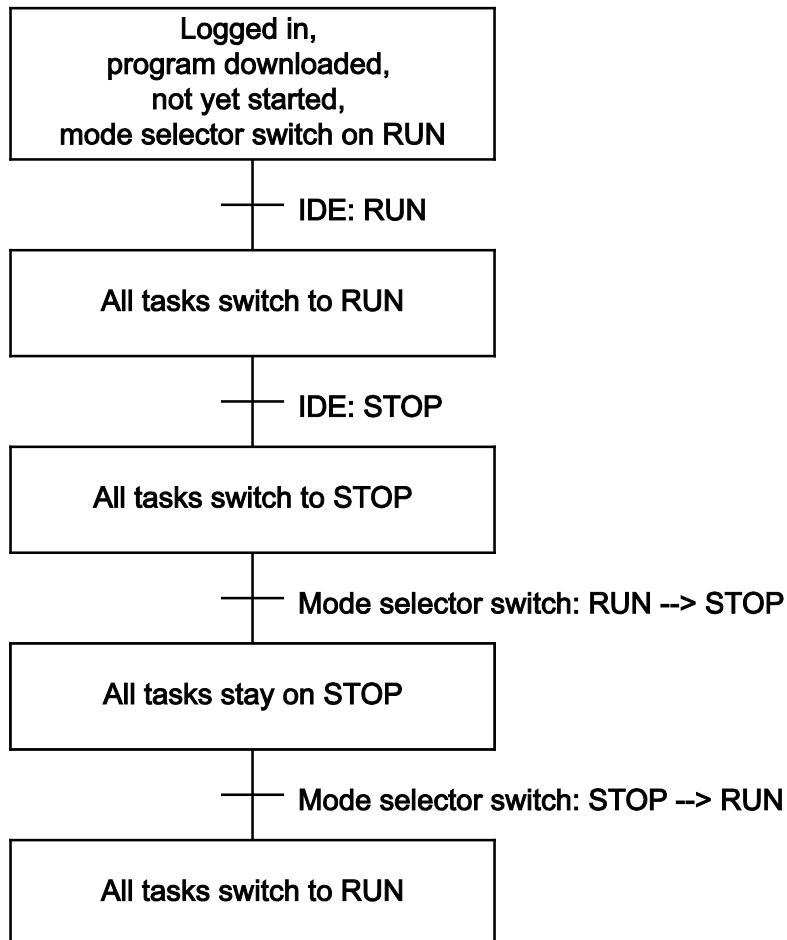


Figure 78: Debugging (Case 4)

As soon as a task is located at a breakpoint, only all other tasks can be controlled with the mode selector switch.

Exception: If the mode selector switch is on STOP, the debug task is also no longer processed.

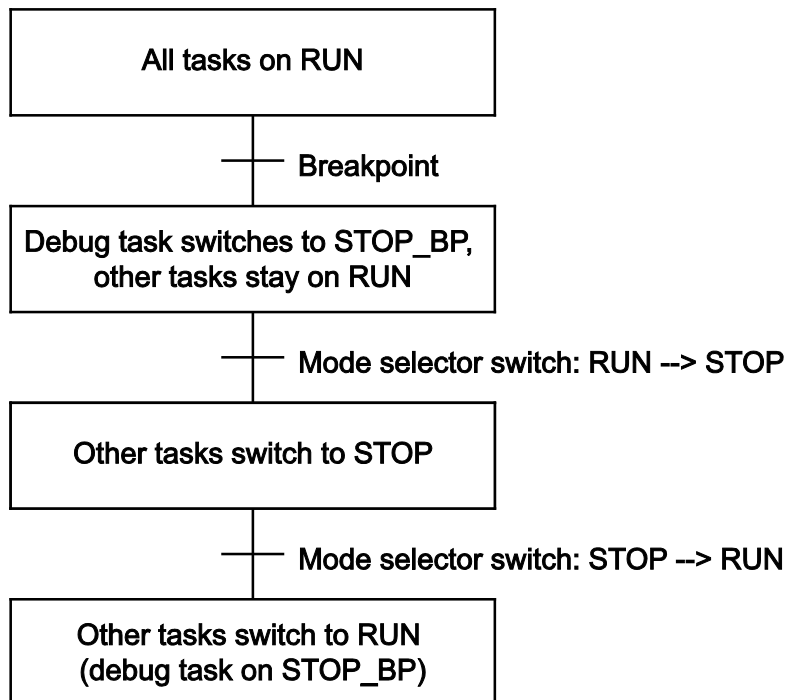


Figure 79: Debugging (Case 5)

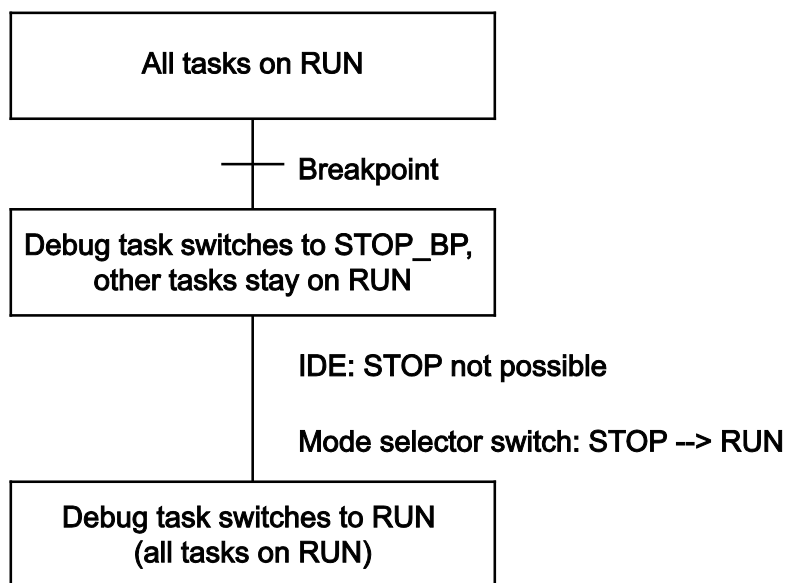


Figure 80: Debugging (Case 6)

If a task is at a breakpoint and the connection to the IDE is broken (e.g., by logging out), all breakpoints are deleted.

The debug task stays at the current position until the next time the mode selector switch is switched from STOP to RUN. In this case, the task continues to run from the current position (case 7).

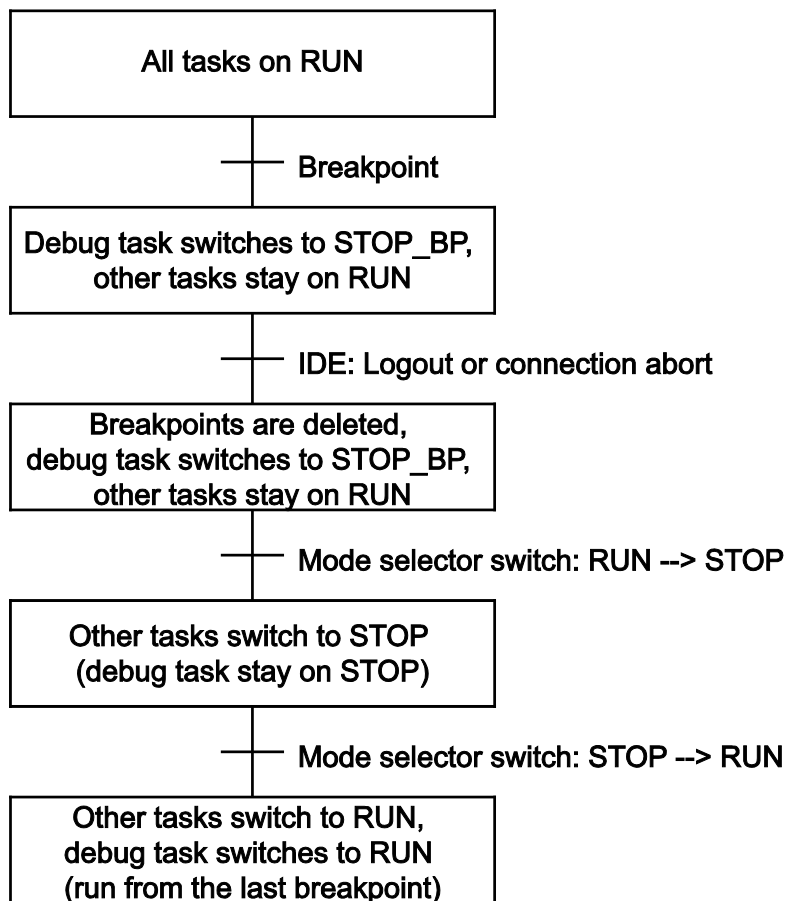


Figure 81: Debugging (Case 7)

8.5 System Events

Event tasks can be used in the CODESYS task configuration in addition to cyclical tasks. Event tasks call up certain events in the device.

To activate events and define a program to be called up, open the window “Task configuration” in the “Resources” tab in the CODESYS development environment.

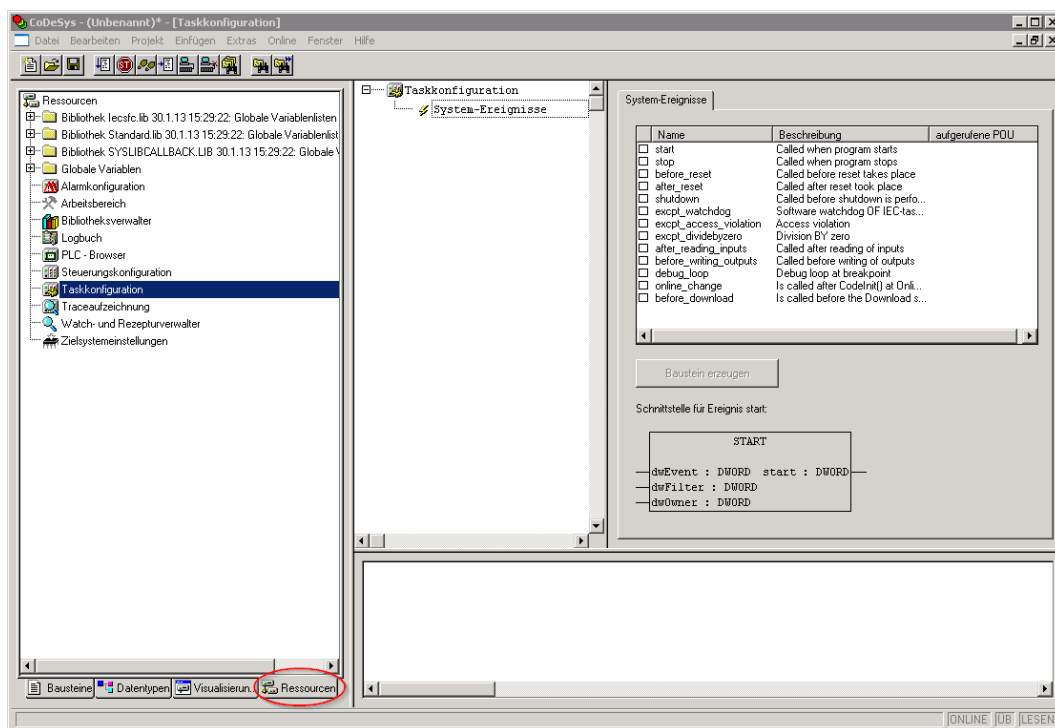


Figure 82: CODESYS – System Events

Note



Do not set debug points in the event handlers!

Debug points in event handlers can lead to unforeseeable errors and must therefore not be set!

The following events can be activated:

Table 188: Events

Name	Description
start	The event is called directly after the user program starts.
stop	The event is called directly after the user program stops.
before_reset	The event is called directly before the user program is reset.
after_reset	The event is called directly after the user program is reset.
shutdown	The event is called directly before the user program is shutdown.
excpt_watchdog	The event is called if a task watchdog is recognized.
excpt_access_violation	The event is called if a memory access error to an invalid memory area is recognized. (incorrect pointer, invalid array index, invalid data descriptor)
excpt_dividebyzero	The event is called if a division by zero is recognized.
after_reading_inputs	The event is triggered after reading all of the inputs independent of the user program.
before_writing_outputs	The event is triggered before writing all of the outputs independent of the user program.
debug_loop	This event is triggered at every task call, if a breakpoint was reached in this task and the processing of this task is therefore blocked.
online_change	This event is called up after initialization of the program on an online change.
before_download	This event is always called up before a download from the IDE to the device takes place.

Note



Application stops on a non-defined event handler!

If “excpt” events occur in the system and an event handler has not been defined, the application goes into the “Stop” status.

8.5.1 Creating an Event Handler

The example here is provided to illustrate how to define and use an event handler. The event handler “except_dividebyzero” is used in this example.

First, a program is generated in the PLC_PRG- module which provokes division by 0.

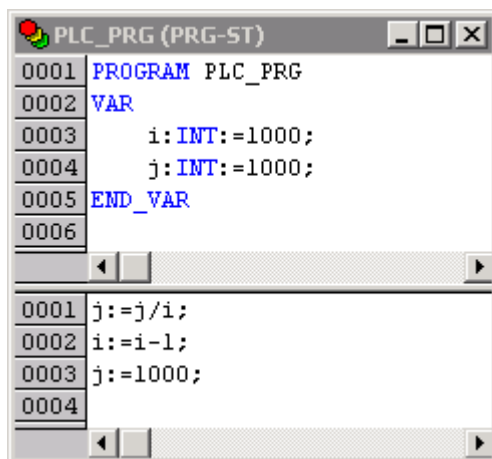


Figure 83: CODESYS Program Provokes Division by “0”

After this, the system event “except_dividebyzero” is activated in the Task Configurator and the name of the event handler to be generated is entered in the column “Called POU”.

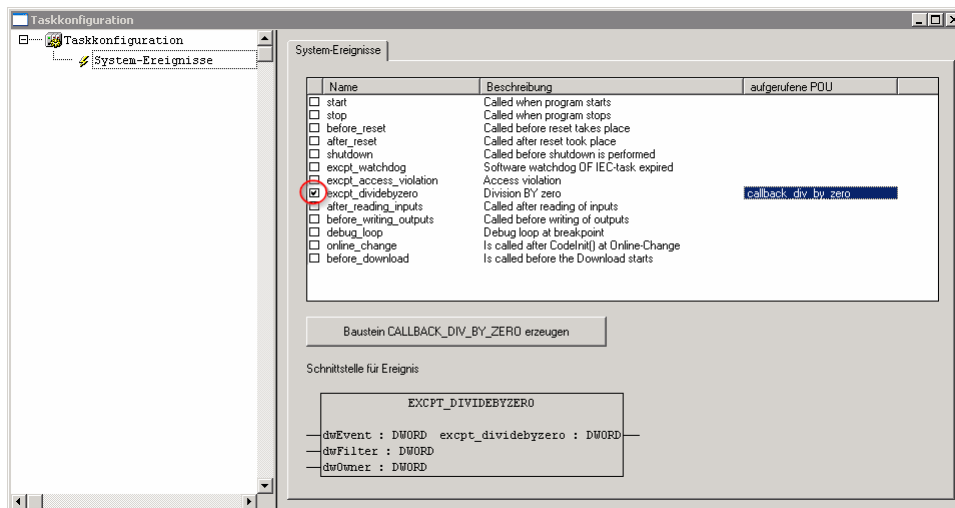


Figure 84: CODESYS – Creating and Activating an Event Handler

To generate the event handler, click **[Generate CALLBACK_DIV_BY_ZERO function block]**.

A new function having the defined name then appears in the “Function blocks” tab.

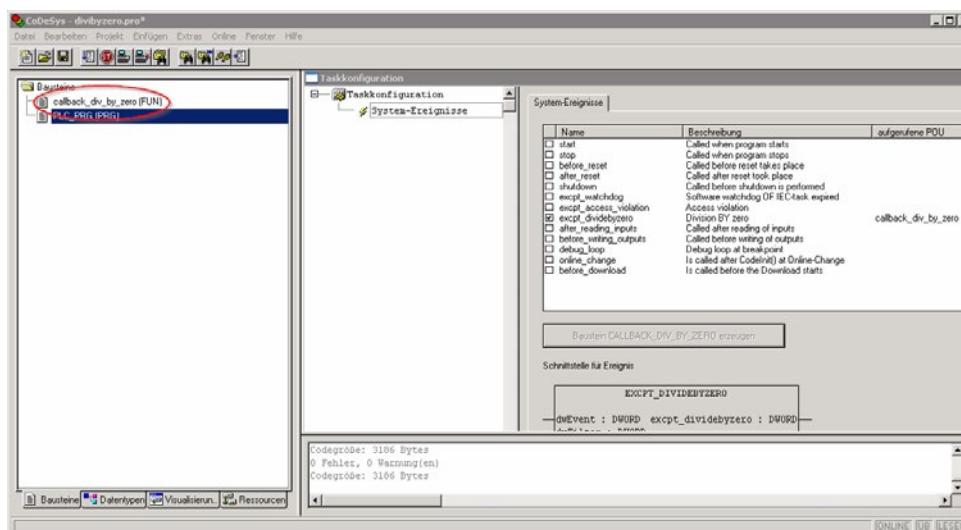


Figure 85: CODESYS – New Module has been Generated

Handling for the event that has occurred is now programmed in this new function.

In the example here, the event is documented in a global variable.

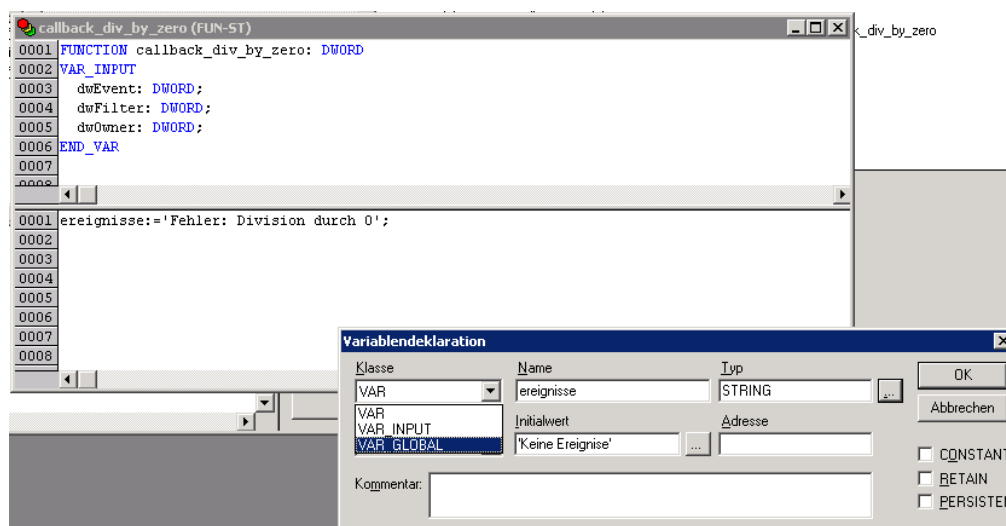


Figure 86: CODESYS – Enter the Event in a Global Variable

The newly created project is now supported and can be loaded to the controller.

After startup, the value of the “Events” variable changes only when counter “i” reaches the value 0, meaning that division by 0 has been performed.

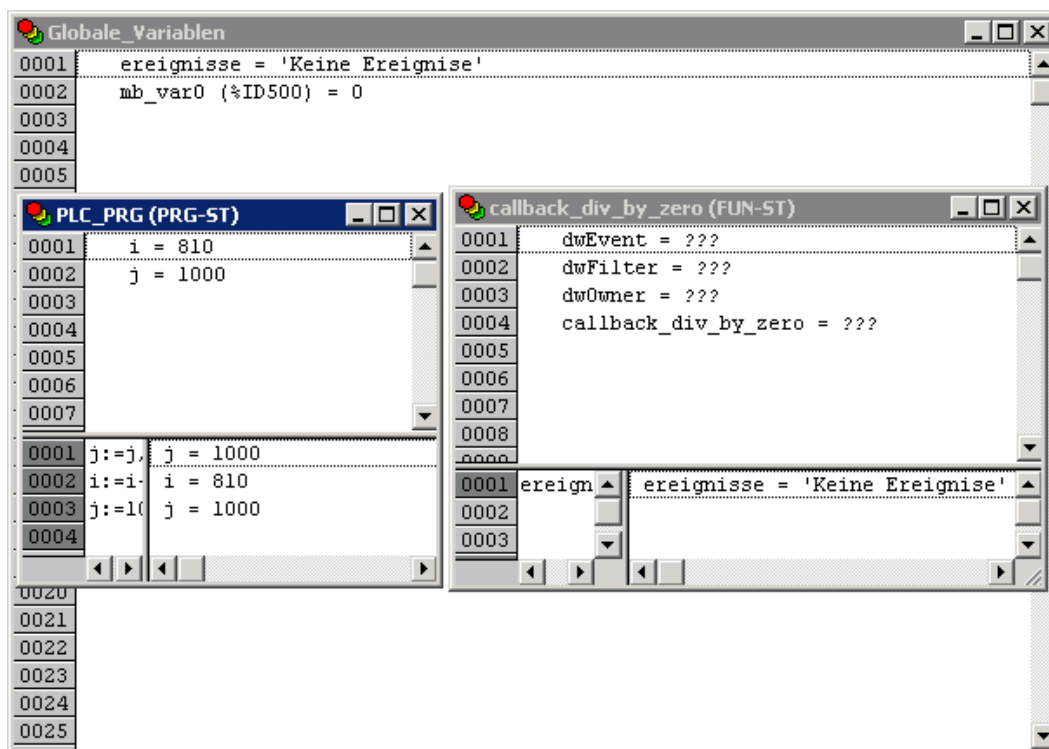


Figure 87: CODESYS – Variable Contents Prior to Division by “0”

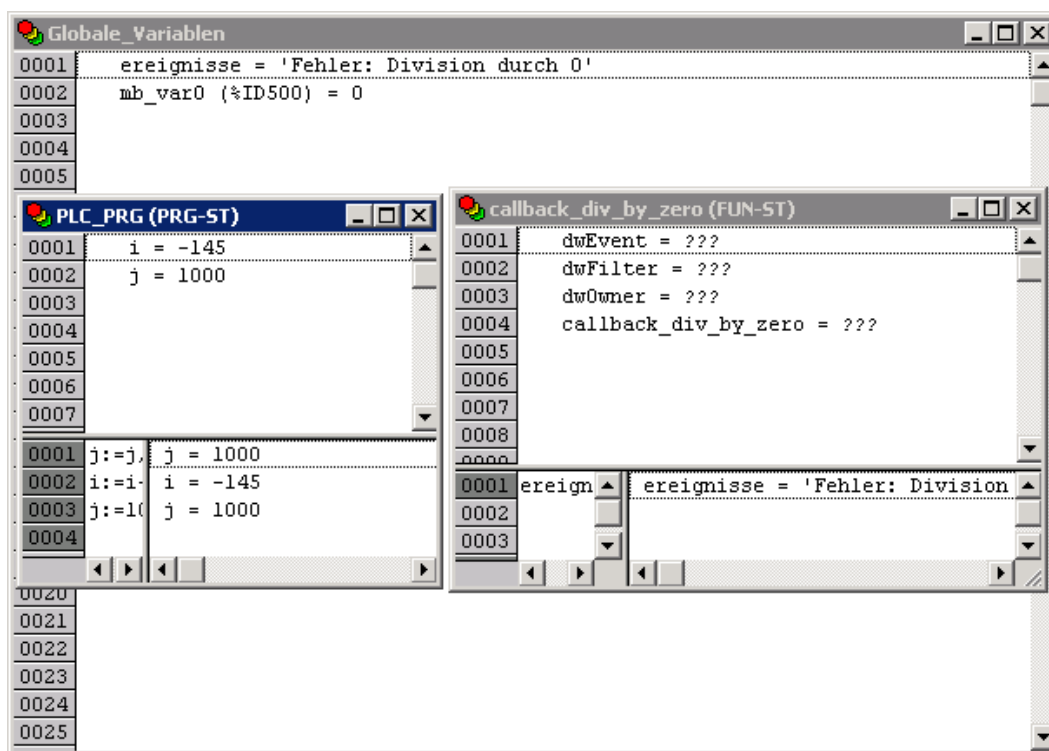


Figure 88: CODESYS – Variable Contents After Division by “0” and Call-up of the Event Handler

8.6 Process Images

A process image is a memory area in which the process data is stored in a defined sequence and consists of the I/O modules attached to the internal bus, the PFC variables, the bit memory address area and the slaves attached to the fieldbus.

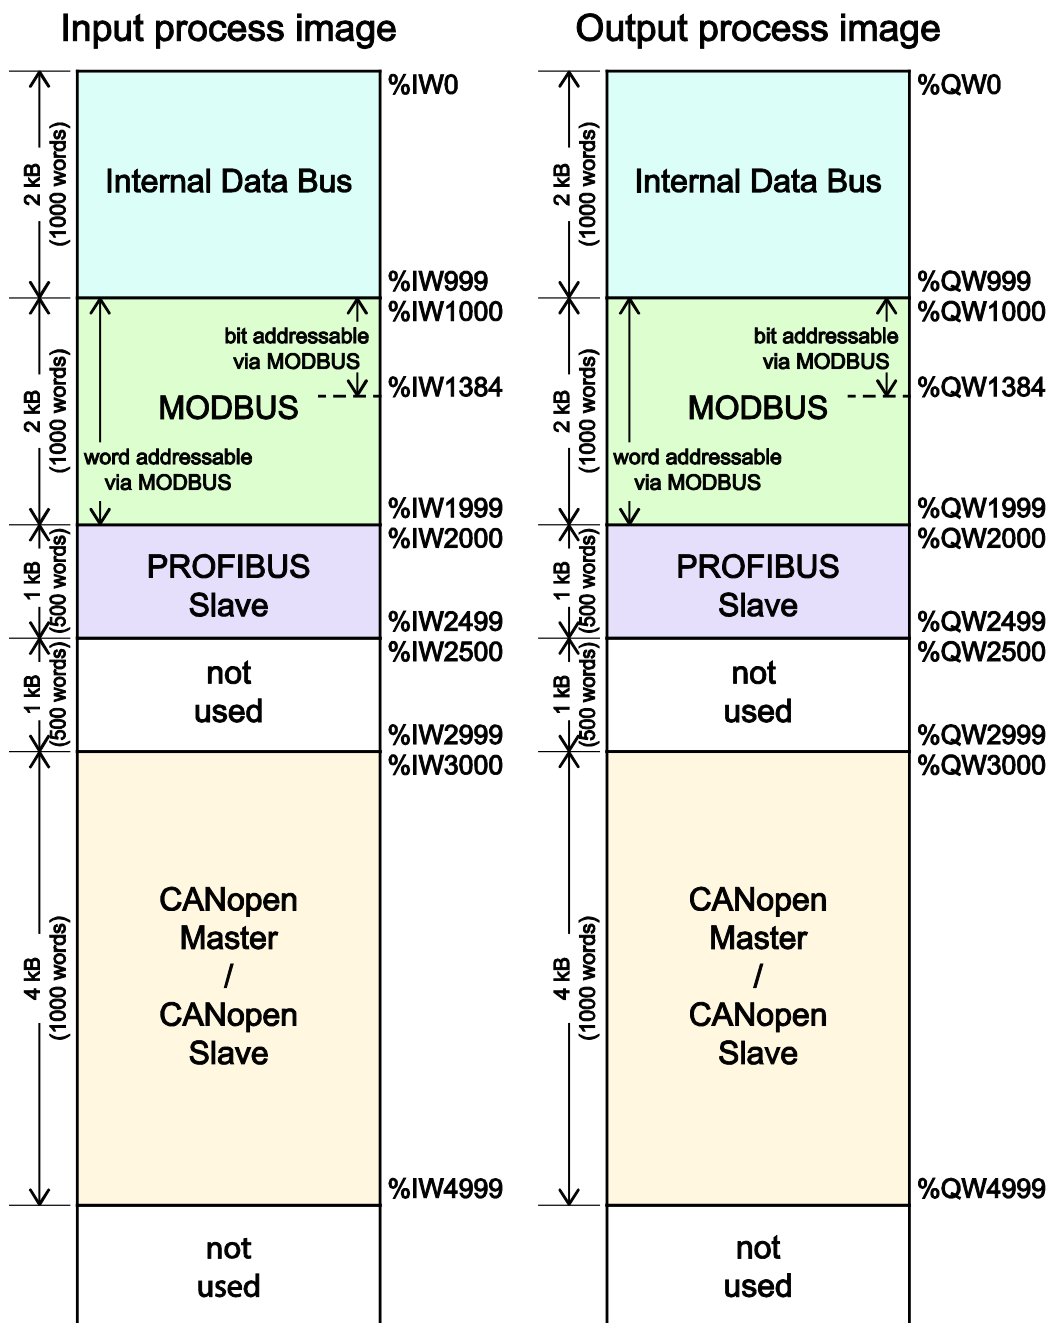


Figure 89: Process Image

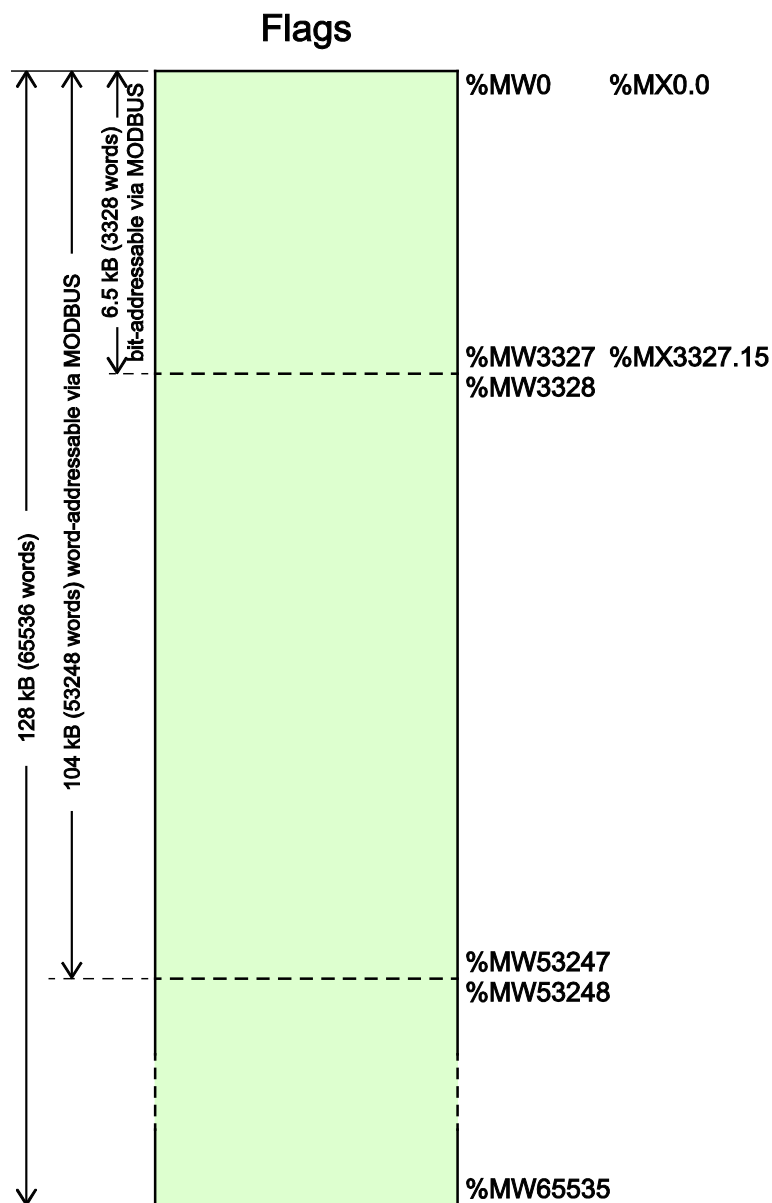


Figure 90: Flag Area

8.6.1 Process Images for I/O Modules Connected to the Controller

After starting the fieldbus controller, it automatically detects all connected I/O modules.

The analog input and output data is stored first word by word in the process image. Subsequent to this, come the digital input and output data bits combined to form words.

The size and structure of the process image for the I/O modules connected to the system are described in the appendix.

Note



I/O Module Data Width

The data width of an I/O module is between 0 and 48 bytes.

Note



I/O Module Process Data

Check the I/O module process data whenever you add or remove the modules to/from the fieldbus controller. Changing the I/O module topology results in an adjustment of the process image, as the process data addresses also change.

8.6.2 Process Image for Slaves Connected to the Fieldbus

The size and structure of the process image for the slaves connected to the system are described in the section for the specific fieldbus.

Note



No direct access from fieldbus to the process image for I/O modules!

Any data that is required from the I/O module process image must be explicitly mapped in the CODESYS program to the data in the fieldbus process image and vice versa! Direct access is not possible!

8.7 Access to Process Images of the Input and Output Data via CODESYS 2.3

The following tables describe the possibilities with which you can access the address ranges of the process image for the inputs and outputs connected to the internal data bus.

Table 189: Access to the Process Images of the Input and Output Data – Internal Data Bus

Memory area	Description	Access via PLC	Logical Address Space
Internal data bus input process image	Map of the local input modules (internal data bus, I/O module 1 to 1 bis 64*) in the RAM.	Read	Word %IW0 to %IW999
			Byte %IB0 to %IB1999
Internal data bus output process image	Map of local output modules (internal data bus, I/O module 1 to 64*) in the RAM.	Read/Write	Word %QW0 to %QW999
			Byte %QB0 to %QB1999

* The use of up to 250 I/O modules is possible with the WAGO internal data bus extension modules.

Table 190: Access to the Process Images of the Input and Output Data – MODBUS

Memory area	Description	Access via PLC	Logical Address Space
MODBUS input process image	MODBUS input variables, addressed by word via MODBUS	Read	Word %IW1000 to %IW1999
			Byte %IB2000 to %IB3999
	MODBUS input variables, addressed by bit via MODBUS	Read	Bit %IX1000.0 ... %IX1000.15 to %IX1384.0 ... %IX1384.15
MODBUS output process image	MODBUS output variables, addressed by word via MODBUS	Read/Write	Word %QW1000 to %QW1999
			Byte %QB2000 to %QB3999
	MODBUS output variables, addressed by bit via MODBUS	Read/Write	Bit %QX1000.0 ... %QX1000.15 to %QX1384.0 ... %QX1384.15

Table 191: Access to the Process Images of the Input and Output Data – CANopen

Memory area	Description	Access via PLC	Logical Address Space
CANopen input process image	CANopen master or CANopen slave input variables	Read	Word %IW3000 to %IW4999
			Byte %IB6000 to %IB9999
CANopen output process image	CANopen master or CANopen slave output variables	Read/Write	Word %QW3000 to %QW4999
			Byte %QB6000 to %QB9999

Table 192: Access to the Process Images of the Input and Output Data – PROFIBUS

Memory area	Description	Access via PLC	Logical Address Space
PROFIBUS input process image	PROFIBUS input variables	Read	Word %IW2000 to %IW2499
			Byte %IB4000 to %IB4999
PROFIBUS output process image	PROFIBUS output variables	Read/Write	Word %QW2000 to %QW2499
			Byte %QB4000 to %QB4999

Table 193: Access to the Process Images of the Input and Output Data – Flags

Memory area	Description	Access via PLC	Logical Address Space
Flag variables	Total of 128 kB remanent memory (65536 words).	Read/Write	%MW0 to %MW65535
	104 kB addressed by word via MODBUS (53248 words)	Read/Write	Word (MODBUS) %MW0 to %MW3327
	6.5 kB addressed by bit via MODBUS (3328 words).	Read/Write	Bit (MODBUS) %MX0.0 ... %MX0.15 to %MX3327.0 ... %MX3327.15
Retain variables	Retain memory addressed by symbols in the NVRAM: 128 kB	Read/Write	-

* The use of up to 250 I/O modules is possible with the WAGO internal data bus extension modules.

The total size of the memory for flag and retain variables is 128 kB (131060 bytes). The size of these two sections can be customized as required, provided the total (permissible) size is not exceeded.

If you are using bit-oriented addressing, remember that the basic address is word-based. The bits are addressed from 0 to 15.

8.8 Addressing Example

The following addressing example clarifies the access to the process image:

Table 194: Arrangement of the I/O Modules for the Addressing Example


Fieldbus controller	750-400	750-554	750-402	750-504	750-454	750-650	750-468	750-600
	1	2	3	4	5	6	7	8


Table 195: Addressing Example

I/O module	Input data	Output data	Description
Type	C*		
750-400	1	%IX8.0	2DI, 24 V, 3 ms: 1. Digital input module with a data width of 2 bits. As the analog input modules already occupy the first 8 words of the input process image, the 2 bits occupy the lowest-value bits of the 8th word.
	2	%IX8.1	
750-554	1	%QW0	2AO, 4 – 20 mA: 1. Analog output module with a data width of 2 words. This module occupies the first 2 words in the output process image.
	2	%QW1	
750-402	1	%IX8.2	4DI, 24 V: 2. Digital input module with a data width of 4 bits. These are added to the 2 bits of the 750-400 module and stored in the 8th word of the input process image.
	2	%IX8.3	
	3	%IX8.4	
	4	%IX8.5	
750-504	1	%QX4.0	4DO, 24 V:

Table 195: Addressing Example

I/O module		Input data		Output data		Description
Type	C*					
	2				%QX4.1	1. Digital output module with a data width of 4 bits. As the analog output module already occupies the first 4 words of the output process image, the 4 bits occupy the lowest-value bits of the 4th word.
	3				%QX4.2	
	4				%QX4.3	
750-454	1	%IW0				2AI, 4 – 20 mA: 1. Analog input module with a data width of 2 words. This module occupies the first 2 words in the input process image.
	2	%IW1				
750-650	1	%IW2				RS-232, C 9600/8/N/1: The serial interface module is an analog input and output module, which displays 2 words both in the input process image and in the output process image.
		%IW3				
				%QW2		
				%QW3		
750-468	1	%IW4				4AI, 0 – 10 V S.E: 2. Analog input module with a data width of 4 words. As the 750-454 and 750-650 analog input and output modules already occupy the first 4 words of the input process image, the 4 words of this I/O module are added behind the others.
	2	%IW5				
	3	%IW6				
	4	%IW7				
750-600						End module The passive 750-600 end module does not transmit any data.

 Analog input and output modules

 Digital input and output modules

*C: Number of the input/output

8.9 Internal Data Bus Synchronization

The internal data bus cycle and the CODESYS task cycle are optimally automatically synchronized: This depends on the number of I/O modules connected and the fastest CODESYS task cycle set in the fieldbus controller. The synchronization cases described below can therefore take place.

In this chapter, CODESYS task denotes only tasks within CODESYS that contain an access to the internal data bus. Tasks that do not access the internal data bus are not synchronized in the same way as described below. For this, see Section “Creating Tasks.”

8.9.1 Case 1: CODESYS Task Interval Set Smaller than the I/O Module Cycle

Execution of the CODESYS tasks is synchronized with internal data bus cycle time.

The CODESYS task is processed in parallel to the internal data bus cycle. The CODESYS task interval is extended to the internal data bus cycle time. This is necessary so that each CODESYS task is started with new input data from the

internal data bus and the output values are also set at the module after each CODESYS task.

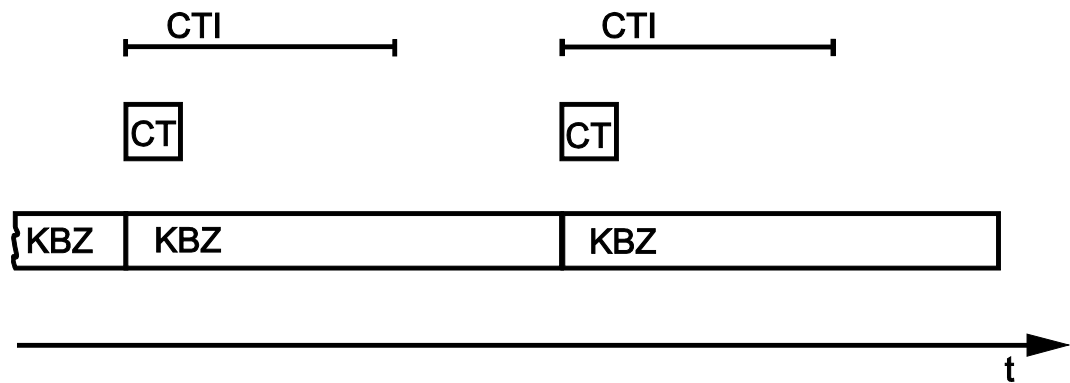


Figure 91: Internal Data Bus Synchronization 01

CTI: CODESYS Task Interval
CT: CODESYS Task that accesses the I/O module of the internal data bus
KBZ: Internal Data Bus Cycle

Example:

CODESYS task interval (CTI): 100 μ s

I/O module cycle (KBZ): 2000 μ s

Result: Matching of the CODESYS task interval to the I/O module cycle of 2000 μ s.

8.9.2 Case 2: CODESYS Task Interval Smaller than Twice the Internal Data Bus Cycle

Execution of the internal data bus is synchronized with the set CODESYS task interval.

At the end of the CODESYS task, the internal bus cycle starts, which is processed synchronously with the fastest CODESYS task. This ensures that when starting each CODESYS Task, current input data are available from the internal data bus and the output values of each CODESYS task are also output to the I/O modules.

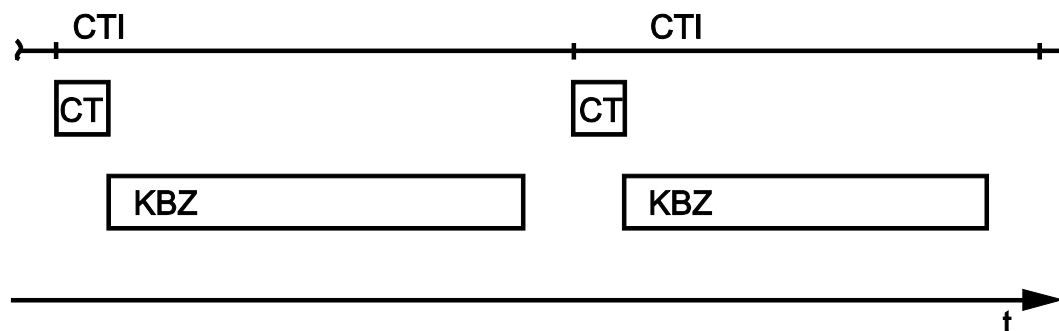


Figure 92: I/O Module Synchronization 02

CTI: CODESYS Task Interval

CT: CODESYS Task that accesses the I/O module of the internal data bus

KBZ: Internal Data Bus Cycle

Example:

CODESYS task interval (CTI): 2500 μ s

Internal data bus cycle (KBZ): 2000 μ s

Result: Execution of the internal data bus cycle every 2500 μ s.

8.9.3 Case 3: CODESYS Task Interval Greater than Twice the Internal Data Bus Cycle

The I/O data from the internal data bus are refreshed once prior to the CODESYS task and once after the CODESYS task.

Prior to processing the CODESYS task, the internal data bus cycle is executed, which provides the current input data for the CODESYS task. After execution of the CODESYS task, an additional internal data bus cycle is started, which provides the output data to the I/O modules.

This ensures that at the start of every CODESYS task, current input data are available from the internal data bus and the output data from each CODESYS task are quickly output to the I/O modules. This prevents processing of internal data bus cycles that would unnecessarily use a great deal of computing time on the CPU.

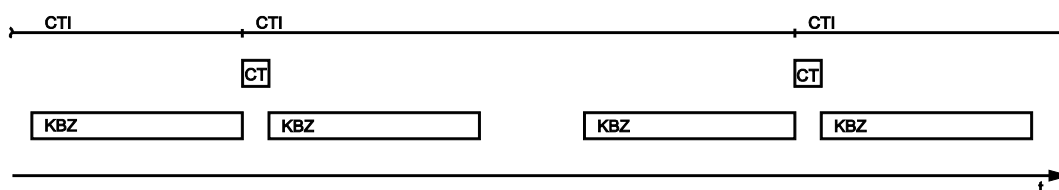


Figure 93: I/O Module Synchronization 03

CTI: CODESYS Task Interval

CT: CODESYS Task that accesses the I/O module of the internal data bus

KBZ: Internal Data Bus Cycle

Example:

CODESYS task interval (CTI): 500 μ s

Internal data bus cycle (KBZ): 2000 μ s

Result: Execution of the internal data bus cycle 2000 μ s prior to the CODESYS task and once directly after the CODESYS task.

8.9.4 Case 4: CODESYS Task Interval Greater than 10 ms

Synchronization takes place as in case 3; however, the output modules would be reset to their default state after 150 ms without an internal data bus cycle. This reliably prevents the execution of an internal data bus cycle after at least every 10 ms.

The I/O data from the internal data bus are refreshed once before the CODESYS task and once after the CODESYS task and an additional internal data bus cycle is also executed every 10 ms.

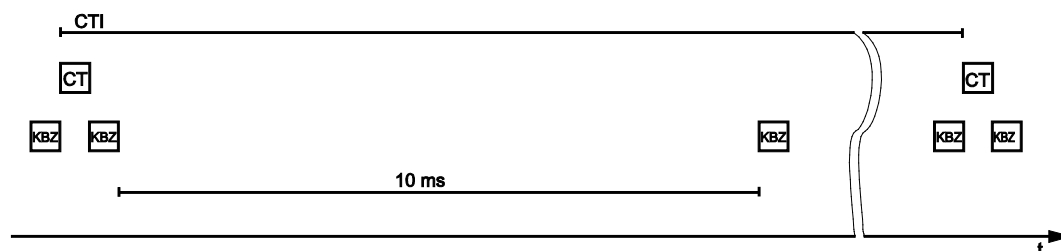


Figure 94: Internal Data Bus Synchronization 04

CTI: CODESYS Task Interval
 CT: CODESYS task that accesses the I/O module of the internal data bus
 KBZ: Internal data bus cycle

Example:

CODESYS task interval (CTI): 150000 μ s

Internal data bus cycle (KBZ): 2000 μ s

Result: Execution of the internal data bus cycle 2000 μ s prior to the CODESYS task, once directly after the CODESYS task and 10 ms after the previous internal data bus cycle.

8.9.5 Internal Data Bus Configuration

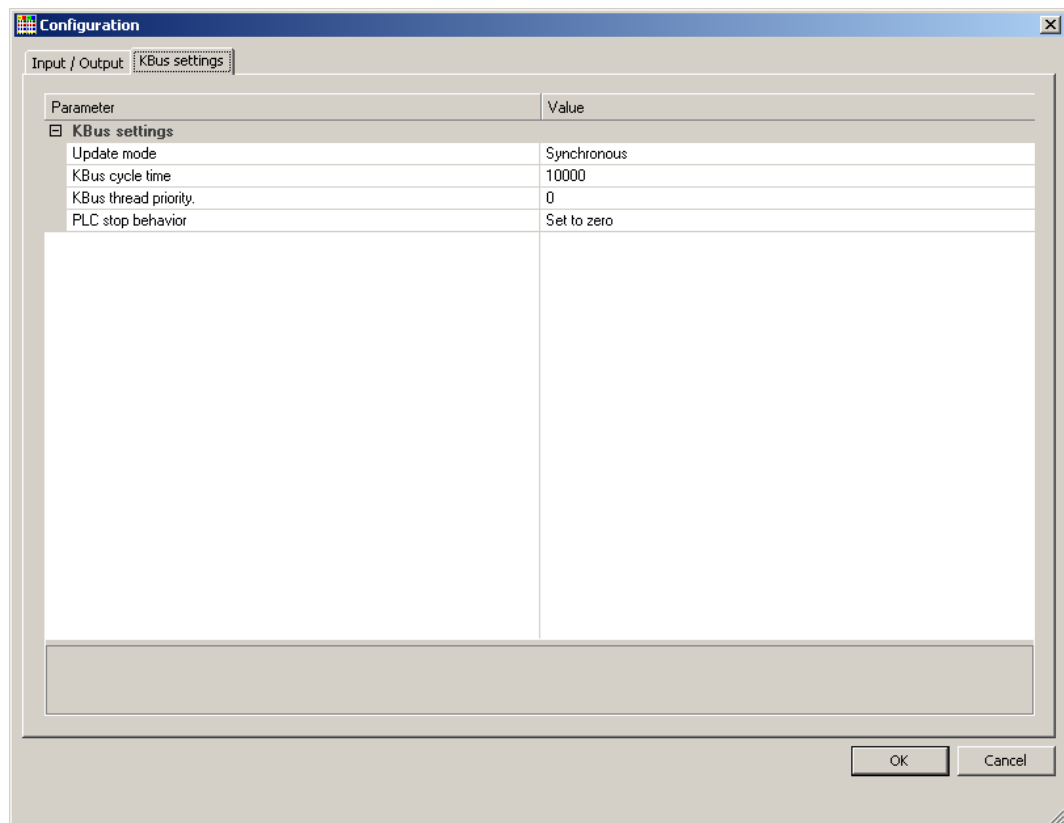


Figure 95: Internal Data Bus Settings

Table 196: Internal Data Bus Settings

Parameter	Explanation	
Update Mode	The Update mode is used to configure how the internal data bus process data is to be updated (refreshed).	
	Asynchronous	In the asynchronous update mode process data are refreshed in cycles at a definable interval.
	Synchronous *	In the synchronous update mode the process data are synchronized with the most rapid CODESYS task that accesses the internal data bus.
Internal Data Bus Cycle Time	The update interval for the internal data bus is set by the cycle time. This setting is effective only in the asynchronous mode.	
	1000 μ s	Minimum value 1 millisecond
	10000 μ s *	Default value 10 milliseconds
	50000 μ s	Maximum value 50 milliseconds
Internal Data Bus Thread Priority	This value indicates the priority for the internal data bus thread. This setting is effective only in the asynchronous mode. This priority is equivalent to the priority of the cyclic CODESYS tasks (see Section “Cyclic Tasks”). This setting is effective only in the asynchronous mode.	
	0 *	Highest priority
	15	Lowest priority
PLC stop response	Specifies the response of the internal data bus outputs when the PLC application stops.	
	Hold last value	The output states are retained.
	Set to zero *	Outputs are set to zero.

* Default setting

8.9.5.1 Effect of Update Mode on CODESYS Tasks

8.9.5.1.1 Asynchronous Update Mode

In the asynchronous update mode there is no direct influence on CODESYS task behavior.



Note

Internal data bus “freeze” on priority conflicts!

In the asynchronous update mode there is a risk of the internal data bus “freezing”, as the internal data bus thread operates at the same priority as the IEC tasks. The internal data bus thread must therefore use a priority higher than that of the IEC task to prevent this from occurring.

8.9.5.1.2 Synchronous Update Mode

In the synchronous update mode the runtime behavior of CODESYS tasks can be influenced by the internal data bus. The minimum task interval that can then be achieved depends on the duration of an internal data bus cycle. The duration of an internal data bus cycle, on the other hand, is based on the I/O modules connected to the bus. As a rule of thumb: The shorter the internal data bus structure, the shorter the cycle time and digital modules are faster than analog or complex ones.

In the event of an internal data bus error, the CODESYS tasks are blocked until the error is rectified, i.e., when an internal data bus cycle has been successfully executed again.

Note



No call-up of internal data bus status when internal data bus errors are present!

If an internal data bus error has occurred, it is not possible to call up the internal data bus status using `KBUS_ERROR_INFORMATION (mod_com.lib)` while in the synchronous update mode.

8.10 Memory Settings in CODESYS

The list below illustrates the standard memory allocation of the PFC200:

- Program memory: 16 Mbyte (max.)
- Data memory: 64 Mbytes
- Input data: 64 kbytes
- Output data: 64 kbytes
- Flags: 24 kbytes
- Retain: 104 kbytes
- Function block limitation: $12 * 4096 \text{ bytes} = 48 \text{ kbytes}$

8.10.1 Program Memory

The program memory (also code memory) cannot be configured and is limited to a maximum of 16 Mbytes. The memory space actually available is based on the scope of installed applications.

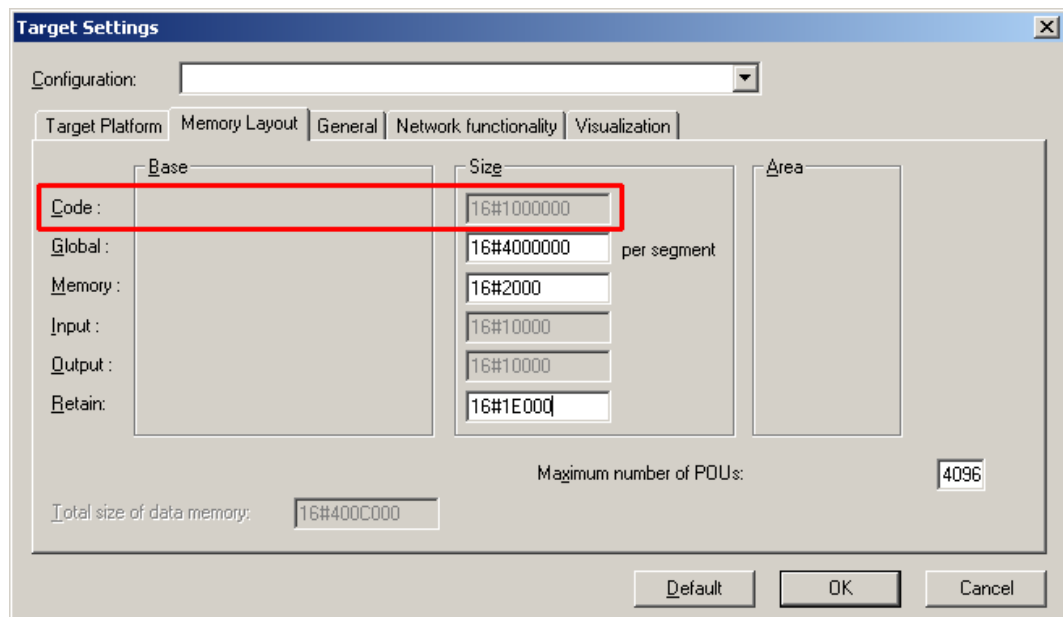


Figure 96: Program Memory

8.10.2 Data Memory and Function Block Limitation

The data memory is set for 64 Mbytes in the controller's initial state.

This set value has already been requested in the system after a successful program download and can be fully utilized.

Together with the data memory to be used by the application, memory is required for the individual program function blocks in the system.

The size of the administration space is calculated from the function block limitation * 12 (i.e., normally 4096 * 12).

The actual size of the main memory required in the system for data is the sum of global data memory and function block limitation memory.

This value should not exceed the value specified for “Size of entire data memory.”

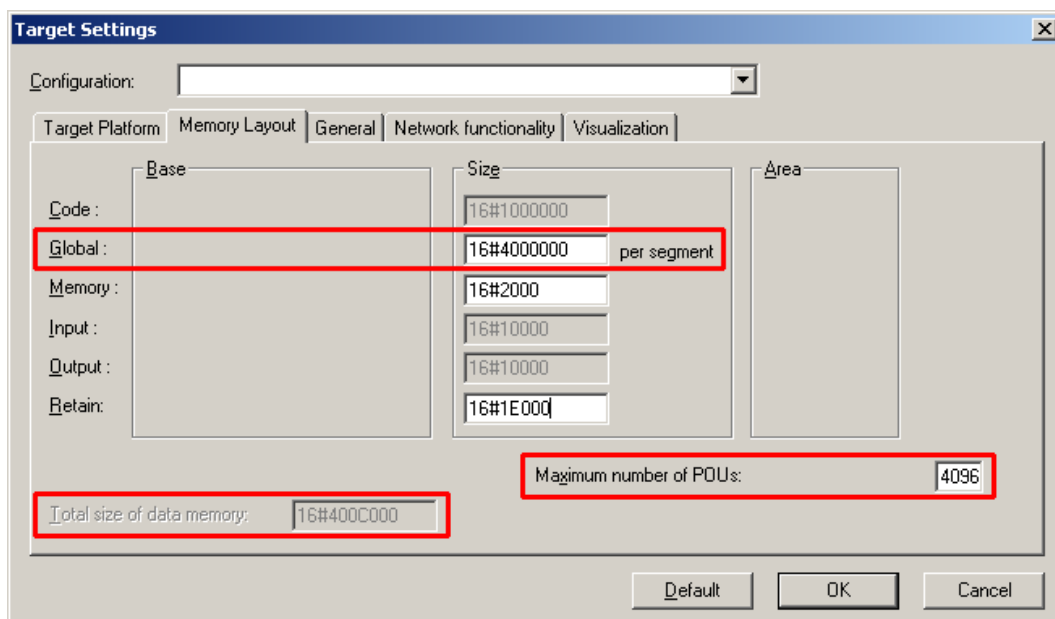


Figure 97: Data Memory and Function Block Limitation

8.10.3 Remanent Memory

A total of 128 kbytes of remanent memory is available for the IEC-61131 application.

The remanent section is subdivided into the flag area (memory) and the retain area.

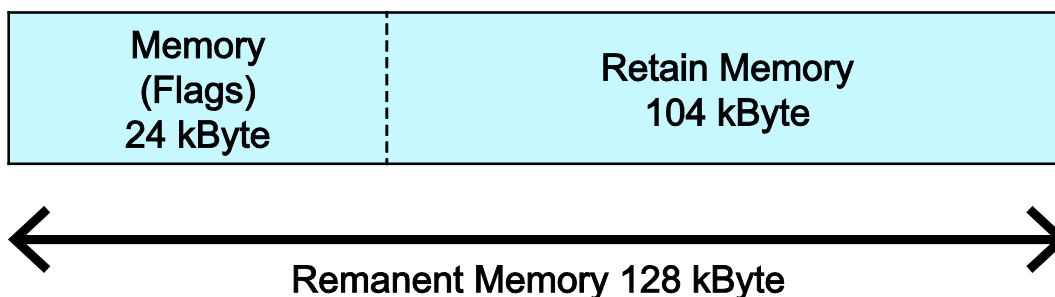


Figure 98: Remanent Main Memory

The breakdown of the flag and retain variables can be customized as required.



Note

Observe general conditions!

The sum of Memory + Retain must not exceed the maximum value of 128 kbytes (0x20000).

A maximum of 10,000 retain variables can be created.

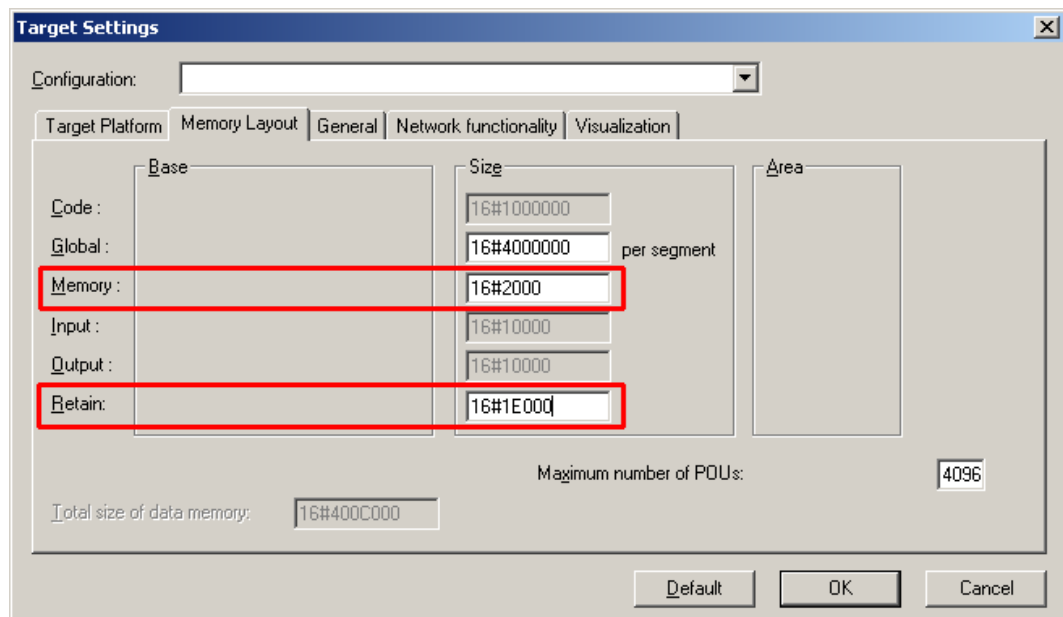


Figure 99: Flag and Retain Memory

8.11 CODESYS Visualization

CODESYS Web visualization is based on Java technology. All Java programs require a Java runtime environment (JRE), which must be installed on the host PC along with an Internet browser. An applet is stored in the file system of a Web server and is accessible to browsers via an HTML page.

You create all visualization types (HMI and Web visualization) with the same CODESYS graphic editor. Select the visualization type in the “Target system settings” window. A description file in XML format is generated from the information for each of these pages. You can find these files in the subfolder “*visu*” of the CODESYS installation path. The HTML home page “webvisu.htm” and the Java archive “webvisu.jar” in the applet (webvisu.class) are also saved there in a compressed format.

Once you have selected a visualization type, the following steps must be performed to execute the technique:

1. Click the “Resources” tab and open the “Target system settings.” Specify whether you wish to have visualization displayed as a “Web visualization” using an Internet browser.

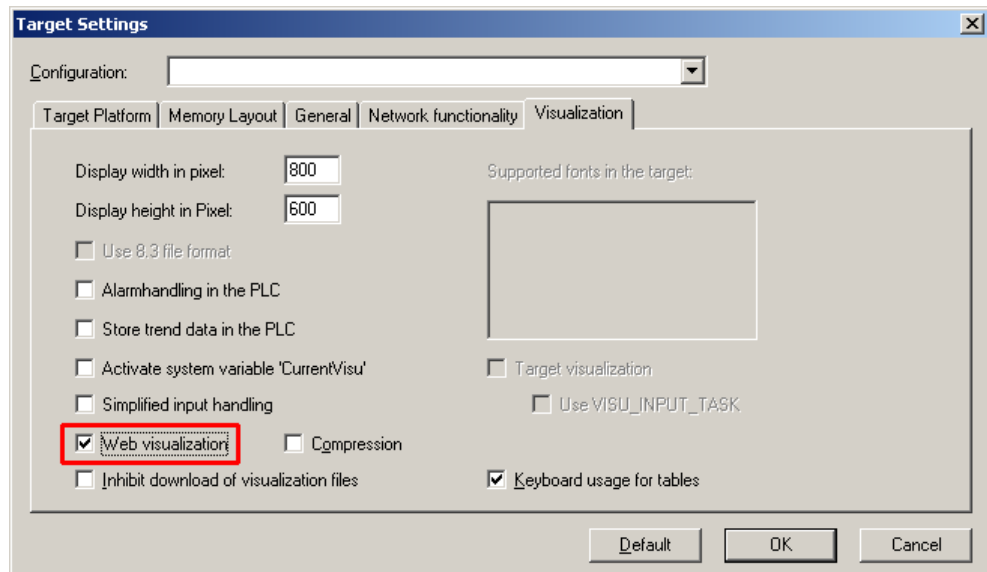


Figure 100: Selecting the Visualization Technique in the Target System Settings

2. Generate a start page for the visualization. Right-click the “Visualization” folder in the “Visualization” tab. Select **Add object ...** from the contextual menu. The “New visualization” dialog box opens.

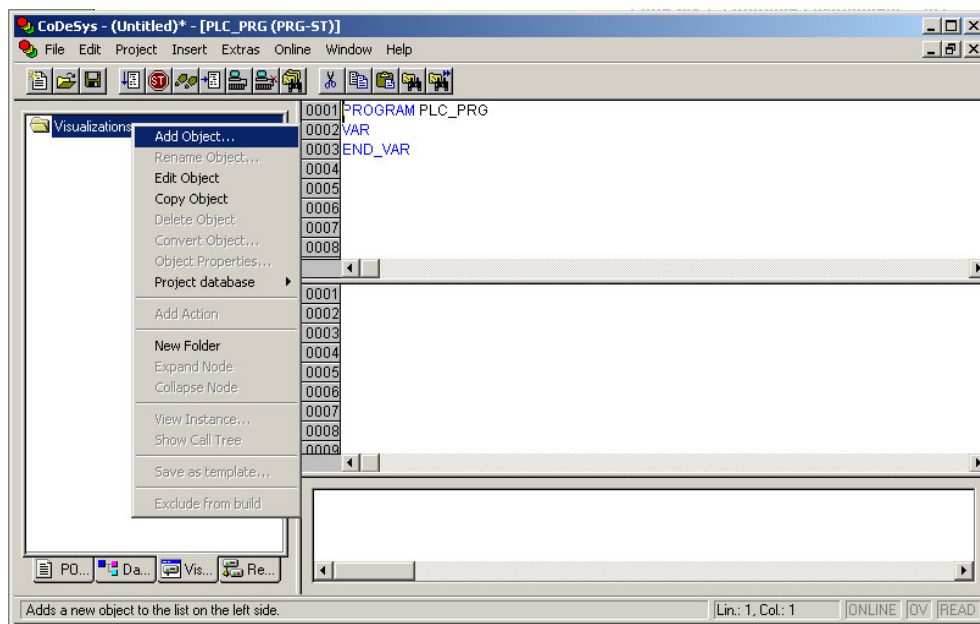


Figure 101: Creating the PLC_VISU Starting Visualization

3. In the “New visualization” dialog window, enter the name **PLC_VISU** for the start visualization. This page is then displayed as the start page upon system startup.
4. Activate the CODESYS Web server in the WBM on the “Ports and Services – CODESYS Services” page in the “CODESYS Webserver” group.
5. Activate the http service in the WBM on the “Ports and Services – Network Services” page in the “HTTP” group.

If you transfer the PLC program to the controller (**Online > Login**) and start the program (**Online > Start**), enter one of the following lines in the address line of the Web browser for online visualization:

- “https://<IP address of the controller>/webvisu”, preferred method (http can also be used instead of https)
- “https://<IP address of the controller>”, if the default Web server in the WBM has been set to “WebVisu” (http can also be used instead of https)
- “http://<IP address of the controller>:8080/webvisu.htm”

You can also have Web visualization displayed via the WBM (see Section “CODESYS - WebVisu” Page).



Information

Frequently Asked Questions

Additional information (FAQs) on CODESYS Web visualization is also provided in the Section “Frequently Asked Questions about CODESYS Web Visualization” and in the online Help function for CODESYS 2.3.

8.11.1 Limits of CODESYS Visualization

The controller supports the “WebVisu” visualization type integrated into CODESYS. Technological limitations can be caused by the visualization type used.

Compared to “HMI”, Web visualization on the controller is performed within significantly narrower physical limits. Whereas “HMI” can access almost unlimited resources on a desktop PC, the following limitations must be observed when using Web visualization:

Adapting to the File System

The overall size of the PLC program, visualization files, bitmaps, log files, configuration files, etc. must fit into the file system.

Process Data Memory

Web visualization uses its own protocol for exchanging process data between applet and control.

The controller transfers process data with ASCII coding. The pipe symbol (“|”) is used to separate two process values. Therefore, the space requirement for a process data variable in the process data memory is dependent not only on the data type, but also on the process value itself. Thus, a variable of the “WORD” type occupies between one byte for the values 0 through 9 and five bytes for values from 10000 and greater. The selected format (ASCII + |) only permits a rough estimate of the space requirement for the individual process data in the process data buffer. If the size of the ASCII coded process data is exceeded, Web visualization no longer works as expected.

Computer Performance/Processor Time

The controller is based on a real-time operating system. This means that high-priority processes (e.g., PLC program) interrupt or block lower priority processes. The Web server responsible for Web visualization is among these lower priority processes.



Note

Processor Time

Make sure when configuring tasks, that there is sufficient processor time available for all processes.

Network Load

The controller's CPU processes both the PLC program and network traffic. ETHERNET communication demands that each received telegram is processed, regardless of whether it is intended for the controller or not.

A significant reduction of the network load can be achieved by using switches instead of hubs.

There is no measure against broadcast telegrams that can be used on the controller, however. These can only be curtailed by the sender, or blocked with configurable switches that have a broadcast limitation. A network monitor such as “wireshark” (www.wireshark.com) provides an overview of the current load in your network.

8.11.2 Eliminating Errors in CODESYS Web Visualization

If you are experiencing problems when working with the CODESYS Web visualization, use the following table to find the solution. If you cannot eliminate the problem, please contact WAGO support.

Table 197: Errors and Remedies

Error	Solution
Internet Explorer reports the error "APPLET NOT INITIATED"	Close all Internet Explorer windows and restart. If the error persists, this indicates a missing or damaged file. Using FTP, check if the entire Java archive "webvisu.jar" is available in the "/PLC" folder of the controller. The original file can be found in the installation path of CODESYS (usually under <i>C:\Programme\WAGO Software\CODESYS V2.3\Visu\webvisu.jar</i>). If necessary, replace the damaged file using FTP or force the download of all files in CODESYS with Purge All > Compile All > Log in .
Web visualization is not displayed	Have you installed the JRE? Check the firewall settings, e.g., if port 8080 is open.
Web visualization "freezes". Web visualization stops after an extended period of time.	The call-up intervals selected in the task configuration are too small. As a result, the Web server of the controller — which is executed with a low priority — does not receive sufficient computer time, if any at all. If no (explicit) task configuration has been provided, the PLC_PRG is (implicitly) executed as a free running task with Priority 1. This significantly limits the Web server's computing time. Always provide a task configuration when using Web visualization. In doing so, the call-up interval should not exceed three times the average execution time. When determining the execution time, ensure that the PLC program has reached a "steady state." When determining the execution time, ensure that the PLC program is not "steady state."
Web visualization cannot be loaded into the controller	Not all files may fit into the controller's file system. Delete any unneeded data (e.g., via FTP).
Bitmap is not displayed	If the name of an image file contains umlauts, the Web server cannot interpret these image names.
Java console reports: "Class not found"	The JRE does not find the entry point for the class "webvisu.class" in the Java archive "WebVisu.jar". The Java archive is probably incomplete. Delete "WebVisu.jar" from the Java cache and/or deactivate the cache. In this case, the controller requests the archive (applet) again. If the problem persists, reload the project into the controller.
Web visualization is static, all process values are "0"	Process data communication has failed. If Web visualization is operated over a proxy server, then a SOCKS proxy is also necessary for process data exchange in addition to the actual HTTP proxy.

8.11.3 FAQs about CODESYS Web Visualization

How can I optimize the applet for special screen resolutions?

In order to optimize the Web visualization for display on a device with a fixed resolution, proceed as follows:

In the “Target system settings”, enter the pixel width and height in the tab “Visualization”. When the visualization is created, the visible area is highlighted in gray. However, the actual pixel width and height of the Web visualization is defined by the attributes “Height” and “Width” of the HTML APPLET tag in the “webvisu.htm” file. Do not forget to also adapt these parameters to the existing resolution.

Which JRE should I use?

Java2 standard edition Version 1.5.0 (J2SE1.5.0_06) or higher is recommended. This is available free of charge at www.oracle.com.

Microsoft's MSJVM3810 was also tested. For PDAs, there are runtime environments available from other manufacturers (JamaicaVM, CrEme, etc.). Please consider that for the Web visualization, these solutions can behave differently within their scope of services (e.g., stability) than those mentioned above.

Should the Java Cache be used?

This depends on the situation. After a standard installation, the cache is enabled. If the cache is enabled, the JRE uses it to store applets and Java archives. If the Web visualization is called up a second time, it requires considerably less time to start because the applet (approx. 250 kb) does not need to be reloaded via the network, but is already available in the cache. This is especially useful when network connections are slow.

Note:

The Java archives may not be completely transferred into the cache due to network failures. In this case, the cache must be cleared manually or disabled.

Why does the visualization element “TREND” in the Web visualization only work “Online”?

The following settings must be selected for visualization projects: **Resources** tab > **Target system settings**.

Activate “Web visualization” and “Trend data recording within control”.

Otherwise, the trend data is stored on the hard drive of the CODESYS development PC. This makes a permanent connection between the controller and the CODESYS gateway necessary. If this connection is interrupted, this may lead to the controller behaving unpredictably.

In the TREND configuration dialog, you can choose between “Online” and “History” operating modes. The controller only supports the “Online” operating mode for visualization projects since it is not possible to configure the maximum size (quota) of the trend files (*.trd). Uncontrolled expansion of trend files can lead to unpredictable controller behavior.

In most cases, the use of the “HISTOGRAM” visualization element is the better choice, as this gives full control over the time and number of measurements and thus the amount of memory required.

What needs to be observed when the visualization element “ALARM TABLE” is used in the Web visualization?

The status of this component is best described as “Add-On”, i.e., an extra that is free of charge and not warranted.

The following settings must be selected for visualization projects: **Resources** tab > **Target system settings**.

Activate “Web visualization” (checkmark) and “Alarm handling within control”.

Otherwise, the alarm data is processed on the CODESYS development PC. This makes a permanent connection between the controller and the CODESYS gateway necessary. If this connection is interrupted, this may lead to the controller behaving unpredictably.

9 **e!RUNTIME Runtime Environment**

9.1 General Notes



Note

Additional Information

Information on the installation and startup of *e!COCKPIT* is provided in the corresponding manual.

Information on programming is provided in the CODESYS 3 documentation.

9.2 CODESYS V3 Priorities

A list of priorities implemented for the controller is provided below as supplementary information to the CODESYS 3 documentation.

Table 198: CODESYS V3 Priorities

Scheduler	Task	Linux® Priority	IEC Priority	Remark
Preemptive scheduling - Real-time range	Local or fieldbus - HIGH	-95 ... -86		Internal data bus (-88)
	Mode selector switch monitoring	-85		Task registers changes to the mode selector switch and changes the state of the PLC application. (start, stop, reset warm/cold)
	CODESYS watchdog	-83		Execution of the watchdog functions
	Cyclic and event-controlled IEC task	-55 ... -53	1 ... 3	For real-time tasks which must not be influenced in execution by external interfaces (e.g., fieldbus).
	Local or fieldbus - MID	-52 ... -43		CAN (-52 ... -51) Profibus (-49 ... 45) MODBUS slave/master (-43)
	Cyclic and event-controlled IEC task	-42 ... -32	4 ... 14	For real-time tasks which must not influence fieldbus communication during execution.
	Local or fieldbus – LOW	-13 ... -4		
Fair scheduling - None real-time range	CODESYS communication	Back-ground (20)		Communication with the CODESYS development environment
	Cyclic, event-controlled and freewheeling IEC task		15	Incl. standard priority of the visualization task

9.3 Memory Spaces under e!RUNTIME

The memory spaces in the controller under *e!RUNTIME* have the following sizes:

- Program and data memory: 60 Mbytes
- Input data: 64 kbytes
- Output data: 64 kbytes
- Flags: 24 kbytes
- Retain: 104 kbytes
- Function block limitation: $12 * 4096 \text{ bytes} = 48 \text{ kbytes}$

9.3.1 Program and Data Memory

The program (also code) and data memory has a size of 60 Mbytes. This space has already been requested in the system after a successful program download and can be fully utilized. The memory space is dynamically divided up into program and data space.

9.3.2 Function Block Limitation

Together with the data memory to be used by the application, memory is required for the individual program function blocks in the system.

The size of the administration space is calculated from the function block limitation * 12 (i.e., $4096 * 12$).

The actual size of the main memory required in the system for data is the sum of global program and data memory and function block limitation memory.

9.3.3 Remanent Memory

A total of 128 kbytes of remanent memory is available for the IEC-61131 application.

The remanent section is subdivided into the flag area (memory) and the retain area.

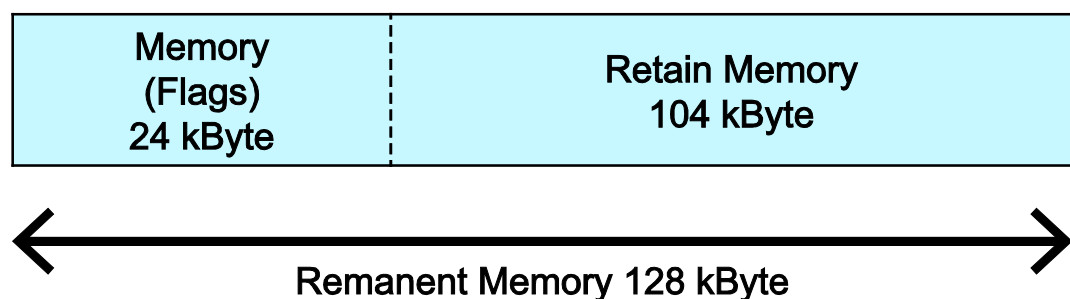


Figure 102: Remanent Main Memory

10 MODBUS – CODESYS 2

10.1 General

MODBUS is a non-vendor-specific, open fieldbus standard for a wide range of applications in production and process automation. The MODBUS communications protocol is based on a master/slave or client/server architecture that uses function codes for execution of individual MODBUS services, which have reading or writing access to individual or multiple elements of the MODBUS data model simultaneously.

10.2 Features

The MODBUS slave implemented in the PFC200 has the following features:

- 3 modes: MODBUS TCP, MODBUS UDP and MODBUS RTU, which can be run independently of one another simultaneously
- Each mode can be configured
- 10 supported MODBUS services (Function Codes): FC1 to FC6, FC15, FC16, FC22, FC23
- Data exchange via 1000 registers in each of the local MODBUS process images
- 768-byte sector that can be addressed by bits in each local MODBUS process image
- Access to a 104 kB flag sector (total of 53248 registers/words, with 3328 addressable bits)
- 28 Information and configuration registers
- Up to 1000 TCP connections
- MODBUS communications monitoring using programmable watchdogs
- Configurable response on PLC stop
- Configurable response on disruption of MODBUS communication

10.3 Configuration

All of the MODBUS operating modes are configured using the CODESYS PLC configuration.

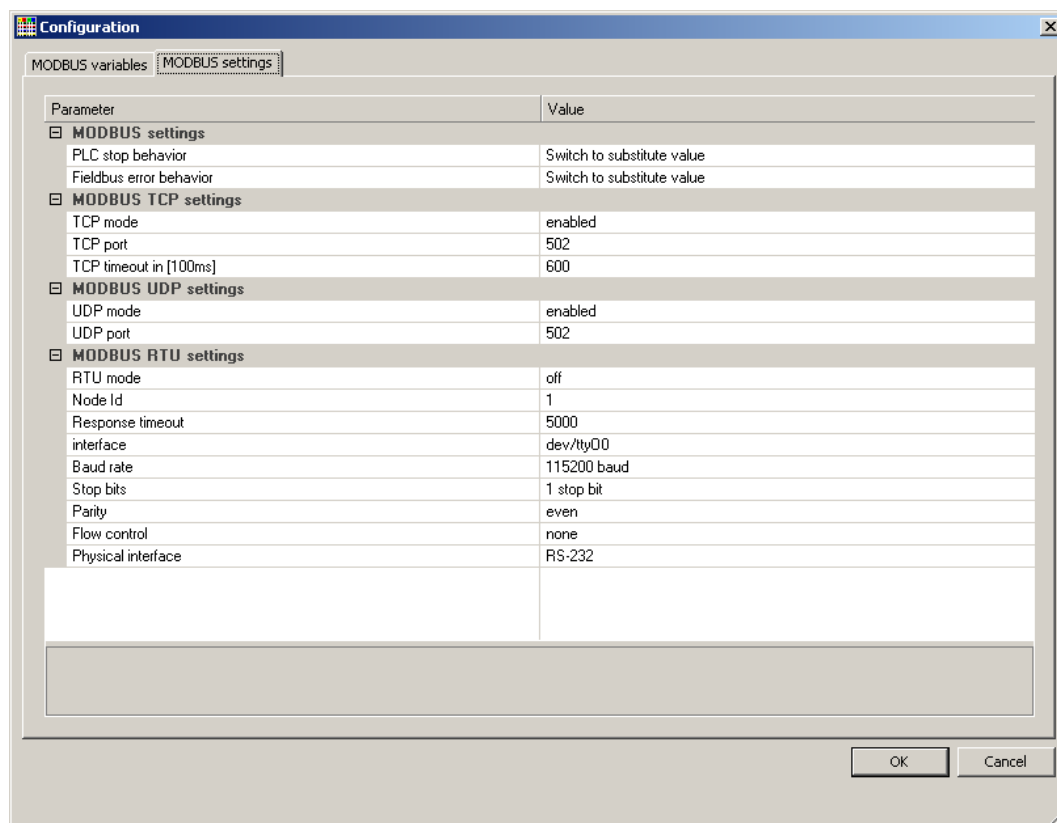


Figure 103: CODESYS PLC Configuration - MODBUS Settings

The MODBUS slave configuration is composed of four basic parameter groups:

- MODBUS settings,
- MODBUS TCP settings,
- MODBUS UDP settings,
- MODBUS RTU settings.

A detailed description of all the parameter groups is given in the following sections.

10.4 MODBUS Settings

The “MODBUS settings” group contains the following configuration parameters.

Table 199: MODBUS Settings

Parameters	Explanation	
PLC stop behavior	Response of the MODBUS slave when the controller has halted (controller in STOP state)	
	No data exchange	No data exchange possible. MODBUS requests will always be answered by the exception response “ILLEGAL FUNCTION” (0x81).
	Switch to substitute value*	Data exchange possible. Substitute values (0) are provided for MODBUS read requests and the values accepted unchanged in the local MODBUS process image for write requests, without passing these on to the controller.
	Hold last value	Data exchange possible. The last frozen values are provided for MODBUS read requests and the values accepted unchanged in the MODBUS process image for write requests, without passing these on to the controller.
Fieldbus error response	Response of the MODBUS slave to detected fieldbus errors (interruption of communication).	
	No data exchange	No data exchange possible.
	Switch to substitute value*	Data exchange possible. Substitute values (0) are supplied from the MODBUS process image for PLC read functions; for write access the values are accepted unchanged in the MODBUS process image without passing them on to the MODBUS master.
	Hold last value	Data exchange possible. The previously frozen values are supplied from the MODBUS process image for PLC read functions; for write access the values are accepted unchanged in the MODBUS process image without passing them on to the MODBUS master.

* Default setting

10.4.1 MODBUS TCP Settings

The “MODBUS TCP Settings” contains the following configuration parameters for the “MODBUS TCP” mode:

Table 200: MODBUS TCP Settings

Parameters	Explanation	
TCP mode	Enable for the MODBUS TCP mode	
	Off	Operation not permitted
	Active *	Operation possible
TCP port	Port number for the TCP link	
	1	Minimum port number
	502 *	MODBUS default port
	65535	Maximum port number
TCP Timeout	Time-out for a TCP link	
	1	100 ms (1×100 ms)
	600 *	60 seconds (600×100 ms)
	65535	1 h 49 min 13 s 500 ms (65535×100 ms)

* Default setting

10.4.2 MODBUS UDP Settings

The “MODBUS UDP Settings” group contains the following configuration parameters for the “MODBUS UDP” mode:

Table 201: MODBUS UDP Settings

Parameters	Explanation	
UDP mode	Enable for the MODBUS UDP mode	
	Off	Operation not permitted
	Active *	Operation possible
UDP port	Port number for the UDP link	
	1	Minimum port number
	502 *	MODBUS default port
	65535	Maximum port number

* Default setting

10.4.3 MODBUS RTU Settings

The “MODBUS RTU Settings” group contains the following configuration parameters for the “MODBUS RTU” mode:

Table 202: MODBUS RTU Settings

Parameters	Explanation	
RTU mode	Enable for the MODBUS RTU mode	
	Off*	Operation not permitted
	Active	Operation possible
Device ID	Device ID (device address) for the tty device	
	1*	min. device ID
	247	max. device ID
Maximum response time	Response timeout for a request in [ms]	
	2000	min. response time = 2 seconds. If this value is set lower than 2 seconds, it will be corrected internally to 2 seconds.
	5000*	Default = 5 seconds
	4294967295	max. response time > 71 hours.
Interface	Device name	
	“dev/...”	Name of the tty in the string
	“dev/ttyO0”*	Standard tty
Baud rate	Communication baud rate	
	1200 baud	1200 baud min. transmission speed
	2400 baud	2400 baud
	4800 baud	4800 baud
	9600 baud	9600 baud
	19200 baud	19200 baud
	38400 baud	38400 baud
	57600 baud	57600 baud
	115200 baud*	115200 baud, max. transmission speed
Stop bits	Number of stop bits	
	1 stop bit*	1 stop bit in the frame; must be used when even or odd parity has been selected.
	2 stop bits	2 stop bits in the frame; must be used when “None” has been selected for parity.
Parity	Parity check	
	None	No parity check performed; 2 stop bits must be selected in the configuration for this setting.
	Even*	Even parity
	Odd	Odd parity

Table 202: MODBUS RTU Settings

Parameters	Explanation	
Flow control	Data flow control (Supported only for the setting “RS-232” for the physical interface.)	
	None*	No data flow control
	RTS/CTS	Hardware flow control
Physical interface	Mode for the physical interface	
	RS-232*	RS-232 is used as the physical interface.
	RS-485	RS-485 is used as the physical interface.

* Default setting

10.5 Data Exchange

MODBUS data exchange is performed in cycles or acyclically using MODBUS services. The type and number of usable MODBUS services depends on the area that is addressed. There are generally four MODBUS-relevant address areas in the PFC200:

- **MODBUS input process image** (MODBUS Input) – is an area in the PIO (PIO = Output Process Image), in which data from the PLC is provided in cycles exclusively for MODBUS Read services.
- **MODBUS output process image** (MODBUS Output) – is an area in the PII (PII = Input Process Image), in which MODBUS Write services provide data for cyclic reading by the PLC. MODBUS Read services are also acceptable in this area.
- **MODBUS flag area** – is an area, in which both MODBUS Read and Write services can be executed.
- **MODBUS register** – is an area, in which the WAGO-specific information and configuration registers are contained. Only MODBUS register services may be executed in this area.

10.5.1 Process Image

The main data interfaces between the PLC and the MODBUS slave are the local MODBUS process images in the PLC address area based on IEC 61131. The MODBUS input process image (MODBUS Input) is in the PIO and the MODBUS output process image (MODBUS Output) in the PII. Data memory blocks of 2 kB (1000 registers/word) are available for each local MODBUS input and output process image. The first 768 bytes of each of these data blocks are also provided for executing bit services.

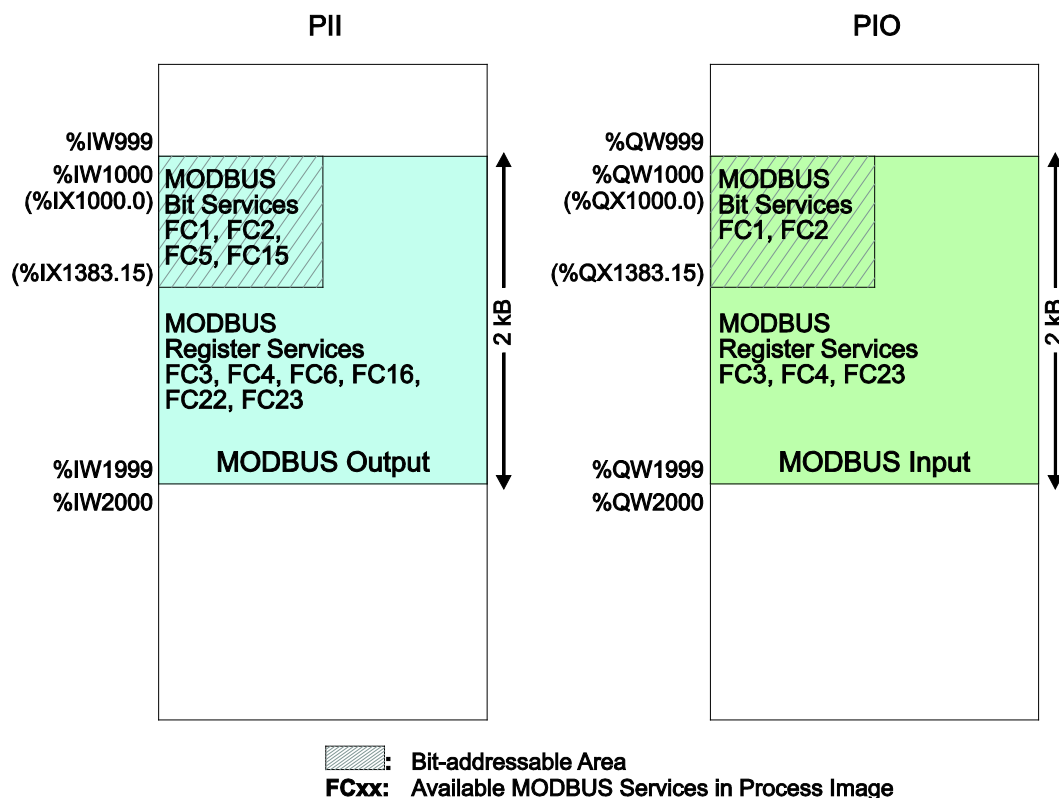


Figure 104: MODBUS Process Image

As no direct access to the I/O modules is provided by the fieldbus, data can be exchanged via this interface between the PLC and MODBUS for processing in the control system (PLC). Using this data in the individual I/O modules connected to the PLC can then be performed by the application.

10.5.2 Flag Area

MODBUS can also exchange data and fieldbus variables with the PLC via the flag area. Caution is urged, however, when using data and/or variables in this area that is accessed by both MODBUS and the PLC. This “conflicting” access is not protected from either side and could result in data inconsistency.

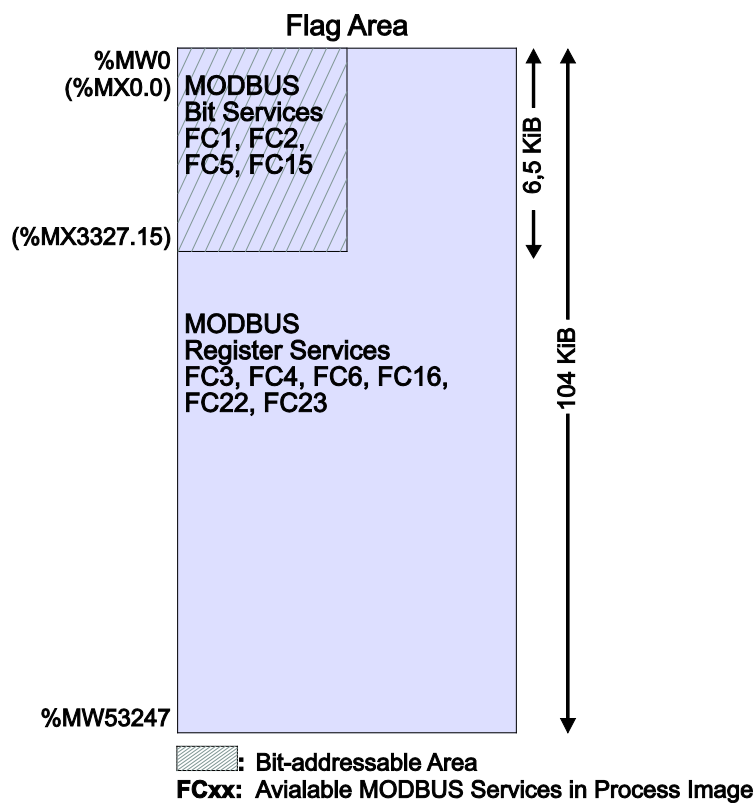


Figure 105: Flag Area

10.5.3 MODBUS Registers

WAGO-specific registers are implemented in the last MODBUS-relevant address area; this simplifies the reading of certain system and MODBUS information, as well as configuration.

The MODBUS address area reserved for these registers ranging from the MODBUS starting address of 4096 (0x1000) up to the MODBUS end address of 12287 (0x2FFF), without any allocation to the IEC 61131 address area. These registers can be queried using the register read services FC3, FC4 and FC23 and with the register write services FC6, FC16 and FC23. A detailed description of the individual registers is given in the section “WAGO MODBUS Registers”.

10.5.4 MODBUS Mapping

10.5.4.1 MODBUS Mapping for Write Bit Services FC1, FC2

The table below outlines the mapping for the MODBUS-reading, bit-oriented services:

- FC1 – Read Single Coil,
- FC2 – Read Discrete Inputs.

Table 203: MODBUS Mapping for Read Bit Services FC1, FC2

MODBUS Address (hexadecimal values in parentheses)	IEC 61131 Address	Description
0 ... 6143 (0x0000 ... 0x17FF)	%IX1000.0 ... %IX1383.15	MODBUS Output: 6144 PFC input bit variables in the first 384 registers/words (768 bytes) of the 2kB MODBUS output process image in the PII. Note: In this area, the read bit services return the content from the bit-addressed PII.
6144 ... 12287 (0x1800 ... 0x2FFF)	%QX1000.0 ... %QX1383.15	MODBUS Input: 6144 PFC output bit variables in the first 384 registers/words (768 bytes) of the 2 kB MODBUS-input process image in the PIO.
12288 ... 65535 (0x3000 ... 0xFFFF)	%MX0.0 ... %MX3327.15	Flag area: 53248 bit flags (6.5 kB) in the bit-addressed flag area

10.5.4.2 MODBUS Mapping for Write Bit Services FC5, FC15

The table below outlines the mapping for the MODBUS-writing, bit-oriented services:

- FC5 – Write Single Coil
- FC15 – Write Multiple Coils

Table 204: MODBUS Mapping for Write Bit Services FC5, FC15

MODBUS Address (hexadecimal values in parentheses)	IEC 61131 Address	Description
0 ... 6143 (0x0000 ... 0x17FF)	%IX1000.0 ... %IX1383.15	MODBUS Output: 6144 PFC input bit variables in the first 384 registers/words (768 bytes) of the 2kB MODBUS output process image in the PII.
6144 ... 12287 (0x1800 ... 0x2FFF)	%QX1000.0 ... %QX1383.15	MODBUS Output: MODBUS-only area for bit-oriented write access. Bit-based write services for this area are acknowledged by the MODBUS slave with the MODBUS exception code “ILLEGAL DATA ADDRESS” (0x02).
12288 ... 65535 (0x3000 ... 0xFFFF)	%MX0.0 ... %MX3327.15	Flag area: 53248 bit flags (6.5 kB) in the bit- addressed flag area

10.5.4.3 MODBUS Mapping for Read Register Services FC3, FC4, FC23

The table below outlines the mapping for the MODBUS-reading, register-oriented services:

- FC3 – Read Holding Registers,
- FC4 – Read Input Registers,
- FC23 – Read/Write Multiple Registers

Table 205: MODBUS Mapping for Read Register Services FC3, FC4, FC23

MODBUS Address (hexadecimal values in parentheses)	IEC 61131 Address	Description
0 ... 999 (0x0000 ... 0x03E7)	%IW1000 ... %IW1999	MODBUS Output: 1000 PFC input registers/words in the 2 kB MODBUS output process image in the PII. Note: In this area, the read register services return the content from the PII.
1000 ... 1999 (0x03E8 ... 0x07CF)	%QW1000 ... %QW1999	MODBUS Input: 1000 PFC output registers/words in the 2 kB MODBUS input process image in the PIO. Note on FC23: Only the Read portion of this service can be executed.
2000 ... 4095 (0x07D0 ... 0x0FFF)		Inhibited to MODBUS-only area for register-oriented read access. Register- based read services for this area are acknowledged by the MODBUS slave with the MODBUS exception code “ILLEGAL DATA ADDRESS” (0x02).
4096 ... 12287 (0x1000 ... 0x2FFF)	No IEC 61131 address	Information and configuration registers: Not all MODBUS addresses in this range are valid. Valid MODBUS addresses are described in the Section “WAGO MODBUS Registers”. Access to invalid addresses are acknowledged by the MODBUS slave with the MODBUS exception code “ILLEGAL DATA ADDRESS” (0x02). Note on FC23: The Write portion of this service can only be executed for registers that data can be written to.

Table 205: MODBUS Mapping for Read Register Services FC3, FC4, FC23

MODBUS Address (hexadecimal values in parentheses)	IEC 61131 Address	Description
12288 ... 65535 (0x3000 ... 0xFFFF)	%MW0 ... %MW53247	Flag Area: 53248 register/word flags (104 kB) in the flag area

10.5.4.4 MODBUS Mapping for Write Register Services FC6, FC16, FC22, FC23

The table below outlines the mapping for MODBUS-writing, register-oriented services.

- FC6 – Write Single Register,
- FC16 – Write Multiple Registers,
- FC22 – Mask Write Register, not for information and configuration registers
- FC23 – Read/Write Multiple Registers.

Table 206: MODBUS Mapping for Write Register Services FC6, FC16, FC22, FC23

MODBUS Address (hexadecimal values in parentheses)	IEC 61131 Address	Description
0 ... 999 (0x0000 ... 0x03E7)	%IW1000 ... %IW1999	MODBUS Output: 1000 PFC input registers/words in the 2 kB MODBUS output process image in the PII.
1000 ... 1999 (0x03E8 ... 0x07CF)	No access to: %QW1000 ... %QW1999	MODBUS Output: Inhibited MODBUS area for register- oriented write access. Register-oriented write services in this area are acknowledged by the MODBUS slave with the MODBUS exception code “ILLEGAL DATA ADDRESS” (0x02).
2000 ... 4095 (0x07D0 ... 0x0FFF)		Inhibited MODBUS area for register- oriented write access. Register-oriented write services in this area are acknowledged by the MODBUS slave with the MODBUS exception code “ILLEGAL DATA ADDRESS” (0x02).
4096 ... 12287 (0x1000 ... 0x2FFF) FC6, FC16, FC23 only, not FC22	No IEC 61131 address	Information and Configuration Registers: Not all MODBUS addresses in this area are valid and not all registers can be written to. Valid MODBUS addresses are described in the Section “WAGO MODBUS Registers”. Access to invalid addresses are acknowledged by the MODBUS slave with the MODBUS exception code “ILLEGAL DATA ADDRESS” (0x02).

Table 206: MODBUS Mapping for Write Register Services FC6, FC16, FC22, FC23

MODBUS Address (hexadecimal values in parentheses)	IEC 61131 Address	Description
12288 ... 65535 (0x3000 ... 0xFFFF)	%MW0 ... %MW53247	Flag Area: 53248 register/word flags (104 kB) in the flag area

10.6 WAGO MODBUS Register

System and MODBUS data can be read and some MODBUS parameters configured using the WAGO MODBUS registers. The following table lists all of the WAGO MODBUS registers.

Table 207: WAGO MODBUS Registers

MODBUS Address		Data Length in Words	Access	Description
Dec.	Hex.			
4130	0x1022	1	ro	Number of registers in the MODBUS input process image in the PIO
4131	0x1023	1	ro	Number of registers in the MODBUS output process image in the PII
4132	0x1024	1	ro	Number of bits in the MODBUS input process image in the PIO
4133	0x1025	1	ro	Number of bits in the MODBUS output process image in the PII
4136	0x1028	1	ro	IP configuration: BootP(1), DHCP(2) or fixed, coded IP address(4)
4138	0x102A	1	ro	Number of established TCP connections
4144	0x1030	1	r/w	MODBUS TCP Timeout (Changes apply only to new connections)
4145	0x1031	3	ro	MAC ID of the ETHERNET interface (eth0)
4151	0x1037	1	r/w	MODBUS TCP response delay
4160	0x1040	1	ro	PLC status
4352	0x1100	1	wo	Watchdog Command
4353	0x1101	1	ro	WatchdogStatus
4354	0x1102	1	rw	Watchdog Timeout (configuration register)
4355	0x1103	1	rw	Watchdog Config (configuration register)
8192	0x2000	1	ro	0x0000 (constant)
8193	0x2001	1	ro	0xFFFF (constant)
8194	0x2002	1	ro	0x1234 (constant)
8195	0x2003	1	ro	0xAAAA (constant)
8196	0x2004	1	ro	0x5555 (constant)

Table 207: WAGO MODBUS Registers

MODBUS Address		Data Length in Words	Access	Description
Dec.	Hex.			
8197	0x2005	1	ro	0x7FFF (constant)
8198	0x2006	1	ro	0x8000 (constant)
8199	0x2007	1	ro	0x3FFF (constant)
8200	0x2008	1	ro	0x4000 (constant)
8208	0x2010	1	ro	Revision (Firmware Index)
8209	0x2011	1	ro	Series code
8210	0x2012	1	ro	Device code
8211	0x2013	1	ro	Major Firmware Version
8212	0x2014	1	ro	Minor Firmware Version
8213	0x2015	1	ro	MBS Version

The WAGO MODBUS registers are described in more details in the following sections.

10.6.1 Process Image Properties

10.6.1.1 Register 0x1022 – Number of Registers in the MODBUS Input Process Image

This register contains the number of registers available in the MODBUS input process image (MODBUS input).

10.6.1.2 Register 0x1023 – Number of Registers in the MODBUS Output Process Image

This register contains the number of registers available in the MODBUS output process image (MODBUS output).

10.6.1.3 Register 0x1024 – Number of Bits in the MODBUS Input Process Image

This register contains the number of bits available in the MODBUS input process image (MODBUS input).

10.6.1.4 Register 0x1025 – Number of Bits in the MODBUS Output Process Image

This register contains the number of bits available in the MODBUS output process image (MODBUS output).

10.6.2 Network Configuration

10.6.2.1 Register 0x1028 – IP Configuration

This register contains information about the set IP configuration.

Possible values:

- 1 = BootP
- 2 = DHCP
- 4 = Fixed IP address

10.6.2.2 Register 0x102A – Number of Established TCP Connections

This register supplies the number of established TCP connections.

The maximum number of MODBUS TCP connections is 1000.

10.6.2.3 Register 0x1030 – MODBUS TCP Socket Timeout

This register contains the timeout value for the TCP sockets.

This value is given in units of 100ms (ticks). A new value is accepted only for new connections which have not yet been established. In the event of any changes, pre-established connections will continue to operate using the previously set timeout value.

10.6.2.4 Register 0x1031 – MAC Address for ETHERNET-Interface 1 (eth0)

This register provides the MAC address for the first ETHERNET interface (eth0). MAC may also provide a partial result.

10.6.2.5 Register 0x1037 - MODBUS TCP Response Delay

This register saves the value of the MODBUS response delay.

This value is specified in ms units. The maximum delay is 32 ms, default value is 0 ms (no delay). Transmission of the response to a MODBUS request is delayed from the time of processing (read and/or write register values) by the time set. In the meantime, incoming requests can only be processed when the previous response is sent. For MODBUS UDP, this applies to all requests and for MODBUS TCP, for each connection. The actual length of time between a MODBUS request and the associated response depends on the number of parallel requests overall system utilization; it is always greater than the response delay set. Changes to the response delay become effective immediately for each subsequent request.

10.6.3 PLC Status Register

Register 0x1040 provides the status (state) that the controller is currently in.
Possible values:

- 1 = PLC running – PLC status is RUNNING.
- 2 = PLC stopped – PLC status is STOPPED.

10.6.4 MODBUS Watchdog

The MODBUS watchdog monitors ongoing MODBUS communication. In the event that the configured monitoring time (see “Watchdog Timeout” Register) is exceeded without one single valid MODBUS query (trigger) being received from a MODBUS slave, the watchdog reacts and initiates the “Watchdog Timeout” reaction (previously configured in the “Watchdog Config” register). The watchdog must be continuously triggered by the MODBUS master to ensure that the set monitoring time does not expire. Triggering is performed by receiving any arbitrary MODBUS query from the entire volume of services supported by the MODBUS slave. These MODBUS-slave-supported services are listed in the Section “MODBUS Mapping”. The Explicit Trigger Mode is an exception to this rule and is elucidated in detail in the description of the “MODBUS Config” register (0x1103).

10.6.4.1 Register 0x1100 – Watchdog Command

This register receives commands for the MODBUS watchdog.
The following commands are accepted:

Table 208: Watchdog Commands

Value	Name		Explanation
0x5555	WATCHDOG_START		Starts the watchdog
	Error-free response		Watchdog has been successfully started, or restarted, and has the status “Running”.
	Error response	ILLEGAL FUNCTION (0x01)	Watchdog time has already expired. The watchdog must be reset with the command WATCHDOG_RESET.
		ILLEGAL DATA VALUE (0x03)	Watchdog not configured, i.e., the “Watchdog Timeout” register (0x1102) contains the value 0.
0x55AA	WATCHDOG_STOP		Stops the watchdog
	Error-free response		Watchdog was stopped successfully and has the status “Stopped”.
	Error response	ILLEGAL FUNCTION (0x01)	Watchdog monitoring time has already expired. The watchdog must then first be reset by the command WATCHDOG_RESET.
		ILLEGAL DATA VALUE (0x03)	Watchdog not configured, i.e., the “Watchdog Timeout” register (0x1102) contains the value 0.
0xAAAA	WATCHDOG_RESET		Resets the watchdog after a timeout
	Error-free response		Watchdog was reset successfully and has the status “Stopped” or “Unconfigured” when the “Watchdog Timeout” register (0x1102) contains the value 0.
	Error response	ILLEGAL DATA VALUE (0x03)	Watchdog does not have the status “Expired”.

The watchdog is only started by the command WATCHDOG_START. A prerequisite for successful startup is a valid timeout value in the “Watchdog Timeout” register (0x1102) and the status “Stopped” or “Running” (for restart), which the watchdog must have (see “Watchdog Status” register 0x1101). A response of ILLEGAL_DATA_VALUE indicates that the watchdog has not yet been configured (status “Unconfigured”, timeout value is “0”). If the watchdog has the status “Expired”, the WATCHDOG_START command is also rejected by the ILLEGAL_FUNCTION acknowledgement.

A running watchdog can be stopped by the command WATCHDOG_STOP. A stop request received several times in a row does not have any impact on the behavior of the watchdog and is therefore not acknowledged with an error response. By contrast, a stop command received when the watchdog has the status “Unconfigured” is rejected with the acknowledgement ILLEGAL_DATA_VALUE; if the watchdog has the status “Expired” this command is rejected by the exception code ILLEGAL_FUNCTION.

If the watchdog monitoring time has expired, the watchdog can only be reset by the command WATCHDOG_RESET. The watchdog cannot be restart until this

command is executed. Resetting the watchdog does not necessarily restart it automatically, however. To restart the watchdog after a reset, the command WATCHDOG_START must be sent. Possible reactions to expiring of the watchdog monitoring time (timeout) are described in the “Watchdog Config” register (0x1102). If the command WATCHDOG_RESET is received when the watchdog has a status other than “Expired”, this command is rejected with the exception code ILLEGAL_DATA_VALUE.

10.6.4.2 Register 0x1101 – Watchdog Status

This register provides the current status of the MODBUS watchdog. The watchdog can have any of the four following statuses:

Table 209: Watchdog Status

Value	Name	Explanation
0xFFFF	WATCHDOG_UNCONFIGURED	Watchdog not configured, i.e., the watchdog time-out register (0x1102) contains the value 0.
0x0000	WATCHDOG_STOPPED	Watchdog is not active (not started).
0x0001	WATCHDOG_RUNNING	Watchdog is active (started).
0x0002	WATCHDOG_EXPIRED	Watchdog monitoring time has expired.

If the “Watchdog Timeout” register (0x1102) contains the value 0, the Watchdog has not been configured – WATCHDOG_UNCONFIGURED. If the timeout value remains unchanged (0), the Watchdog cannot leave this state. After a configuration, the Watchdog switches to “Stopped” and can now be started.

The watchdog can only be started by the command WATCHDOG_START. When the watchdog is started, it assumes the status “Running” - WATCHDOG_RUNNING. Configuration changes in this state are no longer possible.

When the watchdog expires (status WATCHDOG_EXPIRED), the registers “Watchdog Status” (0x1101), “Watchdog Timeout” (0x1102) and “Watchdog Config” (0x1103) are the only registers that can be read. Access to other registers, with the exception of write access to the “Watchdog Command” register (0x1100), and bit access is acknowledged by the error ILLEGAL FUNCTION.

The configuration registers can only be written in the watchdog statuses WATCHDOG_UNCONFIGURED, WATCHDOG_STOPPED or WATCHDOG_EXPIRED. Only read access is permitted for these registers in the status WATCHDOG_RUNNING.

10.6.4.3 Register 0x1102 – Watchdog Timeout

This configuration register contains the watchdog timeout value. As the basic unit is 100 ms, the timeout value must be a multiple of 100 ms. Thus, the minimum timeout value can be set to 100 ms, while the maximum value can be set to 6553.5 seconds. If this value is 0, the watchdog cannot be started and will have

the status “Unconfigured”. The watchdog timeout register can be rewritten to the states “Unconfigured”, “Stopped” or “Expired”. Access to this register is read only while the watchdog is active.

10.6.4.4 Register 0x1103 – Watchdog Config

This register contains the configuration parameters for the watchdog.
The following parameters can be configured:

Table 210: Watchdog Configuration

Bit	Name/Bit Identifier	Explanation
0	Explicit triggering EXPLICIT_TRIGGER_ONLY	Controls explicit triggering
		0 All supported MODBUS queries are considered watchdog triggers (default setting). There is a special rule for the “Watchdog Status” register. See the description for bit 1 EXPLICIT_TRIGGER_ON_STATUS_REG.
		1 Explicit Trigger Mode – only the command WATCHDOG_START (0x5555), sent to the “Watchdog Command” register (0x1100), or reading of the “Watchdog Status” registers (0x1101), when Bit 1 EXPLICIT_TRIGGER_ON_STATUS_REG has been set accordingly, are considered valid trigger events for the MODBUS watchdog.
1	Triggering by access to the watchdog status register TRIGGER_ON_STATUS_REG	Controls triggering by read-only access to the “Watchdog Status” register
		0 Read access to the “Watchdog Status” register is not considered a trigger event (default setting).
		1 Read access to the “Watchdog Status” register is considered a trigger event.
2	Close-down of established TCP connections CLOSE_ALL_TCP_CONNECTIONS	Closes down all established TCP connections
		0 All established connections remain open.
		1 All established connections are closed (default setting).

The individual options are activated when the specific bit, or bit combination, is set.

The “Watchdog Config” register can be rewritten to the statuses “Unconfigured”, “Stopped” or “Expired”. Access to this register is read only while the watchdog is active.

10.6.5 MODBUS Constants Register

Registers 0x2000 ... 0x2008 provide constants based on the table “WAGO MODBUS Register”. It is possible to read all of the constants, or a consecutive portion of them, at once.

10.6.6 Electronic Nameplate

Registers 0x2010 to 0x2015 contain information from the electronic nameplate. It is possible to read the entire nameplate, or a consecutive portion of it, all at once.

10.6.6.1 Register 0x2010 – Revision (Firmware Index)

This register provides the consecutive revision index (firmware index) for the PFC200.

Example: 5 for Version 5.

10.6.6.2 Register 0x2011 – Series Designator

This register provides the designation for the WAGO series (Series Code) of the PFC200.

Example: 750 for WAGO-I/O SYSTEM 750.

10.6.6.3 Register 0x2012 – Device ID

This register provides the device ID (WAGO Item No.) of the controller.

Example: 8206.

10.6.6.4 Register 0x2013 – Major Firmware Version

This register provides the major part for the firmware version.

10.6.6.5 Register 0x2014 – Minor Firmware Version

This register provides the minor part for the firmware version.

10.6.6.6 Register 0x2015 – MBS Version

This register provides the version of the MODBUS slave library. The high byte contains the major version number and the low byte, the minor version number.

Example:

0x010A => Major version number = 1, Minor version number = 10.

10.7 Diagnostics

10.7.1 Diagnostics for the MODBUS Master

The status of the PLC, or of the control system, can be queried by the MODBUS master by reading the WAGO-specific register 0x1040 – “PLC Status” using MODBUS services FC3 (Read Holding Registers) or FC4 (Read Input Registers). The WAGO-specific register 0x1040 – “PLC Status” is explained in the Section “PLC Status Registers”.

The status of the MODBUS Watchdog can be requested using a register service (FC3 or FC4) with a query to the WAGO-specific register 0x1101 – “Watchdog Status Register”. Information about this is given in the Section “MODBUS Watchdog”.

The MODBUS service “Get Communication Event Counter” (FC11) is not supported in the current MODBUS slave Version V1.0.

10.7.2 Diagnostics for the Runtime System

Diagnostics for the MODBUS slaves can be executed by integrating the CODESYS library “BusDiag.lib” via the runtime system. The required function block, “DiagGetBusState() indicates the status of the fieldbus (here MODBUS) and is located in this library. Details about this function block are provided both in this document and in the online Help function for CODESYS.

10.7.3 Diagnostics for the Error Server

The MODBUS slave also supports the error service implemented in the PFC and generates diagnostic messages, which are stored permanently (in a file), or temporarily (in the RAM) and can be displayed directly via the WBM client. The following diagnoses are generated by the MODBUS slave:

Table 211: Diagnostics for the Error Server

Diagnostics ID	Diagnostic text	Method of saving	Explanation
0x00090000	Modbus Slave library loaded	Temporary	MODBUS slave library has been successfully loaded.
0x00090001	Modbus Slave library closed	Temporary	MODBUS slave library has been successfully unloaded.
0x00090002	Modbus Slave TCP started	Temporary	MODBUS slave successfully started in TCP mode.
0x00090003	Modbus Slave TCP start failed	Permanent	Starting the MODBUS slave in the TCP mode failed.
0x00090004	Modbus Slave TCP terminated	Temporary	MODBUS slave TCP mode successfully terminated.
0x00090005	Modbus Slave UDP started	Temporary	MODBUS slave successfully started in UDP mode.
0x00090006	Modbus Slave UDP start failed	Permanent	Starting the MODBUS slave in UDP mode failed.

Table 211: Diagnostics for the Error Server

Diagnostics ID	Diagnostic text	Method of saving	Explanation
0x00090007	Modbus Slave UDP terminated	Temporary	MODBUS slave UDP mode successfully terminated.
0x00090008	Modbus Slave RTU started	Temporary	MODBUS slave successfully started in the RTU mode.
0x00090009	Modbus Slave RTU start failed	Permanent	Starting the MODBUS slave in RTU mode failed.
0x0009000A	Modbus Slave RTU terminated	Temporary	MODBUS slave RTU mode successfully terminated.
0x0009000B	Modbus Slave data exchange started by PLC	Temporary	MODBUS slave data exchange started.
0x0009000C	Modbus Slave data exchange stopped by PLC	Temporary	MODBUS slave data exchange stopped.
0x0009000F	Modbus Slave PLC watchdog timer expired	Permanent	Monitoring time for controller (PLC) expired.
0x00090100	Modbus Slave common configuration failed.	Permanent	MODBUS slave configuration failed.
0x00090101	Modbus Slave TCP configured successfully.	Temporary	MODBUS slave TCP configuration completed successfully.
0x00090102	Modbus Slave TCP configuration failed.	Permanent	MODBUS slave TCP configuration failed.
0x00090103	Modbus Slave UDP configured successfully	Temporary	MODBUS slave UDP configuration completed successfully.
0x00090104	Modbus Slave UDP configuration failed.	Permanent	MODBUS slave UDP configuration failed.
0x00090105	Modbus Slave RTU configured successfully.	Temporary	MODBUS slave RTU configuration completed successfully.
0x00090106	Modbus Slave RTU configuration failed	Permanent	MODBUS slave RTU configuration failed.
0x00090107	Port for Modbus Slave RTU operation not free.	Permanent	Serial port for MODBUS slave RTU configuration already occupied.

Table 211: Diagnostics for the Error Server

Diagnostics ID	Diagnostic text	Method of saving	Explanation
0x00090108	Modbus Slave RTU configuration in RS-485 mode failed.	Permanent	MODBUS slave RTU configuration for the RS-485 mode has failed.
0x00090200	Modbus Slave Watchdog activated.	Temporary	MODBUS watchdog activated.
0x00090201	Modbus Slave Watchdog deactivated.	Temporary	MODBUS watchdog deactivated.
0x00090202	Modbus Slave Watchdog Timer expired.	Permanent	MODBUS watchdog monitoring time expired.
0x00090203	Modbus Slave has terminated all established TCP connections.	Permanent	All MODBUS TCP connections terminated due to timeout.
0x00090300	Modbus Slave: obtaining system resource failed	Permanent	Request for system resources by the MODBUS slave has failed.
0x00090301	Modbus Slave: processing system resource failed.	Permanent	Access to system resources by the MODBUS slave has failed.

11 MODBUS – e!RUNTIME

11.1 MODBUS Address Overview

	MODBUS Register Access	MODBUS Bit Access
PFC-OUT MODBUS-IN Size: 32000 registers	0x0000	0x0000
	Only read access FC3, FC4, FC23, FC66	Only read access FC1, FC2 0x7FFF
	0x7CFF	
PFC-IN MODBUS-OUT Size: 32000 registers	0x7D00	0x8000
	Read and write access FC3, FC4, FC6, FC16, FC23, FC66	Read and write access FC1, FC2, FC5, FC15 0xFFFF
	0xF9FF	
MODBUS Special registers Size: 1536 registers	0xFA00	
	Read and write access FC3, FC4, FC6, FC16, FC23, FC66	
	0xFFFF	

Figure 106: MODBUS Address Overview

11.2 MODBUS Registers

Table 212: WAGO MODBUS Registers

MODBUS Address		Data Length in Words	Access	Description
Dec.	Hex.			
Watchdog configuration register				
64,000	0xFA00	1	w	Watchdog command register
64,001	0xFA01	1	rw	Watchdog timeout register
64,002	0xFA02	1	ro	Watchdog status register
64,003	0xFA03	1	rw	Watchdog config register
64,004	0xFA04	1	rw	MODBUS TCP connection watchdog register
Status registers				
64,010	0xFA0A	1	ro	LED flash code I/O-LED (sequence 1 of 3)
64,011	0xFA0B	1	ro	LED flash code I/O-LED (sequence 2 of 3)
64,012	0xFA0C	1	ro	LED flash code I/O-LED (sequence 3 of 3)
64,013	0xFA0D	1	ro	PLC State : 1 = Stop; 2 = Run
Electronic Type Label				
64,016	0xFA10	4	ro	Order number, e.g., 0750810100400001
64,020	0xFA14	1	ro	Firmware version
64,021	0xFA15	1	ro	Hardware version
64,022	0xFA16	1	ro	Firmware loader
Process Image Version				
64,023	0xFA17	1	ro	Version of the MODBUS process image
Network Configuration				
64,032	0xFA20	3	ro	MAC-ID 1
Process Image Registers				
64064	0xFA40	1	ro	Number of input registers, analog and digital (total size of the MODBUS IN space) 0x7D00
64065	0xFA41	1	ro	Number of input registers, analog 0x7D00
64066	0xFA42	1	ro	Number of input registers, digital 0x8000
64067	0xFA43	1	ro	Number of output registers, analog and digital (total size of the MODBUS OUT space) 0x7D00
64068	0xFA44	1	ro	Number of output registers, analog 0x7D00

Table 212: WAGO MODBUS Registers

MODBUS Address		Data Length in Words	Access	Description
Dec.	Hex.			
64069	0xFA45	1	ro	Number of output registers, digital 0x8000
Constants Register				
64,160	0xFAA0	1	ro	Constant 0x1234
64,161	0xFAA1	1	ro	Constant 0xAAAA
64,162	0xFAA2	1	ro	Constant 0x5555
64,250	0xFAFA	1	ro	Live register

The WAGO MODBUS registers are described in more details in the following sections.

11.2.1 MODBUS Watchdog

The MODBUS watchdog monitors ongoing MODBUS communication. If no trigger event occurs during the configured watchdog time (see Section “Watchdog Timeout Register”) when the watchdog is running (“Running” status, see Section “Watchdog Status Register”), the state changes to “Expired” and an appropriate event is triggered in the runtime system. The Watchdog Config register defines which MODBUS requests from all the services supported by the MODBUS slave are trigger events. These MODBUS slave supported services are listed in the Section “MODBUS Mapping.”

11.2.1.1 Watchdog Command Register

The register 0xFA00 receives commands for the MODBUS watchdog. The following commands are accepted:

Table 213: Watchdog Commands

Value	Name	Explanation
0x5555	WATCHDOG_START	Starts the watchdog
	Error-free response	The watchdog was started successfully and is then in “Running” status. If a watchdog is already running, the command is regarded as an explicit trigger event.
	Error response ILLEGAL DATA VALUE (0x03)	The watchdog has already expired (“Expired” status) or the watchdog is not configured (“Unconfigured” status).
0x55AA	WATCHDOG_STOP	Stops an active watchdog (only Advanced mode)
	Error-free response	Watchdog was stopped successfully and then has the status “Stopped.”
	Error response ILLEGAL DATA VALUE (0x03)	The watchdog is not configured (“Unconfigured” status) or activated in Simple mode.
0xAAAA	WATCHDOG_RESET	Resets the watchdog after a timeout (Advanced mode only)
	Error-free response	The watchdog was successfully reset and has then the “Stopped” status.
	Error response ILLEGAL DATA VALUE (0x03)	The watchdog has not expired (status is not “Expired”) or is activated in Simple mode.

11.2.1.2 Watchdog Timeout Register

The configuration register 0xFA01 contains the watchdog timeout value. The time base is 1 ms. The time can therefore be set up to 65535 ms. If this value is 0, the watchdog cannot be started and will have the “Unconfigured” status.

A write access to this register is not possible with the watchdog active (“Running” or “Expired” status, see Section “Watchdog Status Register”) and is answered

with the “ILLEGAL_FUNCTION” error message.

If the watchdog is inactive, a write access in “Simple mode” (see Section “Watchdog Config Register,” Bit 7) immediately activates the watchdog and the set watchdog time begins. In this case, the watchdog then has “Running” status. If the watchdog is inactive, a write access in “Advanced Mode” keeps the watchdog inactive and only switches it to “Stopped” status.

11.2.1.3 Watchdog Status Register

The register 0xFA02 provides the current status of the MODBUS watchdog. The watchdog can have any of the four following states:

Table 214: Watchdog Status

Value	Name	Explanation
0xFFFF	WATCHDOG_UNCONFIGURED	Watchdog not configured, i.e., the “Watchdog Timeout” register (0xFA01) contains the value 0.
0x0000	WATCHDOG_STOPPED	Watchdog is configured but not active (not started).
0x0001	WATCHDOG_RUNNING	Watchdog is active (started).
0x0002	WATCHDOG_EXPIRED	The watchdog is active and the watchdog monitoring time has expired.

11.2.1.4 Watchdog Config Register

The register 0xFA03 contains the configuration parameters for the watchdog.
The following parameters can be configured:

Table 215: Watchdog Configuration

Bit	Name/Bit Identifier	Explanation
0	Explicit triggering EXPLICIT_ TRIGGER_ONLY	Controls explicit triggering
		0 All supported MODBUS requests are considered as watchdog triggers (default setting). There is a special rule for the Watchdog Status register. See the description for bit 1 EXPLICIT_TRIGGER_ON_STATUS_REG.
		1 Explicit Trigger Mode – only the command WATCHDOG_START (0x5555), sent to the Watchdog Command register (0xFA00), or reading of the Watchdog Status register (0xFA02), when Bit 1 EXPLICIT_TRIGGER_ON_STATUS_REG has been set accordingly, are considered as valid trigger events for the MODBUS watchdog.
1	Triggering by access to the watchdog status register TRIGGER_ON_ STATUS_REG	Controls triggering by read-only access to the Watchdog Status register
		0 Read access to the Watchdog Status register is not considered a trigger event (default setting).
		1 Read access to the Watchdog Status register is considered a trigger event.
2	Close-down of established TCP connections CLOSE_ALL_TCP_ CONNECTIONS	Controls the behavior of TCP connections with the watchdog timeout (transition to “Expired” status)
		0 All established connections remain open.
		1 All established connections are closed (default setting).

Table 215: Watchdog Configuration

Bit	Name/Bit Identifier	Explanation
7	Advanced/Simple mode switchover SELECTION_ ADVANCED_ SIMPLE_MODE	Determines the mode in which the watchdog is operating.
		0 Advanced Mode: The watchdog can only be started, stopped or reset with the Watchdog Command register (0xFA00). A write access to the Watchdog Config register (0xFA03) is not possible with the watchdog active (“Running” or “Expired” status). (Default setting)
		1 Simple Mode: The watchdog is triggered with any valid MODBUS-TCP/UDP query, the settings of Bit 0 ... 2 are taken into account here. If the watchdog times out (“Expired” status), it is implicitly reset and started with the next valid trigger. The watchdog can only be stopped by switching to Advanced mode.

The individual options are activated if the relevant bit or bit combination is set.

A write access to this register in Advanced mode (see bit 7) is not possible with the watchdog active (“Running” or “Expired” status, see Section “Watchdog Status Register”) and is answered in this case with the error “ILLEGAL_FUNCTION.”

11.2.1.5 MODBUS TCP Connection Watchdog Register

The register 0xFA04 contains the duration for the MODBUS-TCP connection monitoring. The time base is 10 ms. A time of up to 655350 ms can be set. If the register contains a value > 0 when a new TCP connection from a MODBUS master is accepted, the monitoring for this connection is started. Later changes to the register have no effect on the monitoring of existing connections. If the monitoring is started and no telegram is received from the connected MODBUS master within the set time, this connection is closed from one side with a reset.

11.2.2 Status Registers

11.2.2.1 PLC Status Register

The register 0xFA0D supplies the current status of the controller.
Possible values:

- 1 = PLC Stop - PLC is in STOP status.
- 2 = PLC Run - PLC is in RUN status

11.2.3 Electronic Nameplate

Registers 0xFA10–0xFA17 contain information from the electronic nameplate. It is possible to read the entire nameplate or a consecutive portion of it all at once.

11.2.3.1 Order Number

The registers 0xFA10–0xFA13 contain the WAGO order number of the controller.

Example: 0750-8202/0025-0001.

0xFA10 = 0750,
0xFA11 = 8202,
0xFA12 = 0025,
0xFA13 = 0001

11.2.3.2 Firmware Version

The register 0xFA14 contains the firmware version of the controller.

11.2.3.3 Hardware Version

The register 0xFA15 contains the hardware version of the controller.

11.2.3.4 Firmware Loader/Boot Loader

The register 0xFA16 contains the firmware loader/boot loader version of the controller.

11.2.4 MODBUS Process Image Version

The register 0xFA17 contains the MODBUS process image version of the controller.

11.2.5 MODBUS Process Image Registers

The registers 0xFA40–0xFA45 contain size information for the process image spaces of the controller for bit and register accesses.

11.2.6 Constants Registers

Registers 0xFAA0–0xFAA2 provide constants based on the “WAGO MODBUS Registers” table. It is possible to read all of the constants, or a consecutive portion of them at once.

0xFAA0 = 0x1234,
0xFAA1 = 0xAAAA,
0xFAA2 = 0x5555

11.2.7 Live Register

The register 0xFAFA can only be read and contains a counter that is incremented with each cycle of a task of the runtime environment with read and write access to the MODBUS process data.

11.3 Estimating the MODBUS Master CPU Load

Due to the real-time characteristics of the Linux[®] kernel used, many data points can generate many context changes.

For a one-off update (transmitting and receiving of a function code), a CPU time of approx. 800 µs can be assumed.

The CPU load (cpu_load) in percent can be estimated from the cycle time (t_z) for a query with the following rule of thumb:

$$\text{cpu_load} = 800 \mu\text{s} / t_z * 100$$

A cycle time of 100 ms thus results in a CPU load of 0.8%.

A maximum load of approx. 20% can be generated per connection, as this is limited by the network protocol. To minimize the CPU load:

- The cycle time must be as high as possible.
- As many data points as possible must be combined in a query.
- The minimum query interval can be increased (default value: 0 ms).

12 Diagnostics

12.1 Operating and Status Messages

The following tables contain descriptions of all operating and status messages for the controller which are indicated by LEDs.

12.1.1 Power Supply Indicating Elements

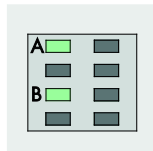


Figure 107: Power Supply Indicating Elements

Table 216: Legend for Figure “Power Supply Indicating Elements”

Description	Color	Description
A	Green/off	Status of system power supply voltage
B	Green/off	Status of field-side power supply voltage

Table 217: Field-Side Supply Diagnostics

Status	Explanation	Solution
Green	24V field-side supply voltage present	---
Off	No 24V field-side supply voltage present	Switch on the power supply. Check the supply voltage.

Table 218: System Power Supply Diagnostics

Status	Explanation	Solution
Green	24V system power supply voltage present	---
Off	No 24V system power supply voltage present	Switch on the power supply. Check the supply voltage.

12.1.2 Mobile Radio Network Status Indicators

CON 

Figure 108: Mobile Radio Network Status Indicators

Table 219: Legend for the “Mobile Radio Network Status Indicators” Figure

Description	Color	Description
CON	Green/off	Mobile radio network status

Table 220: Diagnostics via CON LED

Status	Explanation	Remedy
Green flashing 1800 ms ON, 200 ms OFF	2G or 3G network	---
Green flashing 200 ms ON, 1800 ms OFF	No network	<ul style="list-style-type: none"> - Check the SIM status via WBM. - Enter the PIN or PUK if necessary. - If the SIM status is “ready” and the error persists, check the antenna and its connection to the device. - If necessary, connect the antenna correctly or use another compatible antenna. - If possible, use a mobile phone or comparable device to check the signal quality of the mobile radio network locally.
OFF	Modem firmware update	Wait until the update process has complete. Do not switch off the device!

12.1.3 Fieldbus/System Indicating Elements

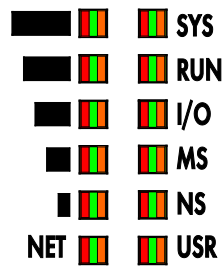


Figure 109: Indicating elements for fieldbus/system

Table 221: Diagnostics via SYS LED

Status	Explanation	Remedy
Green	Ready to operate - System start completed without errors	---
Yellow	Device is in startup/boot process and the RST button is not pressed.	---
Yellow flashing	“Fix IP Address” mode, temporary setting until the next reboot	Connect to the device via the standard address (192.168.1.17) or restart the device to restore the original value set.
Green/red flashing	Firmware update mode	---

The RUN LED indication depends on the runtime system enabled (CODESYS 2 or *e!RUNTIME*).

The following indications apply to the CODESYS 2 runtime system:

Table 222: Diagnostics RUN LED

Status	Explanation	Solution
Green	PLC program has the status "Run".	---
Green flashing	PLC program at a debug point.	Resume the program in the linked IDE (Integrated Development Environment) using "Single step" or "Start". If the connection has been interrupted, set the Run/Stop switch to "Stop" and then back to "Run" to enable the program to continue.
Green/red flashing	PLC is at a debug point and the Run/Stop switch has been set to "Stop".	Set the Run/Stop switch to "Run" to enable the program to continue.
Red	No PLC-program loaded or PLC program has the status "Stop".	Load the PLC program. Set the Run/Stop switch to "Run" to start the current program.

The following indications apply to the *e!RUNTIME* runtime system:

Table 223: RUN LED Diagnostics – *e!RUNTIME*

Status	Explanation	Remedy
Green	Applications loaded and all in the “RUN” status	---
Green flashing	No application and now boot project loaded	Load an application or boot project.
Red	Applications loaded and all in the “STOP” status	Set the mode selector switch to “RUN” to start the application.
Green/red flashing	At least one application in the “RUN” status and one in the “STOP” status	Start the stopped application.
Red, goes out briefly	Warm start reset completed	---
Red, goes out longer	Cold start reset completed	---
Red, flashing	At least one application after in the “STOP” status after exception (e.g., memory access error)	Start the application with a reset via the mode selector switch or in the connected IDE. If the application cannot be started, restart the controller. Contact WAGO Support if the error occurs again.
Orange/green flashing	Load above threshold value 1	Try to reduce the load on the system: <ul style="list-style-type: none"> - Change the CODESYS program. - End any fieldbus communication that is not essential, or reconfigure the fieldbuses. - Remove any non-critical tasks from the RT area. - Select a longer cycle time for IEC tasks.
Orange	Runtime system in debug state (breakpoint, single step, individual cycle)	Resume the application in the connected IDE with single step or start. Remove the breakpoint if necessary. If the connection has been interrupted, set the mode selector switch to “STOP” and then back to “RUN” to enable the application to continue
OFF	No runtime system loaded	Enable a runtime system, e.g., via the WBM.

Table 224: Diagnostics I/O LED

Status	Explanation	Solution
Green	Data cycle on the internal data bus, normal operating status.	---
Orange flashing	Startup phase; the internal data bus is being initialized. The startup phase is indicated by rapid flashing for about 1 ... 2 seconds.	Wait until initialization has been completed.
Red	A hardware fault is present.	Contact WAGO Support.
Red flashing (2 Hz)	An error which may be able to be eliminated is present.	First, try to eliminate the error by switching the device (power supply) off and then back on. Check the entire node structure for any errors. If you cannot eliminate the error, contact WAGO Support.
Red flashing (flashing sequence)	An internal data bus error is present.	An explanation of the flashing sequence is given in the section "Diagnostics Messages (I/O LEDs)".
Off	A library was not loaded, or a library function was not called up.	Restart the device. If you cannot eliminate the error, contact WAGO Support.

Table 225: Diagnostics via NET LED

Status	Explanation	Remedy
Green	3G network	---
Orange	2G network	---
Red	No network	<ul style="list-style-type: none"> - Check the SIM status via WBM. - Enter the PIN or PUK if necessary. - If the SIM status is “ready” and the error persists, check the antenna and its connection to the device. - If necessary, connect the antenna correctly or use another compatible antenna. - If possible, use a mobile phone or comparable device to check the signal quality of the mobile network locally.
Red flashing, blink code 1-1	No SIM card inserted	<ul style="list-style-type: none"> - Switch off the device. - Insert a SIM card. - Switch the device on again.
Red flashing, blink code 1-2	Invalid/locked SIM card	<ul style="list-style-type: none"> - Switch off the device. - Insert a different SIM card that is valid. - Switch the device on again.
Red flashing, blink code 2-1	Modem not connected	A hardware fault is present. Contact WAGO Support.
Red flashing, blink code 2-2	Modem initialization error (incompatible firmware version)	Load the modem firmware originally included as delivered from the factory back onto the device.
Red flashing, blink code 2-3	Timeout for modem reset	Switch the device off and on again.

Table 226: Diagnostics via Signal Quality LEDs






Status of signal quality LEDs					Signal quality
 (S1)	 (S2)	 (S3)	 (S4)	 (S5)	
OFF	OFF	OFF	OFF	OFF	No network
Yellow	OFF	OFF	OFF	OFF	Level 1
Green	OFF	OFF	OFF	OFF	Level 2
Green	Green	OFF	OFF	OFF	Level 3
Green	Green	Green	OFF	OFF	Level 4
Green	Green	Green	Green	OFF	Level 5
Green	Green	Green	Green	Green	Level 6

Table 227: Signal Quality Meaning

Signal quality	Explanation	
	UMTS	GSM
Level 1	Only UMTS, probable connection failure	Only GSM, probable connection failure
Level 2	HDSPA possible, instable connection	GPRS, very slow data connection
Level 3	HDSPA possible, no weather reserve	GPRS, stabile data connection, maximum data rate (54 kbit/s)
Level 4	HDSPA, stabile connection	EDGE, stabile, very slow data connection possible
Level 5	HDSPA, maximum data rate 7.2 Mbit/s	EDGE, maximum data rate (220 kBit/s)
Level 6	HSPA+ possible (if available)	E-EDGE possible (up to 1 Mbit/s)

 Depending on the mobile network load and limitations set by the mobile network service provider, the actual data rate may be slower than the signal quality allows at the time.

12.2 Diagnostics Messages (I/O LED)

12.2.1 Flashing Sequence

A diagnosis (fault/error) is always displayed as three flashing sequences in a cyclic manner:

1. The first flashing sequence (flickering) initiates reporting of the fault/error.
2. After a short break (approx. 1 second), the second flashing sequence starts. The number of blink pulses indicates the **error code**, which describes the type of error involved.
3. After a further break the third flashing sequence is initiated. The number of blink pulses indicates the **error argument**, which provides an additional description of the error, e.g., which of the I/O modules connected to the controller exhibits an error.

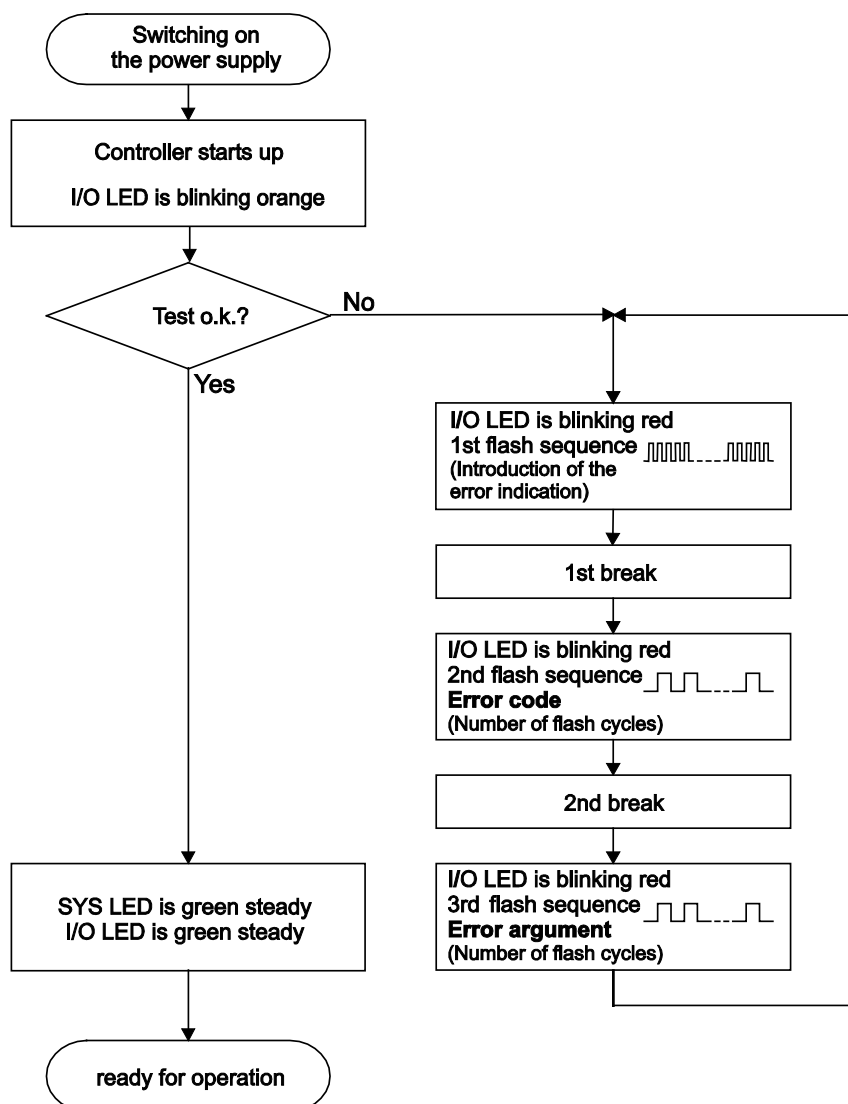


Figure 110: Flashing Sequence Process Diagram

12.2.2 Example of a Diagnostics Message Indicated by a Blink Code

The example below illustrates the representation of a diagnostics message via the blink code. A data error is indicated on the internal data bus, caused by the removal of an I/O module located at the 6th position of the bus node.

Initiation of the Start Phase

1. The I/O LED flashes for 1 cycle at about 10 Hz (10 flashes/second).
2. This is followed by a pause of about one second.

Error Code 4: Data Error in the Internal Data Bus

3. The I/O LED flashes for 4 cycles of about 1 Hz.
4. This is followed by a pause of about 1 second.

Error Argument 5: I/O Module at the 6th Slot

5. The I/O LED flashes for 5 cycles at 1 Hz.
This indicates that a disruption has occurred at the I/O module downcircuit of the 5th I/O module.
6. The blink code starts flickering when the start phase is initiated again. If there is only one error, this process is repeated.

12.2.3 Meaning of Blink Codes and Procedures for Troubleshooting

This section describes the diagnostics presented as blink codes via the I/O LEDs.

If the diagnostics cannot be cleared by the measured specified for them, contact WAGO support. Be ready to explain to them the blink code that is displayed.

Phone: +49 571 887 555
Fax: +49 571 887 8555
E-mail: support@wago.com

Table 228: Overview of Error Codes

Error code	Explanation
1	Hardware and configuration error
2	Configuration error
3	Internal data bus protocol error
4	Physical error on the internal data bus
5	Internal data bus initialization error
6	Not used
7	Not used
8	Not used
9	CPU exception error

Table 229: Error Code 1, Explanation of Blink Codes and Procedures for Troubleshooting

Error Argument	Cause	Remedy
-	Invalid parameter checksum for internal data bus interface	<ul style="list-style-type: none"> - Switch off the power to the controller and replace it. - Then switch the power back on.
1	Internal buffer overflow (max. amount of data exceeded) during inline code generation.	<ul style="list-style-type: none"> - Switch off the power to the controller. - Reduce the number of I/O modules. - Switch the power back on.
2	Data type of the I/O module(s) is not supported	<ul style="list-style-type: none"> - Update the controller firmware. If this error persists, there is an error in the I/O module. Identify the error as follows: - Switch off the power supply. - Place the end module in the middle of the I/O modules connected to the system. - Switch the power back on. - If the I/O flashes red switch off the power supply again and place the end module in the middle of the first half of the I/O modules (toward the controller). - If the LED is no longer flashing, switch off the power supply and place the end module in the middle of the second half of the I/O modules (away from the controller). - Switch the power back on. - Repeat this procedure until you establish which I/O module is defective. Then replace that module.
3	Unknown module type of the flash program memory	<ul style="list-style-type: none"> - Switch off the power to the controller and replace it. - Then switch the power back on.
4	Error occurred while writing to the flash memory	<ul style="list-style-type: none"> - Switch off the power to the controller and replace it. - Then switch the power back on.
5	Error occurred while erasing a flash sector	
6	The I/O module configuration after an internal data bus reset differs from the one after the last controller startup.	<ul style="list-style-type: none"> - Restart the controller by first switching off the power supply and then switching it back on, or by pressing the Reset button on the controller.

Table 229: Error Code 1, Explanation of Blink Codes and Procedures for Troubleshooting

Error Argument	Cause	Remedy
7	Error occurred while writing to the serial EEPROM	<ul style="list-style-type: none"> - Switch off the power to the controller and replace it. - Then switch the power back on.
8	Invalid hardware/firmware combination	
9	Invalid checksum in the serial EEPROM	
10	Fault when initializing the serial EEPROM.	
11	Error occurred while reading from the serial EEPROM	<ul style="list-style-type: none"> - Switch off the power supply to the controller and reduce the number of I/O modules. - Then switch the power back on.
12	Time to access the serial EEPROM exceeded	<ul style="list-style-type: none"> - Switch off the power to the controller and replace it. - Then switch the power back on.
14	Maximum number of gateway or mailbox modules exceeded.	<ul style="list-style-type: none"> - Switch off the power to the controller. - Reduce the number of gateway or mailbox modules. - Then switch the power back on.
16	Maximum number of I/O modules exceeded	<ul style="list-style-type: none"> - Switch off the power to the controller. - Reduce the number of I/O modules. - Then switch the power back on.

Table 230: Error Code 2, Explanation of Blink Codes and Procedures for Troubleshooting

Error Argument	Cause	Remedy
2	Maximum size of the process image exceeded	<ul style="list-style-type: none"> - Switch off the power to the controller. - Reduce the number of I/O modules. - Switch the power back on.

Table 231: Error Code 3, Explanation of Blink Codes and Procedures for Troubleshooting

Error Argument	Cause	Solution
--	Internal data bus communication error; defective I/O module cannot be identified	<p>If a power supply module (e.g., 750-602) is connected to the controller, ensure that this module functions properly (see Section “LED Signaling”). If the supply module does not exhibit any errors/faults, the I/O module is defective. Identify the defective I/O module as follows:</p> <ul style="list-style-type: none"> - Switch off the power supply. - Place the end module in the middle of the I/O modules connected to the system. - Switch the power back on. - If the I/O LED continues to flash red switch off the power supply again and place the end module in the middle of the first half of the I/O modules (toward the controller). <p>If only one I/O module is left and the LED continues to flash, either this module or the controller internal data bus interface is defective. Replace the defective module or the controller.</p> <ul style="list-style-type: none"> - If the LED is no longer flashing, switch off the power supply and place the end module in the middle of the second half of the I/O modules (away from the controller). - Switch the power back on. - Repeat this procedure until you establish which I/O module is defective. Then replace that module.

Table 232: Error Code 4, Explanation of Blink Codes and Procedures for Troubleshooting

Error Argument	Cause	Solution
--	Maximum permissible number of I/O modules exceeded.	<ul style="list-style-type: none"> - Switch off the power to the controller. - Reduce the number of I/O modules to an acceptable value. - Switch the power back on.
n*	Internal data bus disruption after the n th process data module.	<ul style="list-style-type: none"> - Switch off the power to the controller. - Replace the (n+1)th process data module. - Switch the power back on. <p>I/O modules that do not provide any data are ignored (e.g., supply module without diagnostics).</p>

Table 233: Error Code 5, Explanation of Blink Codes and Procedures for Troubleshooting

Error Argument	Cause	Solution
n*	Register communication error during internal data bus initialization	<ul style="list-style-type: none"> - Switch off the power to the controller. - Replace the (n+1)th process data module. - Switch the power back on. <p>I/O modules that do not provide any data are ignored (e.g., supply module without diagnostics).</p>

Table 234: Error Code 9, Explanation of Blink Codes and Procedures for Troubleshooting

Error Argument	Cause	Solution
1	Invalid program statement	<p>Malfunction of the program sequence.</p> <ul style="list-style-type: none"> - Please contact WAGO Support.
2	Stack overflow	<p>Malfunction of the program sequence.</p> <ul style="list-style-type: none"> - Please contact WAGO Support.
3	Stack underflow	<p>Malfunction of the program sequence.</p> <ul style="list-style-type: none"> - Please contact WAGO Support.
4	Invalid event (NMI)	<p>Malfunction of the program sequence.</p> <ul style="list-style-type: none"> - Please contact WAGO Support.

13 Service

13.1 Inserting and Removing the Memory Card

13.1.1 Inserting the Memory Card

1. Use an actuating tool or a screwdriver to open the transparent cover flap by flipping it upwards. The point where to position the tool is marked with an arrow.
2. Hold the memory card so that the contacts are visible on the right and the diagonal edge is at the top, as depicted in the figure below.
3. Insert the memory card in this position into the slot provided for it.
4. Push the memory card all the way in. When you let go, the memory card will move back a little and then snap in place (push-push mechanism).
5. Close the cover flap by flipping it down and pushing it in until it snaps into place.
6. You can seal the closed flap through the hole in the enclosure next to the flap.

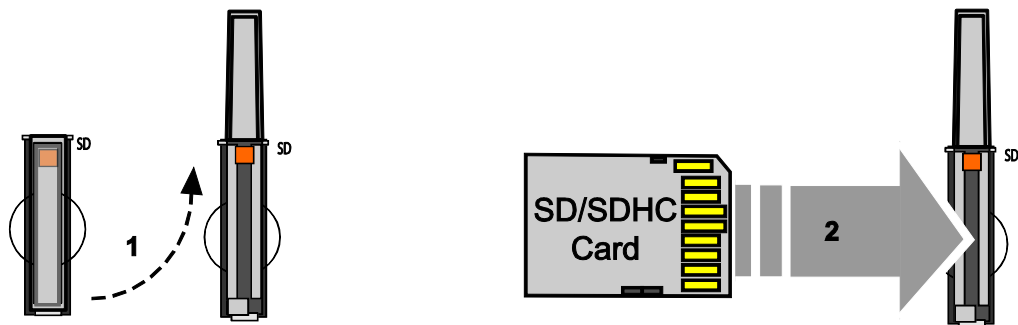


Figure 111: Inserting the Memory Card

13.1.2 Removing the Memory Card

1. First, remove any seal that may be in place.
2. Use an actuating tool or a screwdriver to open the transparent cover flap by flipping it upwards. The point where to position the tool is marked with an arrow.
3. To remove the memory card you must first push it slightly into the slot (push-push mechanism). This releases the mechanical locking mechanism.
4. As soon as you let go of the memory card, the memory card is pushed out a bit and you can remove it.
5. Remove the memory card.

6. Close the cover flap by flipping it down and pushing it in until it snaps into place.

13.2 Inserting and Removing the SIM Card

13.2.1 Inserting a SIM Card

1. Hold the SIM card so that the contacts are visible on the right and the diagonal edge is at the top, as depicted in the figure below.
2. Insert the SIM card in this position into the slot provided for it.
3. Use a suitable object (e.g., screwdriver) to push the SIM card in completely. When you let go, the SIM card will move back a little and then snap in place (push-push mechanism).

13.2.2 Removing a SIM Card

1. To remove the SIM card, you must push it slightly into the slot using a suitable object (e.g., screwdriver) (push-push mechanism). This releases the mechanical locking mechanism.
2. As soon as you release it again, the SIM card is pushed out a bit by the spring action.
3. Remove the SIM card.

13.3 Firmware Changes



Note

Obtain documentation appropriate for the firmware target version!

A firmware upgrade or downgrade can modify, remove or add controller properties and functions. As a result, described properties or functions of the controller may not be available or available properties or functions may not be described in the documentation. Therefore, use only documentation appropriate for the target firmware after an upgrade/downgrade.

If you have any questions, feel free to contact our WAGO Support.

13.3.1 Perform Firmware Upgrade

NOTICE

Do not switch the controller off!

The controller can be damaged by interrupting the upgrade process.

Do not switch the controller off during the upgrade process and do not disconnect the power supply!

Proceed as follows if you want to upgrade the controller to a later firmware version:

1. Save your application and the controller settings.
2. Switch off the controller.
3. Insert the memory card with the new firmware image into the memory card slot.
4. Switch on the controller.
5. After booting the controller, launch the WBM “Create Boot Image” page (you may have to temporarily change the IP address).
6. Create a new boot image on the internal memory.
7. Switch off the controller after completing the process.
8. Remove the memory card.
9. Switch on the controller.

The controller can now be started with the new firmware version.

13.3.2 Perform Firmware Downgrade

NOTICE

Do not switch the controller off!

The controller can be damaged by interrupting the downgrade process.
Do not switch the controller off during the downgrade process and do not disconnect the power supply!

Note

**Note the firmware version**

For devices with a factory installation of a firmware \geq FW 05, a simple downgrade to a version \leq FW 04 is not possible!
Use a special downgrade image.

Proceed as follows if you want to downgrade the controller to an earlier firmware version:

1. Save your application and the controller settings.
2. Switch off the controller.
3. Insert the memory card with the new firmware image into the memory card slot. Use a special downgrade image if necessary.
4. Switch on the controller.
5. After booting the controller, launch the WBM “Create Boot Image” page (you may have to temporarily change the IP address).
6. Create a new boot image on the internal memory.
7. Switch off the controller after completing the process.
8. Remove the memory card.
9. Switch on the controller.

The controller can now be started with the new firmware version.

13.3.3 Factory Reset

NOTICE

Do not switch the controller off!

The controller can be damaged by interrupting the factory reset process.
Do not switch the controller off during the factory reset process and do not disconnect the power supply!

Note



All parameters and passwords are overwritten!

All controller parameters and passwords are overwritten by a factory reset.
Any subsequently installed firmware functions are not overwritten.
If you have any questions, contact WAGO Support.

The controller is restarted after the factory reset.
Proceed as follows to factory reset the controller:

1. Press the Reset button (RST).
2. Set the mode selector switch to the “RESET” position.
3. Press and hold both buttons until the “SYS” LED alternately flashes red/green after approx. 8 seconds.
4. When the “SYS” LED flashes red/green alternately, release the mode selector switch and Reset button.

Note



Do not interrupt the reset process!

If you release the Reset button (RST) too early, then the controller restarts without performing the factory reset.

14 Removal

⚠ CAUTION

Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury.

14.1 Removing Devices

NOTICE

Perform work on devices only if they are de-energized!

Working on energized devices can damage them. Therefore, turn off the power supply before working on the devices.

14.1.1 Removing the Controller

1. Use a screwdriver blade to turn the locking disc until the nose of the locking disc no longer engages behind the carrier rail.
2. Remove the controller from the assembly by pulling the release tab.

Electrical connections for data or power contacts to adjacent I/O modules are disconnected when removing the controller.

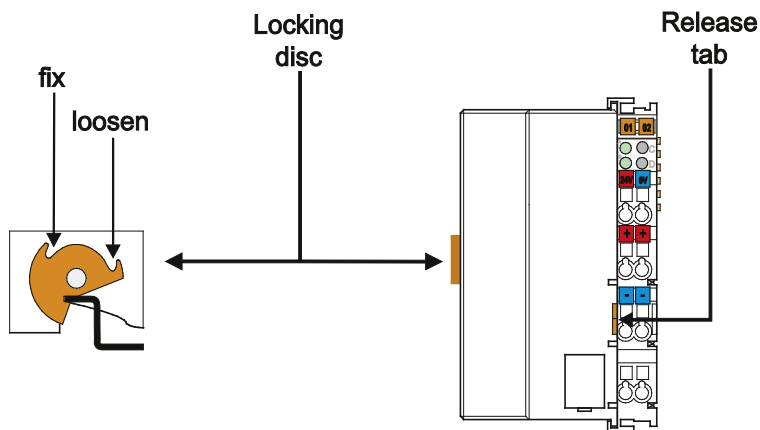


Figure 112: Release Tab of Controller

Note



Do not take the controller enclosure apart!

The enclosure sections are firmly joined. The feed-in section with the CAGE CLAMP® connections cannot be separated from the other enclosure section.

14.1.2 Removing the I/O Module

1. Remove the I/O module from the assembly by pulling the release tab.

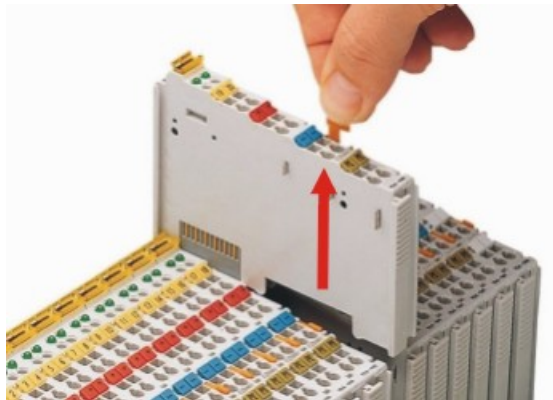


Figure 113: Removing the I/O Module (Example)

Electrical connections for data or power jumper contacts are disconnected when removing the I/O module.

Note



Do not take the controller enclosure apart!

The enclosure sections are firmly joined. The feed-in section with the CAGE CLAMP® connections cannot be separated from the other enclosure section.

15 Appendix

15.1 Structure of Process Data for the I/O Modules

The process image for the I/O modules on the internal data bus is built up word-by-word in the controller (with word alignment). The internal mapping method for data greater than one byte conforms to Intel formats.

The following section describes the representation for WAGO-I/O SYSTEM 750 (750 and 753 Series) I/O modules in the process image, as well as the configuration of the process values.

NOTICE

Equipment damage due to incorrect address!

To prevent any damage to the device in the field you must always take the process data for all previous byte or bit-oriented I/O modules into account when addressing an I/O module at any position in the fieldbus node.

Note



No direct access from fieldbus to the process image for I/O modules!

Any data that is required from the I/O module process image must be explicitly mapped in the CODESYS program to the data in the fieldbus process image and vice versa! Direct access is not possible!

15.1.1 Digital Input Modules

Digital input modules supply one bit of data per channel to specify the signal state for the corresponding channel. These bits are mapped into the Input Process Image.

Some digital modules have an additional diagnostic bit per channel in the Input Process Image. The diagnostic bit is used for detecting faults that occur (e.g., wire breaks and/or short circuits).

When analog input modules are also present in the node, the digital data is always appended after the analog data in the Input Process Image, grouped into bytes.

15.1.1.1 1 Channel Digital Input Module with Diagnostics

750-435

Table 235: 1 Channel Digital Input Module with Diagnostics

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Diagnostic bit S 1	Data bit DI 1

15.1.1.2 2 Channel Digital Input Modules

750-400, -401, -405, -406, -410, -411, -412, -427, -438, (and all variations),
753-400, -401, -405, -406, -410, -411, -412, -427

Table 236: 2 Channel Digital Input Modules

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Data bit DI 2 Channel 2	Data bit DI 1 Channel 1

15.1.1.3 2 Channel Digital Input Module with Diagnostics

750-419, -421, -424, -425,
753-421, -424, -425

Table 237: 2 Channel Digital Input Module with Diagnostics

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				Diagnostic bit S 2 Channel 2	Diagnostic bit S 1 Channel 1	Data bit DI 2 Channel 2	Data bit DI 1 Channel 1

15.1.1.4 2 Channel Digital Input Module with Diagnostics and Output Process Data

750-418,
753-418

The digital input module supplies a diagnostic and acknowledge bit for each input channel. If a fault condition occurs, the diagnostic bit is set. After the fault condition is cleared, an acknowledge bit must be set to re-activate the input. The diagnostic data and input data bit is mapped in the Input Process Image, while the acknowledge bit is in the Output Process Image.

Table 238: 2 Channel Digital Input Module with Diagnostics and Output Process Data

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				Diagnostic bit S 2 Channel 2	Diagnostic bit S 1 Channel 1	Data bit DI 2 Channel 2	Data bit DI 1 Channel 1

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				Acknowledge- ment bit Q 2 Channel 2	Acknowledge- ment bit Q 1 Channel 1	0	0

15.1.1.5 4 Channel Digital Input Modules

750-402, -403, -408, -409, -414, -415, -422, -423, -428, -432, -433, -1420, -1421, -1422, -1423
753-402, -403, -408, -409, -415, -422, -423, -428, -432, -433, -440

Table 239: 4 Channel Digital Input Modules

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				Data bit DI 4 Channel 4	Data bit DI 3 Channel 3	Data bit DI 2 Channel 2	Data bit DI 1 Channel 1

15.1.1.6 8 Channel Digital Input Modules

750-430, -431, -436, -437, -1415, -1416, -1417, -1418
753-430, -431, -434

Table 240: 8 Channel Digital Input Modules

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Data bit DI 8 Channel 8	Data bit DI 7 Channel 7	Data bit DI 6 Channel 6	Data bit DI 5 Channel 5	Data bit DI 4 Channel 4	Data bit DI 3 Channel 3	Data bit DI 2 Channel 2	Data bit DI 1 Channel 1

750-1425

The signal state of PTC inputs DI1 ... DI8 is transmitted to the fieldbus coupler/controller via input data byte D0.
The fault conditions are transmitted via input data byte D1.

The channels 1 ... 8 are switched on or off via the output data byte D1. The output data byte D0 is reserved and always has the value "0".

Table 241: 8 Channel Digital Input Module PTC with Diagnostics and Output Process Data

Input Process Image															
Input Byte D0								Input Byte D1							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Signal status DI 8 Channel 8	Signal status DI 7 Channel 7	Signal status DI 6 Channel 6	Signal status DI 5 Channel 5	Signal status DI 4 Channel 4	Signal status DI 3 Channel 3	Signal status DI 2 Channel 2	Signal status DI 1 Channel 1	Wire break/short circuit DB/KS 8 Channel 8	Wire break/short circuit DB/KS 7 Channel 7	Wire break/short circuit DB/KS 6 Channel 6	Wire break/short circuit DB/KS 5 Channel 5	Wire break/short circuit DB/KS 4 Channel 4	Wire break/short circuit DB/KS 3 Channel 3	Wire break/short circuit DB/KS 2 Channel 2	Wire break/short circuit DB/KS 1 Channel 1

[illegible]

15.1.1.8 16 Channel Digital Input Modules

750-1400, -1402, -1405, -1406, -1407

Table 242: 16 Channel Digital Input Modules

Input Process Image															
Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit	Data bit
DI 16	DI 15	DI 14	DI 13	DI 12	DI 11	DI 10	DI 9	DI 8	DI 7	DI 6	DI 5	DI 4	DI 3	DI 2	DI 1
Channel 16	Channel 15	Channel 14	Channel 13	Channel 12	Channel 11	Channel 10	Channel 9	Channel 8	Channel 7	Channel 6	Channel 5	Channel 4	Channel 3	Channel 2	Channel 1

15.1.2 Digital Output Modules

Digital output modules use one bit of data per channel to control the output of the corresponding channel. These bits are mapped into the Output Process Image.

Some digital modules have an additional diagnostic bit per channel in the Input Process Image. The diagnostic bit is used for detecting faults that occur (e.g., wire breaks and/or short circuits). For modules with diagnostic bit is set, also the data bits have to be evaluated.

When analog output modules are also present in the node, the digital image data is always appended after the analog data in the Output Process Image, grouped into bytes.

15.1.2.1 1 Channel Digital Output Module with Input Process Data

750-523

The digital output modules deliver 1 bit via a process value Bit in the output process image, which is illustrated in the input process image. This status image shows "manual mode".

Table 243: 1 Channel Digital Output Module with Input Process Data

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						not used	Status bit "Manual Operation"

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						not used	controls DO 1 Channel 1

15.1.2.2 2 Channel Digital Output Modules

750-501, -502, -509, -512, -513, -514, -517, -535, (and all variations),
753-501, -502, -509, -512, -513, -514, -517

Table 244: 2 Channel Digital Output Modules

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						controls DO 2 Channel 2	controls DO 1 Channel 1

15.1.2.3 2 Channel Digital Input Modules with Diagnostics and Input Process Data

750-507 (-508), -522,
753-507

The digital output modules have a diagnostic bit for each output channel. When an output fault condition occurs (i.e., overload, short circuit, or broken wire), a diagnostic bit is set. The diagnostic data is mapped into the Input Process Image, while the output control bits are in the Output Process Image.

Table 245: 2 Channel Digital Input Modules with Diagnostics and Input Process Data

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Diagnostic bit S 2 Channel 2	Diagnostic bit S 1 Channel 1

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						controls DO 2 Channel 2	controls DO 1 Channel 1

750-506,
753-506

The digital output module has 2-bits of diagnostic information for each output channel. The 2-bit diagnostic information can then be decoded to determine the exact fault condition of the module (i.e., overload, a short circuit, or a broken wire). The 4-bits of diagnostic data are mapped into the Input Process Image, while the output control bits are in the Output Process Image.

Table 246: 2 Channel Digital Input Modules with Diagnostics and Input Process Data 75x-506

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				Diagnostic bit S 3 Channel 2	Diagnostic bit S 2 Channel 2	Diagnostic bit S 1 Channel 1	Diagnostic bit S 0 Channel 1

Diagnostic bits S1/S0, S3/S2: = '00' standard mode
 Diagnostic bits S1/S0, S3/S2: = '01' no connected load/short circuit against +24 V
 Diagnostic bits S1/S0, S3/S2: = '10' Short circuit to ground/overload

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				not used	not used	controls DO 2 Channel 2	controls DO 1 Channel 1

15.1.2.4 4 Channel Digital Output Modules

750-504, -516, -519, -531,
753-504, -516, -531, -540

Table 247: 4 Channel Digital Output Modules

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				controls DO 4 Channel 4	controls DO 3 Channel 3	controls DO 2 Channel 2	controls DO 1 Channel 1

15.1.2.5 4 Channel Digital Output Modules with Diagnostics and Input Process Data

750-532

The digital output modules have a diagnostic bit for each output channel. When an output fault condition occurs (i.e., overload, short circuit, or broken wire), a diagnostic bit is set. The diagnostic data is mapped into the Input Process Image, while the output control bits are in the Output Process Image.

Table 248: 4 Channel Digital Output Modules with Diagnostics and Input Process Data

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				Diagnostic bit S 4 Channel 4	Diagnostic bit S 3 Channel 3	Diagnostic bit S 2 Channel 2	Diagnostic bit S 1 Channel 1

Diagnostic bit S = '0' no Error

Diagnostic bit S = '1' overload, short circuit, or broken wire

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				controls DO 4 Channel 4	controls DO 3 Channel 3	controls DO 2 Channel 2	controls DO 1 Channel 1

15.1.2.6 8 Channel Digital Output Module

750-530, -536, -1515, -1516
753-530, -534

Table 249: 8 Channel Digital Output Module

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
controls DO 8 Channel 8	controls DO 7 Channel 7	controls DO 6 Channel 6	controls DO 5 Channel 5	controls DO 4 Channel 4	controls DO 3 Channel 3	controls DO 2 Channel 2	controls DO 1 Channel 1

15.1.2.7 8 Channel Digital Output Modules with Diagnostics and Input Process Data

750-537

The digital output modules have a diagnostic bit for each output channel. When an output fault condition occurs (i.e., overload, short circuit, or broken wire), a diagnostic bit is set. The diagnostic data is mapped into the Input Process Image, while the output control bits are in the Output Process Image.

Table 250: 8 Channel Digital Output Modules with Diagnostics and Input Process Data

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Diagnostic bit S 8 Channel 8	Diagnostic bit S 7 Channel 7	Diagnostic bit S 6 Channel 6	Diagnostic bit S 5 Channel 5	Diagnostic bit S 4 Channel 4	Diagnostic bit S 3 Channel 3	Diagnostic bit S 2 Channel 2	Diagnostic bit S 1 Channel 1

Diagnostic bit S = '0' no Error
Diagnostic bit S = '1' overload, short circuit, or broken wire

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
controls DO 8 Channel 8	controls DO 7 Channel 7	controls DO 6 Channel 6	controls DO 5 Channel 5	controls DO 4 Channel 4	controls DO 3 Channel 3	controls DO 2 Channel 2	controls DO 1 Channel 1

15.1.2.8 16 Channel Digital Output Modules

750-1500, -1501, -1504, -1505

Table 251: 16 Channel Digital Output Modules

Output Process Image															
Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
controls DO 16 Channel 16	controls DO 15 Channel 15	controls DO 14 Channel 14	controls DO 13 Channel 13	controls DO 12 Channel 12	controls DO 11 Channel 11	controls DO 10 Channel 10	controls DO 9 Channel 9	controls DO 8 Channel 8	controls DO 7 Channel 7	controls DO 6 Channel 6	controls DO 5 Channel 5	controls DO 4 Channel 4	controls DO 3 Channel 3	controls DO 2 Channel 2	controls DO 1 Channel 1

15.1.2.9 8 Channel Digital Input/Output Modules

750-1502, -1506

Table 252: 8 Channel Digital Input/Output Modules

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Data bit DI 8	Data bit DI 7	Data bit DI 6	Data bit DI 5	Data bit DI 4	Data bit DI 3	Data bit DI 2	Data bit DI 1
Channel 8	Channel 7	Channel 6	Channel 5	Channel 4	Channel 3	Channel 2	Channel 1

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
controls DO 8	controls DO 7	controls DO 6	controls DO 5	controls DO 4	controls DO 3	controls DO 2	controls DO 1
Channel 8	Channel 7	Channel 6	Channel 5	Channel 4	Channel 3	Channel 2	Channel 1

15.1.3 Analog Input Modules

The analog input modules provide 16-bit measured data and 8 control/status bits per channel.

The controller only uses the 8 control/status bits internally for configuration/parameterization (e.g., via *WAGO-I/O-CHECK*).

Therefore, only the 16-bit measurement values for each channel are in Intel format and are mapped by word in the input process image for the controller.

When digital input modules are also present in the node, the analog input data is always mapped into the Input Process Image in front of the digital data.



Information

Information on the structure of control and status bytes

For detailed information on the structure of a particular I/O module's control/status bytes, please refer to that module's manual. Manuals for each module can be found on the Internet at www.wago.com.

15.1.3.1 1 Channel Analog Input Modules

750-491, (and all variations)

Table 253: 1 Channel Analog Input Modules

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	D1	D0	Measured Value U_D
1	D3	D2	Measured Value U_{ref}

15.1.3.2 2 Channel Analog Input Modules

750-452, -454, -456, -461, -462, -465, -466, -467, -469, -472, -474, -475, 476, -477, -478, -479, -480, -481, -483, -485, -492, (and all variations),
753-452, -454, -456, -461, -465, -466, -467, -469, -472, -474, -475, 476, -477, 478, -479, -483, -492, (and all variations)

Table 254: 2 Channel Analog Input Modules

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	D1	D0	Measured Value Channel 1
1	D3	D2	Measured Value Channel 2

15.1.3.3 4 Channel Analog Input Modules

750-450, -453, -455, -457, -459, -460, -468, (and all variations),
753-453, -455, -457, -459

Table 255: 4 Channel Analog Input Modules

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	D1	D0	Measured Value Channel 1
1	D3	D2	Measured Value Channel 2
2	D5	D4	Measured Value Channel 3
3	D7	D6	Measured Value Channel 4

15.1.3.4 3-Phase Power Measurement Module

750-493

The above Analog Input Modules have a total of 9 bytes of user data in both the Input and Output Process Image (6 bytes of data and 3 bytes of control/status). The following tables illustrate the Input and Output Process Image, which has a total of 6 words mapped into each image. Word alignment is applied.

Table 256: 3-Phase Power Measurement Module

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	S0	Status byte 0
1	D1	D0	Input data word 1
2	-	S1	Status byte 1
3	D3	D2	Input data word 2
4	-	S2	Status byte 2
5	D5	D4	Input data word 3

Output Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	C0	Control byte 0
1	D1	D0	Output data word 1
2	-	C1	Control byte 1
3	D3	D2	Output data word 2
4	-	C2	Control byte 2
5	D5	D4	Output data word 3

15.1.3.5 8 Channel Analog Input Modules

750-451

Table 257: 8 Channel Analog Input Modules

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	D1	D0	Measured Value Channel 1
1	D3	D2	Measured Value Channel 2
2	D5	D4	Measured Value Channel 3
3	D7	D6	Measured Value Channel 4
4	D9	D8	Measured Value Channel 5
5	D11	D10	Measured Value Channel 6
6	D13	D12	Measured Value Channel 7
7	D15	D14	Measured Value Channel 8

15.1.4 Analog Output Modules

The analog output modules provide 16-bit output values and 8 control/status bits per channel.

The controller only uses the 8 control/status bits internally for configuration/parameterization (e.g., via *WAGO-I/O-CHECK*).

Therefore, only the 16-bit measurement values for each channel are in Intel format and are mapped by word in the output process image for the controller.

When digital output modules are also present in the node, the analog output data is always mapped into the Output Process Image in front of the digital data.



Information

Information on the structure of control and status bytes

For detailed information on the structure of a particular I/O module's control/status bytes, please refer to that module's manual. Manuals for each module can be found on the Internet at www.wago.com.

15.1.4.1 2 Channel Analog Output Modules

750-550, -552, -554, -556, -560, -562, 563, -585, (and all variations),
753-550, -552, -554, -556

Table 258: 2 Channel Analog Output Modules

Output Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	D1	D0	Output Value Channel 1
1	D3	D2	Output Value Channel 2

15.1.4.2 4 Channel Analog Output Modules

750-553, -555, -557, -559,
753-553, -555, -557, -559

Table 259: 4 Channel Analog Output Modules

Output Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	D1	D0	Output Value Channel 1
1	D3	D2	Output Value Channel 2
2	D5	D4	Output Value Channel 3
3	D7	D6	Output Value Channel 4

15.1.5 Specialty Modules

WAGO has a host of Specialty I/O modules that perform various functions. With individual modules beside the data bytes also the control/status byte is mapped in the process image.

The control/status byte is required for the bidirectional data exchange of the module with the higher-ranking control system. The control byte is transmitted from the control system to the module and the status byte from the module to the control system.

This allows, for example, setting of a counter with the control byte or displaying of overshooting or undershooting of the range with the status byte.

The control/status byte always is in the process image in the Low byte.



Information

Information to the structure of the Control/Status byte

For detailed information about the structure of a particular module's control/status byte, please refer to that module's manual. Manuals for each module can be found on the Internet under: www.wago.com.

15.1.5.1 Counter Modules

750-404, (and all variations except of /000-005),
753-404, (and variation /000-003)

The above Counter Modules have a total of 5 bytes of user data in both the Input and Output Process Image (4 bytes of counter data and 1 byte of control/status). The counter value is supplied as 32 bits. The following tables illustrate the Input and Output Process Image, which has a total of 3 words mapped into each image. Word alignment is applied.

Table 260: Counter Modules 750-404, (and all variations except of /000-005),
753-404, (and variation /000-003)

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	S	Status byte
1	D1	D0	Counter value
2	D3	D2	

Output Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	C	Control byte
1	D1	D0	Counter setting value
2	D3	D2	

750-404/000-005

The above Counter Modules have a total of 5 bytes of user data in both the Input and Output Process Image (4 bytes of counter data and 1 byte of control/ status). The two counter values are supplied as 16 bits. The following tables illustrate the Input and Output Process Image, which has a total of 3 words mapped into each image. Word alignment is applied.

Table 261: Counter Modules 750-404/000-005

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	S	Status byte
1	D1	D0	Counter Value of Counter 1
2	D3	D2	Counter Value of Counter 2

Output Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	C	Control byte
1	D1	D0	Counter Setting Value of Counter 1
2	D3	D2	Counter Setting Value of Counter 2

750-638,
753-638

The above Counter Modules have a total of 6 bytes of user data in both the Input and Output Process Image (4 bytes of counter data and 2 bytes of control/status). The two counter values are supplied as 16 bits. The following tables illustrate the Input and Output Process Image, which has a total of 4 words mapped into each image. Word alignment is applied.

Table 262: Counter Modules 750-638, 753-638

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	S0	Status byte von Counter 1
1	D1	D0	Counter Value von Counter 1
2	-	S1	Status byte von Counter 2
3	D3	D2	Counter Value von Counter 2

Output Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	C0	Control byte von Counter 1
1	D1	D0	Counter Setting Value von Counter 1
2	-	C1	Control byte von Counter 2
3	D3	D2	Counter Setting Value von Counter 2

15.1.5.2 Pulse Width Modules

750-511, (and all variations /xxx-xxx)

The above Pulse Width modules have a total of 6 bytes of user data in both the Input and Output Process Image (4 bytes of channel data and 2 bytes of control/status). The two channel values are supplied as 16 bits. Each channel has its own control/status byte. The following table illustrates the Input and Output Process Image, which has a total of 4 words mapped into each image. Word alignment is applied.

Table 263: Pulse Width Modules 750-511, /xxx-xxx

Input and Output Process			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	C0/S0	Control/Status byte of Channel 1
1	D1	D0	Data Value of Channel 1
2	-	C1/S1	Control/Status byte of Channel 2
3	D3	D2	Data Value of Channel 2

15.1.5.3 Serial Interface Modules with alternative Data Format

750-650, (and the variations /000-002, -004, -006, -009, -010, -011, -012, -013),
750-651, (and the variations /000-001, -002, -003),
750-653, (and the variations /000-002, -007),
753-650, -653



Note

The process image of the / 003-000-variants depends on the parameterized operating mode!

With the freely parameterizable variations /003 000 of the serial interface modules, the desired operation mode can be set. Dependent on it, the process image of these modules is then the same, as from the appropriate variation.

The above Serial Interface Modules with alternative data format have a total of 4 bytes of user data in both the Input and Output Process Image (3 bytes of serial data and 1 byte of control/status). The following table illustrates the Input and Output Process Image, which have a total of 2 words mapped into each image. Word alignment is applied.

Table 264: Serial Interface Modules with alternative Data Format

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	D0	C/S	Data byte	Control/status byte
1	D2	D1	Data bytes	

15.1.5.4 Serial Interface Modules with Standard Data Format

750-650/000-001, -014, -015, -016
750-653/000-001, -006

The above Serial Interface Modules with Standard Data Format have a total of 6 bytes of user data in both the Input and Output Process Image (5 bytes of serial data and 1 byte of control/status). The following table illustrates the Input and Output Process Image, which have a total of 3 words mapped into each image. Word alignment is applied.

Table 265: Serial Interface Modules with Standard Data Format

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	D0	C/S	Data byte	Control/status byte
1	D2	D1	Data bytes	
2	D4	D3		

15.1.5.5 Data Exchange Module

750-654, (and the variation /000-001)

The Data Exchange modules have a total of 4 bytes of user data in both the Input and Output Process Image. The following tables illustrate the Input and Output Process Image, which has a total of 2 words mapped into each image. Word alignment is applied.

Table 266: Data Exchange Module

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	D1	D0	Data bytes	
1	D3	D2		

15.1.5.6 SSI Transmitter Interface Modules

750-630 (and all variations)



Note

The process image of the / 003-000-variants depends on the parameterized operating mode!

The operating mode of the configurable /003-000 I/O module versions can be set. Based on the operating mode, the process image of these I/O modules is then the same as that of the respective version.

The above SSI Transmitter Interface modules have a total of 4 bytes of user data in the Input Process Image, which has 2 words mapped into the image. Word alignment is applied.

Table 267: SSI Transmitter Interface Modules

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	D1	D0	Data bytes
1	D3	D2	

15.1.5.7 Incremental Encoder Interface Modules

750-631/000-004, -010, -011

The above Incremental Encoder Interface modules have 5 bytes of input data and 3 bytes of output data. The following tables illustrate the Input and Output Process Image, which have 4 words into each image. Word alignment is applied.

Table 268: Incremental Encoder Interface Modules 750-631/000-004, --010, -011

Input Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	S	not used	Status byte
1	D1	D0	Counter word	
2	-	-	not used	
3	D4	D3	Latch word	

Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	C	not used	Control byte
1	D1	D0	Counter setting word	
2	-	-	not used	
3	-	-	not used	

750-634

The above Incremental Encoder Interface module has 5 bytes of input data (6 bytes in cycle duration measurement mode) and 3 bytes of output data. The following tables illustrate the Input and Output Process Image, which has 4 words mapped into each image. Word alignment is applied.

Table 269: Incremental Encoder Interface Modules 750-634

Input Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	S	not used	Status byte
1	D1	D0	Counter word	
2	-	(D2) *)	not used	(Periodic time)
3	D4	D3	Latch word	

*) If cycle duration measurement mode is enabled in the control byte, the cycle duration is given as a 24-bit value that is stored in D2 together with D3/D4.

Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	C	not used	Control byte
1	D1	D0	Counter setting word	
2	-	-	not used	
3	-	-		

750-637

The above Incremental Encoder Interface Module has a total of 6 bytes of user data in both the Input and Output Process Image (4 bytes of encoder data and 2 bytes of control/status). The following table illustrates the Input and Output Process Image, which have 4 words mapped into each image. Word alignment is applied.

Table 270: Incremental Encoder Interface Modules 750-637

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	C0/S0	Control/Status byte of Channel 1	
1	D1	D0	Data Value of Channel 1	
2	-	C1/S1	Control/Status byte of Channel 2	
3	D3	D2	Data Value of Channel 2	

750-635,
753-635

The above Digital Pulse Interface module has a total of 4 bytes of user data in both the Input and Output Process Image (3 bytes of module data and 1 byte of control/status). The following table illustrates the Input and Output Process Image, which have 2 words mapped into each image. Word alignment is applied.

Table 271: Digital Pulse Interface Modules 750-635

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	D0	C0/S0	Data byte	Control/status byte
1	D2	D1	Data bytes	

15.1.5.8 DC-Drive Controller

750-636

The DC-Drive Controller maps 6 bytes into both the input and output process image. The data sent and received are stored in up to 4 input and output bytes (D0 ... D3). Two control bytes (C0, C1) and two status bytes (S0/S1) are used to control the I/O module and the drive.

In addition to the position data in the input process image (D0 ... D3), it is possible to display extended status information (S2 ... S5). Then the three control bytes (C1 ... C3) and status bytes (S1 ... S3) are used to control the data flow.

Bit 3 of control byte C1 (C1.3) is used to switch between the process data and the extended status bytes in the input process image (Extended Info_ON). Bit 3 of status byte S1 (S1.3) is used to acknowledge the switching process.

Table 272: DC-Drive Controller 750-636

Input Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	S1	S0	Status byte S1	Status byte S0
1	D1*) / S3**)	D0*) / S2**)	Actual position*) / Extended status byte S3**)	Actual position (LSB) / Extended status byte S2**)
2	D3*) / S5**)	D2*) / S4**)	Actual position (MSB) / Extended status byte S3**)	Actual position*) / Extended status byte S4**)

*) ExtendedInfo_ON = '0'.

**) ExtendedInfo_ON = '1'.

Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	C1	C0	Control byte C1	Control byte C0
1	D1	D0	Setpoint position	Setpoint position (LSB)
2	D3	D2	Setpoint position (MSB)	Setpoint position

15.1.5.9 Stepper Controller

750-670

The Stepper controller RS422 / 24 V / 20 mA 750-670 provides the fieldbus coupler 12 bytes input and output process image via 1 logical channel. The data to be sent and received are stored in up to 7 output bytes (D0 ... D6) and 7 input bytes (D0 ... D6), depending on the operating mode.

Output byte D0 and input byte D0 are reserved and have no function assigned.

One I/O module control and status byte (C0, S0) and 3 application control and status bytes (C1 ... C3, S1 ... S3) provide the control of the data flow.

Switching between the two process images is conducted through bit 5 in the control byte (C0 (C0.5). Activation of the mailbox is acknowledged by bit 5 of the status byte S0 (S0.5).

Table 273: Stepper Controller RS 422 / 24 V / 20 mA 750-670

Input Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	reserved	S0	reserved	Status byte S0
1	D1	D0	Process data*) / Mailbox**)	
2	D3	D2		
3	D5	D4		
4	S3	D6	Status byte S3	Process data*) / reserved**)
5	S1	S2	Status byte S1	Status byte S2

*) Cyclic process image (Mailbox disabled)

**) Mailbox process image (Mailbox activated)

Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	reserved	C0	reserved	Control byte C0
1	D1	D0	Process data*) / Mailbox**)	
2	D3	D2		
3	D5	D4		
4	C3	D6	Control byte C3	Process data*) / reserved**)
5	C1	C2	Control byte C1	Control byte C2

*) Cyclic process image (Mailbox disabled)

**) Mailbox process image (Mailbox activated)

15.1.5.10 RTC Module

750-640

The RTC Module has a total of 6 bytes of user data in both the Input and Output Process Image (4 bytes of module data and 1 byte of control/status and 1 byte ID for command). The following table illustrates the Input and Output Process Image, which have 3 words mapped into each image. Word alignment is applied.

Table 274: RTC Module 750-640

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	ID	C/S	Command byte	Control/status byte
1	D1	D0	Data bytes	
2	D3	D2		

15.1.5.11 DALI/DSI Master Module

750-641

The DALI/DSI Master module has a total of 6 bytes of user data in both the Input and Output Process Image (5 bytes of module data and 1 byte of control/status). The following tables illustrate the Input and Output Process Image, which have 3 words mapped into each image. Word alignment is applied.

Table 275: DALI/DSI Master Module 750-641

Input Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	D0	S	DALI Response	Status byte
1	D2	D1	Message 3	DALI Address
2	D4	D3	Message 1	Message 2

Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	D0	C	DALI command, DSI dimming value	Control byte
1	D2	D1	Parameter 2	DALI Address
2	D4	D3	Command extension	Parameter 1

15.1.5.12 DALI Multi-Master Module

753-647

The DALI Multi-Master module occupies a total of 24 bytes in the input and output range of the process image.

The DALI Multi-Master module can be operated in "Easy" mode (default) and "Full" mode. "Easy" mode is used to transmit simply binary signals for lighting control. Configuration or programming via DALI master module is unnecessary in "Easy" mode.

Changes to individual bits of the process image are converted directly into DALI commands for a pre-configured DALI network. 22 bytes of the 24-byte process image can be used directly for switching of electronic ballasts (ECG), groups or scenes in "Easy" mode. Switching commands are transmitted via DALI and group addresses, where each DALI and each group address is represented by a 2-bit pair.

The structure of the process data is described in detail in the following tables.

Table 276: Overview of Input Process Image in the "Easy" Mode

Input process image				
Offset	Byte designation		Note	
	High byte	Low byte		
0	-	S	res.	Status, activate broadcast Bit 0: 1-/2-button mode Bit 2: Broadcast status ON/OFF Bit 1,3-7: -
1	DA4...DA7	DA0...DA3	Bitpaar für DALI-Adresse DA0: Bit 1: Bit set = ON Bit not set = OFF Bit 2: Bit set = Error Bit not set = No error Bit pairs DA1 ... DA63 similar to DA0.	
2	DA12...DA15	DA8...DA11		
3	DA20...DA23	DA16...DA19		
4	DA28...DA31	DA24...DA27		
5	DA36...DA39	DA32...DA35		
6	DA44...DA47	DA40...DA43		
7	DA52...DA55	DA48...DA51		
8	DA60...DA63	DA56...DA59		
9	GA4...GA7	GA0...GA3	Bit pair for DALI group address GA0: Bit 1: Bit set = ON Bit not set = OFF Bit 2: Bit set = Error Bit not set = No error Bit pairs GA1 ... GA15 similar to GA0.	
10	GA12...GA15	GA8...GA11		
11	-	-	Not in use	

DA = DALI address
GA = Group address

Table 277: Overview of the Output Process Image in the "Easy" Mode

Output process image				
Offset	Byte designation		Note	
	High byte	Low byte		
0	-	S	res.	Broadcast ON/OFF and activate: Bit 0: Broadcast ON Bit 1: Broadcast OFF Bit 2: Broadcast ON/OFF/dimming Bit 3: Broadcast short ON/OFF Bits 4 ... 7: reserved
1	DA4...DA7	DA0...DA3	Bit pair for DALI address DA0: Bit 1: short: DA switch ON long: dimming, brighter Bit 2: short: DA switch OFF long: dimming, darker Bit pairs DA1 ... DA63 similar to DA0.	
2	DA12...DA15	DA8...DA11		
3	DA20...DA23	DA16...DA19		
4	DA28...DA31	DA24...DA27		
5	DA36...DA39	DA32...DA35		
6	DA44...DA47	DA40...DA43		
7	DA52...DA55	DA48...DA51		
8	DA60...DA63	DA56...DA59		
9	GA4...GA7	GA0...GA3	Bitpaar für DALI-Gruppenadresse GA0: Bit 1: short: GA switch ON long: dimming, brighter Bit 2: short: GA switch OFF long: dimming, darker Bit pairs GA1 ... GA15 similar to GA0.	
10	GA12...GA15	GA8...GA11		
11	Bit 8...15	Bit 0...7	Switch scene 0...15	

DA = DALI address
GA = Group address

15.1.5.13 LON[®] FTT Module

753-648

The process image of the LON[®] FTT module consists of a control/status byte and 23 bytes of bidirectional communication data that is processed by the WAGO-I/O-PRO function block "LON_01.lib". This function block is essential for the function of the LON[®] FTT module and provides a user interface on the control side.

15.1.5.14 EnOcean Radio Receiver

750-642

The EnOcean radio receiver has a total of 4 bytes of user data in both the Input and Output Process Image (3 bytes of module data and 1 byte of control/status). The following tables illustrate the Input and Output Process Image, which have 2 words mapped into each image. Word alignment is applied.

Table 278: EnOcean Radio Receiver 750-642

Input Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	D0	S	Data byte	Status byte
1	D2	D1	Data bytes	

Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	C	not used	Control byte
1	-	-	not used	

15.1.5.15 MP Bus Master Module

750-643

The MP Bus Master Module has a total of 8 bytes of user data in both the Input and Output Process Image (6 bytes of module data and 2 bytes of control/status). The following table illustrates the Input and Output Process Image, which have 4 words mapped into each image. Word alignment is applied.

Table 279: MP Bus Master Module 750-643

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	C1/S1	C0/S0	extended Control/Status byte	Control/status byte
1	D1	D0	Data bytes	
2	D3	D2		
3	D5	D4		

15.1.5.16 *Bluetooth*[®] RF-Transceiver

750-644

The size of the process image for the *Bluetooth*[®] module can be adjusted to 12, 24 or 48 bytes.

It consists of a control byte (input) or status byte (output); an empty byte; an overlay able mailbox with a size of 6, 12 or 18 bytes (mode 2); and the *Bluetooth*[®] process data with a size of 4 to 46 bytes.

Thus, each *Bluetooth*[®] module uses between 12 and 48 bytes in the process image. The sizes of the input and output process images are always the same.

The first byte contains the control/status byte; the second contains an empty byte.

Process data attach to this directly when the mailbox is hidden. When the mailbox is visible, the first 6, 12 or 18 bytes of process data are overlaid by the mailbox data, depending on their size. Bytes in the area behind the optionally visible mailbox contain basic process data. The internal structure of the *Bluetooth*[®] process data can be found in the documentation for the *Bluetooth*[®] 750-644 RF Transceiver.

The mailbox and the process image sizes are set with the startup tool WAGO-I/O-CHECK.

Table 280: *Bluetooth*[®] RF-Transceiver 750-644

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	C0/S0	not used	Control/status byte
1	D1	D0	Mailbox (0, 3, 6 or 9 words) and Process data (2-23 words)	
2	D3	D2		
3	D5	D4		
...		
max. 23	D45	D44		

15.1.5.17 Vibration Velocity/Bearing Condition Monitoring VIB I/O

750-645

The Vibration Velocity/Bearing Condition Monitoring VIB I/O has a total of 12 bytes of user data in both the Input and Output Process Image (8 bytes of module data and 4 bytes of control/status). The following table illustrates the Input and Output Process Image, which have 8 words mapped into each image. Word alignment is applied.

Table 281: Vibration Velocity/Bearing Condition Monitoring VIB I/O 750-645

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	C0/S0	not used	Control/status byte (log. Channel 1, Sensor input 1)
1	D1	D0	Data bytes (log. Channel 1, Sensor input 1)	
2	-	C1/S1	not used	Control/status byte (log. Channel 2, Sensor input 2)
3	D3	D2	Data bytes (log. Channel 2, Sensor input 2)	
4	-	C2/S2	not used	Control/status byte (log. Channel 3, Sensor input 1)
5	D5	D4	Data bytes (log. Channel 3, Sensor input 3)	
6	-	C3/S3	not used	Control/status byte (log. Channel 4, Sensor input 2)
7	D7	D6	Data bytes (log. Channel 4, Sensor input 2)	

15.1.5.18 KNX/EIB/TP1 Module

753-646

The KNX/TP1 module appears in router and device mode with a total of 24-byte user data within the input and output area of the process image, 20 data bytes and 2 control/status bytes. Even though the additional bytes S1 or C1 are transferred as data bytes, they are used as extended status and control bytes. The opcode is used for the read/write command of data and the triggering of specific functions of the KNX/EIB/TP1 module. Word-alignment is used to assign 12 words in the process image. Access to the process image is not possible in router mode. Telegrams can only be tunneled.

In device mode, access to the KNX data can only be performed via special function blocks of the IEC application. Configuration using the ETS engineering tool software is required for KNX.

Table 282: KNX/EIB/TP1 Module 753-646

Input Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	S0	not used	Status byte
1	S1	OP	extended Status byte	Opcode
2	D1	D0	Data byte 1	Data byte 0
3	D3	D2	Data byte 3	Data byte 2
4	D5	D4	Data byte 5	Data byte 4
5	D7	D6	Data byte 7	Data byte 6
6	D9	D8	Data byte 9	Data byte 8
7	D11	D10	Data byte 11	Data byte 10
8	D13	D12	Data byte 13	Data byte 12
9	D15	D14	Data byte 15	Data byte 14
10	D17	D16	Data byte 17	Data byte 16
11	D19	D18	Data byte 19	Data byte 18

Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	C0	not used	Control byte
1	C1	OP	extended Control byte	Opcode
2	D1	D0	Data byte 1	Data byte 0
3	D3	D2	Data byte 3	Data byte 2
4	D5	D4	Data byte 5	Data byte 4
5	D7	D6	Data byte 7	Data byte 6
6	D9	D8	Data byte 9	Data byte 8
7	D11	D10	Data byte 11	Data byte 10
8	D13	D12	Data byte 13	Data byte 12
9	D15	D14	Data byte 15	Data byte 14
10	D17	D16	Data byte 17	Data byte 16
11	D19	D18	Data byte 19	Data byte 18

15.1.5.19 AS-interface Master Module

750-655

The length of the process image of the AS-interface master module can be set to fixed sizes of 12, 20, 24, 32, 40 or 48 bytes.

It consists of a control or status byte, a mailbox with a size of 0, 6, 10, 12 or 18 bytes and the AS-interface process data, which can range from 0 to 32 bytes.

The AS-interface master module has a total of 6 to maximally 24 words data in both the Input and Output Process Image. Word alignment is applied.

The first Input and output word, which is assigned to an AS-interface master module, contains the status / control byte and one empty byte.

Subsequently the mailbox data are mapped, when the mailbox is permanently superimposed (Mode 1).

In the operating mode with suppressible mailbox (Mode 2), the mailbox and the cyclical process data are mapped next.

The following words contain the remaining process data.

The mailbox and the process image sizes are set with the startup tool WAGO-I/O-CHECK.

Table 283: AS-interface Master Module 750-655

Input and Output Process Image				
Offset	Byte Destination		Description	
	High Byte	Low Byte		
0	-	C0/S0	not used	Control/status byte
1	D1	D0	Mailbox (0, 3, 5, 6 or 9 words)/ Process data (0-16 words)	
2	D3	D2		
3	D5	D4		
...		
max. 23	D45	D44		

15.1.6 System Modules

15.1.6.1 System Modules with Diagnostics

750-610, -611

The modules provide 2 bits of diagnostics in the Input Process Image for monitoring of the internal power supply.

Table 284: System Modules with Diagnostics 750-610, -611

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Diagnostic bit S 2 Fuse	Diagnostic bit S 1 Fuse

15.1.6.2 Binary Space Module

750-622

The Binary Space Modules behave alternatively like 2 channel digital input modules or output modules and seize depending upon the selected settings 1, 2, 3 or 4 bits per channel. According to this, 2, 4, 6 or 8 bits are occupied then either in the process input or the process output image.

Table 285: Binary Space Module 750-622 (with Behavior Like 2 Channel Digital Input)

Input and Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
(Data bit DI 8)	(Data bit DI 7)	(Data bit DI 6)	(Data bit DI 5)	(Data bit DI 4)	(Data bit DI 3)	Data bit DI 2	Data bit DI 1

15.2 CODESYS 2 Libraries

Additional functions for the controller 750-8207 are provided using libraries.

15.2.1 General Libraries

This section contains general CODESYS libraries supported by the controller 750-8207.

15.2.1.1 CODESYS System Libraries

All of the functions of the CODESYS system libraries listed below are supported.

Table 286: CODESYS System Libraries

Library	Function	C/IEC 61131
Analyzation.lib	Analysis of boolean expressions	C and IEC 61131
AnalyzationNew.lib	Analysis of boolean expressions	C and IEC 61131
Iecsfc.lib	Provision of implicit variables in the SFC (sequential function chart)	IEC 61131
NetVarUdp_LIB_V23.lib	Implementation for network variables	IEC 61131
Standard.LIB	Offers various standard functions	C
SysLibAlarmTrend.lib	Supports alarm and trend tasks	IEC 61131
SysLibCallback.lib	For installing call-back handlers and event handlers	C
SysLibDir.lib	For accessing directories	C
SysLibDirect.lib	Access to variables using indices	C
SysLibEvent.lib	Handling of events in the system	C
SysLibFileStream.lib	File handling using ANSI-C functions	C
SysLibGetAddress.lib	Returns addresses and the size of memory segments	C
SysLibIecTasks.lib	Administration of IEC tasks	C
SysLibMem.lib	Memory administration	C
SysLibPlcCtrl.lib	Control of the PLC from outside the PLC program	C
SysLibProjectInfo.lib	Reading out of information about the CODESYS project	C
SysLibSem.lib	Handling of semaphores	C
SysLibSockets.lib	Socket handling	C
SysLibSocketsAsync.lib	Socket handling, asynchronous	C
SysLibStr.lib	String functions	C
SysLibTasks.lib	Administration of tasks	C
SysLibTime.lib	Administration of real-time clock	C
SysLibVisu.lib	Dynamic visualization	C

Table 286: CODESYS System Libraries

Library	Function	C/IEC 61131
SysTaskInfo.lib	Evaluation of task information in the Online mode	IEC 61131
Util.lib	Various logical operations	IEC 61131
Util_no_Real.lib	Various logical operations	IEC 61131

Additional information about the libraries is given in the online Help function for CODESYS-IDE.

15.2.1.2 SysLibCom.lib

The controller 750-8207 supports the following function blocks of the “SysLibCom.lib” library:

- SysComClose
- SysComGetVersion2300
- SysComOpen
- SysComRead
- SysComSetSettings
- SysComSetSettingsEx
- SysComWrite



Note

Observe restrictions on the settings for stop bits!

The setting “1.5 stop bits” is not supported by controller 750-8207.

Additional information about this is given in the online Help function for CODESYS-IDE.

15.2.1.3 SysLibFile.lib

The controller 750-8207 supports the following function blocks of the “SysLibFile.lib” library:

- SysFileClose
- SysFileCopy
- SysFileDelete
- SysFileEOF
- SysFileGetPos
- SysFileGetSize
- SysFileGetTime
- SysFileOpen
- SysFileRead
- SysFileRename
- SysFileSetPos
- SysFileWrite



Note

Ensure that files are saved!

Files are not reliably saved on the data medium until you call up the “SysFileClose” function block!

Additional information about this is given in the online Help function for CODESYS-IDE.

Notes on the parameters of the function blocks

File and directory names distinguish between upper and lower case!

“test.txt” ≠ “TEST.TXT” ≠ “Test.txt”

The separator for directories is: “/.”

The file system supports:

- Absolute paths, (e.g., “/media/sd/test.txt”)
- Relative paths (e.g., “testpath/test.txt”)
- Macros (e.g., “HOME://”, “CARD://”, “TMP://”)

Table 287: Possible Macros for File Access

Macro	Bootling from Internal Memory	Bootling from Memory Card
HOME://	“/home/codesys/” (internal NAND memory)	“/home/codesys/” (memory card)
CARD://	“/media/sd/” (memory card)	“/home/codesys/” (memory card)
TMP://	“/tmp/codesys/” (internal RAM memory)	“/tmp/codesys/” (internal RAM memory)

15.2.1.4 SysLibFileAsync.lib

The controller 750-8207 supports the following function blocks of the “SysLibFileAsync.lib” library:

- SysFileCloseAsync
- SysFileCopyAsync
- SysFileDeleteAsync
- SysFileEOFAsync
- SysFileGetPosAsync
- SysFileGetSizeAsync
- SysFileGetTimeAsync
- SysFileOpenAsync
- SysFileReadAsync
- SysFileRenameAsync
- SysFileSetPosAsync

- SysFileWriteAsync



Note

Ensure that files are saved!

Files are not reliably saved to the data medium until you call up the “SysFileCloseAsync” function block.

Additional information about this is given in the online Help function for CODESYS-IDE.

Notes on the parameters of the function blocks

File and directory names distinguish between upper and lower case!

“test.txt” ≠ “TEST.TXT” ≠ “Test.txt”

The separator for directories is: “/.”

The file system supports:

- Absolute paths, (e.g., “/media/sd/test.txt”)
- Relative paths (e.g., “testpath/test.txt”)
- Macros (e.g., “HOME://”, “CARD://”, “TMP://”)

Table 288: Possible Macros for File Access

Macro	Bootling from Internal Memory	Bootling from Memory Card
HOME://	“/home/codesys/” (internal NAND memory)	“/home/codesys/” (memory card)
CARD://	“/media/sd/” (memory card)	“/home/codesys/” (memory card)
TMP://	“/tmp/codesys/” (internal RAM memory)	“/tmp/codesys/” (internal RAM memory)

15.2.1.5 SysLibRtc.lib

The controller 750-8207 supports the following function blocks of the “SysLibRtc.lib” library:

- SysRtcGetHourMode
- SysRtcGetTime
- SysRtcSetTime

Additional information about this is given in the online Help function for CODESYS-IDE.

15.2.1.6 BusDiag.lib

The controller 750-8207 supports the following function blocks of the “BusDiag.lib” library:

- DiagGetBusState
- DiagGetState

The document containing a description of this library and the function blocks it includes is available for download on the Internet at www.wago.com.

The values for the input variables “DEVICENUMBER” of the “DiagGetBusState” and “DiagGetState” functions are based on the particular device and bus system and are as follows for the controller “PFC200 CS 2ETH RS 3G” (750-8207):

Table 289: Input Variable “DEVICENUMBER”

Bus System	Value
Internal data bus	0
MODBUS	1

15.2.1.7 mod_com.lib

The controller 750-8207 supports the following function blocks of the “mod_com.lib” library:

- ADD_PI_INFORMATION
- CRC16
- FBUS_ERROR_INFORMATION
- GET_DIGITAL_INPUT_OFFSET
- GET_DIGITAL_OUTPUT_OFFSET
- KBUS_ERROR_INFORMATION
- MOD_COM_VERSION
- PI_INFORMATION
- SET_DIGITAL_INPUT_OFFSET
- SET_DIGITAL_OUTPUT_OFFSET
- SLAVE_ADDRESS

The document containing a description of this library and the function blocks it includes is available for download on the Internet at www.wago.com.

15.2.1.8 SerComm.lib

The controller 750-8207 supports the following function blocks of the “SerComm.lib” library:

- SERCOMM
- SERCOMM_VERSION

The document containing a description of this library and the function blocks it includes is available for download on the Internet at www.wago.com.

15.2.1.9 WagoConfigToolLIB.lib

The following table shows call-ups that allow you to configure and parameterize the controller from the PLC program or Linux[®] via the “ConfigToolFB” function block (see parameter “stCallString”). In addition to WBM and the CBM, this is another variant to configure the controller for operational requirements.

The configuration directory for this under Linux[®] is: `/etc/config-tools/`

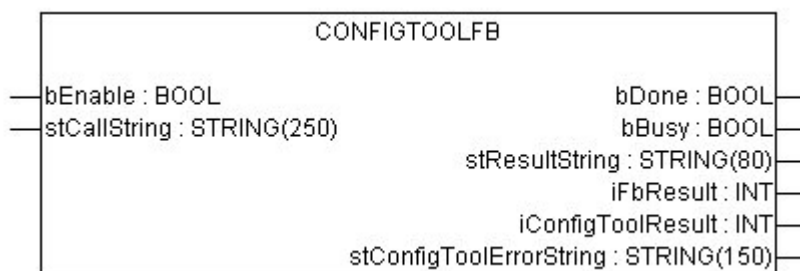


Figure 114: Graphical Representation of the “ConfigToolFB” Function Block

Table 290: Description of the Configuration Scripts for “Information”

Parameters	Status	Call-Up	Output/Input	Effective
Controller Details: Identifies various information about the controller				
Product Description	read	get_coupler_details product-description	Product description	Immediately
Order Number	read	get_coupler_details order-number	Item number of the controller	Immediately
Firmware Revision	read	get_coupler_details firmware-revision	Firmware version of the controller	Immediately
Licence Information	read	get_coupler_details license-information	CODESYS license details	Immediately
Network Details X1: Identifies the parameters currently used for the ETHERNET interface X1/X2 in “switched” mode or for the ETHERNET interface X1 in “separated” mode				
State	read	get_actual_eth_config X1 state	Status of the interface. Possible return values: - enabled - disabled	Immediately
Mac Address	read	get_actual_eth_config X1 mac-address	Display of the MAC address	Immediately
IP Address	read	get_actual_eth_config X1 ip-address	Display of current IP address	Immediately
Subnet Mask	read	get_actual_eth_config X1 subnet-mask	Display of the current subnet mask	Immediately
Network Details X2: Identifies the parameters currently used for the ETHERNET interface X2 in “separated” mode				
See “Network Details X1”. When calling these up, replace “X1” with “X2” (in “separated” mode only).				

Table 291: Description of the Configuration Scripts for “CODESYS”

Parameters	Status	Call	Output/Input	Effective
Information				
CODESYS Webserver Version	read	get_coupler_details codesys-Webserver-version	Version of the CODESYS Webserver	Immediately
Project Details				
Date	read	get_rts_info project date	Display of the project information specified in CODESYS (Menu > Project > Project Information)	Immediately
Title	read	get_rts_info project title		Immediately
Version	read	get_rts_info project version		Immediately
Author	read	get_rts_info project author		Immediately
Description	read	get_rts_info project description		Immediately
CODESYS State				
State	read	get_rts_info state	Display of the CODESYS status (RUN or STOP)	Immediately
Home Directory (Boot Project Location)				
Home Directory (Boot Project Location)	read	get_runtime_config homedir-on-sdcard	Storage location for the home directory. Possible return values: - enabled: The home directory is on the SD card. - disabled: The home directory is on the boot medium.	After restart
	write	config_runtime homedir-on-sdcard=<Wert>	Storage location for the home directory. Possible entries for the value are: - enabled: Put the home directory on the SD card. - disabled: The home directory is on the boot medium.	

Table 292: Description of the Configuration Scripts for “Networking - Host/Domain Name”

Parameters	Status	Call	Output/Input	Effective
Host Name				
Host Name	read	get_coupler_details hostname	Display of the host name. The return value is blank when /etc/hostname is empty. For details see the parameter “Actual Hostname.”	Immediately
	write	change_hostname hostname=<String>	Changing the host name. Input a host name for <String>.	Immediately
Actual Hostname	read	get_coupler_details actual-hostname	The actual host name (if /etc/hostname is empty, a unique host name is generated from the MAC address)	Immediately
Domain Name				
Domain name	read	get_coupler_details domain-name	Display of domain name	Immediately
	write	change_hostname dnsdomain=<String>	Change the domain name. Enter the domain name for <String>.	

Table 293: Description of the Configuration Scripts for “Networking - TCP/IP”

Parameters	Status	Call	Output/Input	Effective
IP Address X1: Determines the IP parameters of the ETHERNET interfaces X1/X2 in “switched” mode and the ETHERNET interface X1 in “separated” mode				
Type of IP address configuration	read	get_eth_config X1 config-type	Path via which the interface receives its IP address Possible return values are: - static (set statically) - dhcp (per DHC) - bootp (per BootP)	Immediately
	write	config_interfaces interface=X1 config-type=<Value> state=enabled	Enable process, via which the interface receives its IP address Possible entries for <Value> are: - static (set statically) - dhcp (per DHC) - bootp (per BootP)	
IP address	read	get_eth_config X1 ip-address	Address set for using a static IP address (static IP).	Immediately
	write	config_interfaces interface=X1 ip-address=<Value>	Change IP address for static IP <Value> must have an IP address with the format “Number.Number.Number.Number.”	
Subnet Mask	read	get_eth_config X1 subnet-mask	Subnet mask set for using a static IP address (static IP)	Immediately
	write	config_interfaces interface=X1 subnet-mask=<Value>	Change subnet mask for static IP addresses. <Value> must have an IP address with the format “Number.Number.Number.Number.”	
IP Address X2: Determines the parameters currently used for the ETHERNET interface X2 in “separated” mode				
See “IP Address X1.” When calling these up, replace X1 with X2 (only permissible in “separated” mode).				

Table 293: Description of the Configuration Scripts for “Networking - TCP/IP”

Parameters	Status	Call	Output/Input	Effective
Default Gateway 1				
Default Gateway	read	get_default_gateway_config number=1 state	Current status of the default gateway 1. Possible return values: - enabled - disabled	Immediately
	write	config_default_gateway number=1 state=<stateval>	Possible entries for <Value>: - enabled - disabled	
Default Gateway	read	get_default_gateway_config number=1 value	Current IP address of the default gateway 1	Immediately
	write	config_default_gateway number=1 value=<gw>	Enter the IP address of the default gateway 1 here. <gw> is an IP address with the format “Number. Number. Number. Number.”	
Default Gateway	read	get_default_gateway_config number=1 metric	Current metric (cost factor) of the default gateway 1 The default value is “20.”	Immediately
	write	config_default_gateway number=1 metric=<n>	Enter the metric of the default gateway 1 here. <n> is a number between “0” and “4.294.967.295.”	
Default Gateway 2				
See “Default Gateway 1.” When calling the gateway number, replace 1 with 2.				
DNS Server 1				
DNS Server 1	read	get_dns_server 1	DNS server address with the consecutive number 1	Immediately
	write/change	edit_dns_server dns-server-nr=1 change=change dns-server-name=<Value>	Set the address of the DNS server with 1 as the consecutive number. <Value> is an IP address with the format “Number.Number.Number.Number.”	
	write/delete	edit_dns_server dns-server-nr=1 delete=delete	Delete the DNS server with the consecutive number 1.	
DNS Server 2 ... n				
See “DNS Server 1.” When calling, adjust the server number (2 ... n).				
Add DNS Server				
Add DNS server	write	edit_dns_server add=add dns-server-name=<Value>	Add additional DNS addresses here. <Value> is an IP address with the format “Number.Number.Number.Number.”	Immediately

Table 294: Description of the Configuration Scripts for “Networking - ETHERNET”

Parameters	Status	Call-Up	Output/Input	Effective
Switch Configuration				
Interface Mode	read	get_dsa_mode	Query the switch configuration: Possible return values: - 0 = „switched“ mode - 1 = „separated“ mode	Immediately
	write	set_dsa_mode -v <value>	Set the switch configuration: Possible entries for <value>: - 0 = „switched“ mode - 1 = „separated“ mode	
Interface X1				
Port State	read	get_eth_config X1 state	Query the port state: Possible return values: - enabled - disabled	Immediately
	write	config_ethernet port=X1 state=enabled	Activate port: enabled	
		config_ethernet port=X1 state=disabled	Deactivate port: disabled	
Autonegotiation	read	get_eth_config X1 autoneg	Query the status of the autonegotiation function: Possible return values: - on - off	Immediately
	write	config_ethernet port=X1 autoneg=on	Activate the autonegotiation function: on	
		config_ethernet port=X1 autoneg=off speed=<value> duplex=<value>	Deactivate the autonegotiation function: off Note: You must also indicate the speed and duplex value when you deactivate the autonegotiation function. Possible entries for speed: - 10M - 100M Possible entries for duplex: - half - full	
Speed and Duplex Settings	read	get_eth_config X1 speed	Display of ETHERNET speed	Immediately
	read	get_eth_config X1 duplex	Display of the Duplex mode	
	write	config_ethernet port=X1 autoneg=off speed=<value> duplex=<value>	Change the ETHERNET speed and the Duplex mode. Possible entries for speed: - 10M - 100M Possible entries for duplex: - half - full	
Interface X2				
See “Interface X1”. When calling these up, replace “X1” with “X2”.				

Table 295: Description of the Configuration Scripts for “NTP”

Parameters	Status	Call	Output/Input	Effective
Configuration Data				
State	read	get_ntp_config state	Query the status of the NTP server Possible return values are: - enabled - disabled	Immediately
	write	config_sntp state=<Value>	Possible entries for <Value>: - enabled - disabled	
Port	read	get_ntp_config port	Port number of the NTP server	Immediately
	write	config_sntp port=<Value>	Enter the port number for <Value>.	
Time Server	read	get_ntp_config time-server-<N>	Query the IP address of the time server: N = 1 ... 4 for querying one of 4 time servers.	Immediately
	write	config_sntp time-server- <N>=<Value>	Enter the IP address of 4 time servers <N> can be a value from 1 to 4. <Value> is an IP address with the format “Number. Number. Number. Number.”	
Update Time (seconds)	read	get_ntp_config update-time	Query the time in seconds between two requests to the time server.	Immediately
	write	config_sntp update-time=<Value>	Specify the time-server's query cycle (in s) for <Value>.	

Table 296: Description of the Configuration Scripts for "Clock"

Parameters	Status	Call-Up	Output/Input	Effective
Clock				
Time and Date				
Date on device, local	read	get_clock_data date-local	Local time and date	Immediately
	write	config_clock type=local date=<Datum>	Change date. The format for <date> is: DD.MM.YYYY	
Time on device, UTC	read	get_clock_data time-utc	Time/UTC	Immediately
	write	config_clock type=utc time=<Time>	Change time, based on UTC time. The format for <time> is: hh:mm:ss xx	
Time on device, local	read	get_clock_data time-local	Time/local time	Immediately
	write	config_clock type=local time=<Time>	Change time, based on local time. The format for <time> is: hh:mm:ss xx	
12-Hour-Format	read	get_clock_data display-mode	Presentation format either as 12 or 24-hour format: Possible return values: - 12-hour-format - 24-hour-format	Immediately
	write	config_clock_ display_mode display-mode=<value>	Set the presentation format for the time. Possible entries for <Value>: - 12-hour-format - 24-hour-format	
Time Zone				
TZ-String	read	get_clock_data tz-string	Currently set time zone – original TZ string as stored in the operating system.	Immediately
	write	config_timezone tz-string=<String>	Change TZ string directly. Example of <String>: CET-1CEST, M3.5.0/2,M10.5.0/3	

Table 297: Description of the Configuration Scripts for "Administration"

Parameters	Status	Call	Output/Input	Effective
Administration				
Configuration of Serial Interface				
Configuration of serial interface	read	get_coupler_details RS232-owner	User of the serial interface Possible return values are: - Linux - None	immediately
	write	config_RS232 owner=<value>	User of the serial interface Possible entries for <value> are: - Linux - None	

Table 297: Description of the Configuration Scripts for "Administration"

Parameters	Status	Call	Output/Input	Effective
Configuration of Service Interface				
Configuration of Service Interface	read	get_service_interface_config mode	User of the serial interface. Possible return values are: <ul style="list-style-type: none">- service (WAGO-I/O-CHECK, WAGO-I/O-PRO, <i>e!COCKPIT</i>)- linux (Linux® console)- free (unused, free for application)	immediately
	write	config_service_interface_config mode=<value>	User of the serial interface. Possible entries for <value>: <ul style="list-style-type: none">- service- linux- free	
Reboot Controller				
-	write	start_reboot	Restart the controller.	immediately

Table 298: Description of Configuration Scripts for "Package Server"

Parameters	Status	Call-Up	Output/Input	Valid
Firmware Update				
Medium for active partition	read	get_filesystem_data active-partition-medium	Specifies the medium for the active partition (memory card, internal flash).	Right away
Create firmware backup	write	firmware_backup package-settings=<Value1> package-codesys=<Value2> package-system=<Value3> device-medium=<Value4> auto-update=<Value5>	Generates a backup of the selected packet on the specified medium. Parameter: <Value1> = 1, if "Settings" packet is to be selected. <Value2> = 1, if the "CODESYS Project" packet is to be selected. <Value3> = 1, if the "System" packet is to be selected. <Value4> = Target medium for saving the backup. (memory card, internal flash) <Value5> = 1, if Auto Update is to be activated. Parameters, which are not to be set (1) can either be set to 0 or omitted completely.	Right away

Table 299: Description of Configuration Scripts for “Ports and Services” – “Network Services

Parameters	Status	Call-Up	Output/Input	Valid
Network Services				
Telnet				
Telnet Port	read	get_port_state telnet	Read the status of the Telnet server. Possible return values: - enabled - disabled	Right away
	write	config_port port=telnet state=<Value>	Possible entries for <Value>: - enabled - disabled	
FTP				
FTP Port	read	config_ssl ftp-status	Read the status of the FTP server. Possible return values: - enabled - disabled	Right away
	write	config_port port=ftp state=<Value>	Possible entries for <Value>: - enabled - disabled	
FTPS				
FTPS Port	read	config_ssl ftps-status	Read the status of the FTPS port. Possible return values: - enabled - disabled	Right away
	write	config_port port=ftps state=<Value>	Activate/Deactivate FTPS. Possible entries for <Value>: - enabled - disabled	
HTTP				
HTTP Port	read	config_ssl http-status	Read the status of the HTTP port. Possible return values: - enabled - disabled	Right away
	write	config_port port=http state=<Value>	Activate/Deactivate HTTP. Possible entries for <Value>: - enabled - disabled	
HTTPS				
HTTPS Port	read	config_ssl https-status	Read the status of the HTTPS port. Possible return values: - enabled - disabled	Right away
	write	config_port port=https state=<Value>	Activate/Deactivate HTTPS. Possible entries for <Value>: - enabled - disabled	

Table 300: Description of Configuration Scripts for “Ports and Services” – “PLC Runtime Services”

Parameters	Status	Call	Output/Input	Effective
General Settings				
PLC runtime version	read	get_runtime_config running-version	Version of the enabled PLC runtime Possible return values: - 0 = no runtime enabled - 2 = CODESYS 2 enabled - 3 = <i>e!RUNTIME</i> enabled	Immediately
	write	config_runtime runtime-version=<value>	Setting and, if necessary, stopping of the previous runtime version and starting of required version Possible entries for <value>: - 0 = do not enable runtime - 2 = enable CODESYS2 - 3 = enable <i>e!RUNTIME</i>	
Boot project location	read	get_runtime_config boot-project	Memory location for a boot project of the runtime application Possible return values: - HOME:// (saving on internal memory) - CARD:// (saving on the memory card)	Immediately
	write	config_runtime boot-project=<value>	Possible entries for <value>: - HOME:// (saving on internal memory) - CARD:// (saving on the memory card)	
Default web page	read	get_runtime_config default-webpage	Calling web page when only entering the IP address in the web browser Possible return values: - WBM (web based management) - Webvisu (web visualization)	Immediately
	write	config_runtime default-webpage=<value>	Possible entries for <value>: - WBM (web based management) - Webvisu (web visualization)	
Change authentication password	write	config_linux_user user=admin new-password=<value> confirm-password=<value>	Change the PLC runtime access password	Immediately

Table 300: Description of Configuration Scripts for “Ports and Services” – “PLC Runtime Services”

Parameters	Status	Call	Output/Input	Effective
CODESYS 2 Settings				
CODESYS2 Webserver State	read	get_runtime_config cfg- version=2 Webserver- state	Read status of the runtime- specific Webserver Possible return values: - enabled - disabled	Immedi ately
	write	config_runtime cfg- version=2 Webserver- state=<value>	Enable/disable runtime-specific Webserver Possible entries for <value>: - enabled - disabled	
CODESYS2 Port Authentication	read	get_runtime_config cfg- version=2 authentication	Read status of the port authentication for communication between the CODESYS 2 PC software and the controller Possible return values: - enabled - disabled	Immedi ately
	write	config_runtime cfg- version=2 authentication=<value>	Possible entries for <value>: - enabled - disabled	
CODESYS2 Service State	read	get_runtime_config service-state	Read status of the port for communication between the CODESYS 2 PC software and the controller Possible return values: - enabled - disabled	Immedi ately
	write	config_runtime service- state=<value>	Possible entries for <value>: - enabled - disabled	
CODESYS2 Communicatio n Port	read	get_runtime_config comm-port	Read value of set network port for communication between PC and controller Default value is 2455	Immedi ately
	write	config_runtime comm- port=<value>	Change port number Enter the TCP/IP port number for <value>.	

Table 300: Description of Configuration Scripts for “Ports and Services” – “PLC Runtime Services”

Parameters	Status	Call	Output/Input	Effective
<i>e!Runtime Settings</i>				
<i>e!RUNTIME</i> Webserver State	read	get_runtime_config cfg- version=3 Webserver- state	Read status of the runtime- specific Webserver Possible return values - enabled - disabled	Immedi ately
	write	config_runtime cfg- version=3 Webserver- state=<value>	Enable/disable runtime-specific Webserver Possible entries for <value>: - enabled - disabled	
<i>e!RUNTIME</i> Port Authentication	read	get_runtime_config cfg- version=3 authentication	Read status of the port authentication for communication between the <i>e!COCKPIT</i> PC software and the controller Possible return values: - enabled - disabled	Immedi ately
	write	config_runtime cfg- version=3 authentication= <value>	Possible entries for <value>: - enabled - disabled	

Table 301: Description of Configuration Scripts for “Ports and Services” – “SSH/TFTP”

Parameters	Status	Call-Up	Output/Input	Valid
SSH				
SSH Server				
SSH	read	get_ssh_config state	Read the status of the SSH port. Possible return values: - enabled - disabled	Right away
	read	get_ssh_config root-access-state	Indicates whether logon as root is permitted. Possible return values: - enabled - disabled	
	read	get_ssh_config password-request-state	Indicates whether authentication by password (instead of PKI key files) is permitted. Possible return values: - enabled - disabled	
	read	get_ssh_config port-number	Specifies the SSH port	
	write	config_ssh state=<Value>	Activate/Deactivate SSH service. Possible entries for <Value>: - enabled - disabled	
	write	config_ssh port-number=<Value>	Set the SSH port	
	write	config_ssh root-access-state-value=<Value>	Permit/Prohibit logon as root. Possible entries for <Value>: - enabled - disabled	
	write	config_ssh password-request-state-value=<Value>	Permit/Prohibit authentication by password. Possible entries for <Value>: - enabled - disabled	
TFTP				
TFTP Server				
TFTP	read	get_tftp_config state	Read the status of the TFTP port. Possible return values: - enabled - disabled	Right away
	read	get_tftp_config download-dir	Read the TFTP main directory.	
	write	config_tftp state=<Value>	Activate/Deactivate TFTP port. Possible entries for <Value>: - enabled - disabled	
	write	config_tftp download-dir=<Value>	Set the TFTP main directory.	

Table 302: Description of Configuration Scripts for “SNMP”

Parameters	Status	Call-Up	Output/Input	Valid
General SNMP information parameters				
Name of device	read	get_snmp_data device-name	Specifies the SNMP parameter “sysName”.	Right away
	write	config_snmp device-name=<Value>	Change the SNMP parameter “sysName” (<Value> = string). *	After restart
Description	read	get_snmp_data description	Specifies the SNMP parameter “sysDescr”.	Right away
	write	config_snmp description=<Value>	Change the SNMP parameter “sysDescr” (<Value> = string). *	After restart
Physical location	read	get_snmp_data physical-location	Specifies the SNMP “sysLocation” parameter.	Right away
	write	config_snmp physical-location=<Value>	Change the SNMP parameter “sysLocation” (<Value> = string). *	After restart
Contact	read	get_snmp_data contact	Specifies the SNMP “sysContact” parameter.	Right away
	write	config_snmp contact=<Value>	Change the SNMP parameter “sysContact” (<Value> = string).	After restart
* When entering values, the blank characters must be filled by either “+” or “%20”. If this is not done, the input is not recognized as a coherent string.				
SNMP Manager configuration for v1 and v2c				
Protocol status	read	get_snmp_data v1-v2c-state	Outputs the status of the SNMP protocol for v1/v2c as a string. Possible return values: - enabled - disabled	Right away
Local Community Name	read	get_snmp_data v1-v2c-community-name	Specifies the community name set for v1/v2c/	Right away
Protocol Status/Community Name	write	config_snmp v1-v2c-state=<Value1> v1-v2c-community-name=<Value2>	Activates/deactivates the v1/v2c protocol (<Value1> = enabled or disabled) and assigns a community name. (<Value2> = string without spaces, min. 1, max. 32 characters). Note: No community name is required for deactivation. Activation is only possible by entering a community name. A community name can only be saved when the protocol is activated.	After restart

Table 302: Description of Configuration Scripts for “SNMP”

Parameters	Status	Call-Up	Output/Input	Valid
SNMP Trap Receiver Configuration for v1 and v2c Any number of trap receivers can be configured. A trap receiver that has been set up is always active; the data set must be completely deleted to deactivate it.				
IP address of a trap receiver	read	get_snmp_data v1-v2c-trap-receiver-address <Nummer>	Specifies the IP address of the trap receiver that the controller is to send the v1 or v2 traps to. The <number> parameter enables consecutive reading of related data from the individually configured trap receiver for a short period of time (without interim changing of the data). This is a consecutive number that is not connected to the data. If the number is not included, the data of the first receiver are read.	Right away
Community Name	read	get_snmp_data v1-v2c-trap-receiver-community-name <Nummer>	Specifies the community name that the SNMP agent of the controller sends in the Trap Header. Parameter <number> see section “IP Address of a Trap Receiver”.	Right away
Trap version	read	get_snmp_data v1-v2c-trap-receiver-version <Nummer>	Specifies the SNMP version (“v1” or “v2c”) via which the SNMP agent sends the traps to the associated trap receiver address. Parameter <number> see section “IP Address of a Trap Receiver”.	Right away
Creating/ deleting a trap receiver	write	config_snmp v1-v2c-trap-receiver-edit=<Value1> v1-v2c-trap-receiver-address=<Value2> v1-v2c-trap-receiver-community-name=<Value3> v1-v2c-trap-receiver-version=<Value4>	Create a new trap receiver (value1=add) or delete an already configured trap receiver (value1=delete). Other parameters: <Value2> = IP address (number.number.number.number) that the controller is to send the traps to. <Value3>: Community string (string), which the controller enters in the trap header. <Value4>: SNMP version, via which the traps are sent (v1 or v2c). Note: All parameters must also be entered when deleting a trap receiver, as this is the only means to uniquely identify the data set.	After restart

Table 302: Description of Configuration Scripts for “SNMP”

Parameters	Status	Call-Up	Output/Input	Valid
Configuration of SNMP v3 Any number of SNMP v3 users can be created. A user that has been set up is always active; the complete data set must be deleted to deactivate a user.				
Authentication Name	read	get_snmp_data v3-auth-name <Number>	Specifies the user name for the v3 user. The <number> parameter enables consecutive reading of the related data from the individually configured trap receiver for a short period of time (without interim changing of the data). This is a consecutive number that is not connected to the data. If the number is not included, the data of the first user are read.	Right away
Authentication encryption type	read	get_snmp_data v3-auth-type <Number>	Specifies the type of encryption that the v3 user uses (none, MD5, or SHA). Parameter <number> see “Authentication Name”.	Right away
Authentication key	read	get_snmp_data v3-auth-key <Number>	Specifies the key string for authentication. Parameter <number> see “Authentication Name”.	Right away
Privacy encryption type	read	get_snmp_data v3-privacy <number>	Specifies the type of privacy encryption for the v3 user (none, DES, or AES). Parameter <number> see “Authentication Name”.	Right away
Privacy key	read	get_snmp_data v3-privacy-key <number>	Specifies the key string for privacy. If nothing is entered, the SNMP agent uses the “Authentication Key”. Parameter <number> see “Authentication Name”.	Right away
Trap receiver address	read	get_snmp_data v3-notification-receiver <number>	IP address of an SNMP manager that the agent traps for this v3 user are sent to. If nothing is entered here, no traps are sent for this user. Parameter <number> see “Authentication Name”.	Right away

Table 302: Description of Configuration Scripts for “SNMP”

Parameters	Status	Call-Up	Output/Input	Valid
Add new v3-User	write	config_snmp v3-edit=add v3-auth-name=<Value1> v3-auth-type=<Value2> v3-auth-key=<Value3> v3-privacy=<Value4> v3-privacy-key=<Value5> v3-notification-receiver=<Value6>	Creating a new v3 user. v3-auth-name: User name, string without spaces, maximum of 32 characters. This must be a new, unique user name. Parameters: User name (<Value1> = string) Encryption method. (<Value2> = none, MD5 or SHA). Key string for authentication, (<Value3> = String with at least eight and a maximum of 32 characters) Privacy encryption method (<Value4> = none, DES or AES). Privacy key string (<Value5> = String with at least eight and a maximum of 32 characters), can also be blank; in this case the authentication key will be used. The IP address of a trap receiver is transmitted as the notification receiver (<Value6> = number.number.number.number) . This parameter is not required if no v3 traps are to be sent.	After restart
Delete v3 user	write	config_snmp v3-edit=delete v3-auth-name=<Value>	Deleting a v3 user that has been set up. Because the doubled allocation of the same user name is prevented when creating a user, the name is sufficient to uniquely identify a data set (<Value> = string).	After restart

15.2.1.10 WagoLibCpuUsage.lib

The controller 750-8207 supports the following function blocks of the “WagoLibCpuUsage.lib” library:

- CPU_Usage

The document containing the description of the library and the function block it includes is available for download on the Internet at www.wago.com.

15.2.1.11 WagoLibDiagnosticIDs.lib

The controller 750-8207 supports the following function blocks of the “WagoLibDiagnosticIDs.lib” library:

- DIAGNOSTIC_SEND_ID
- DIAGNOSTIC_SET_TEXT_FOR_ID

The document containing the description of the library and the function block it includes is available for download on the Internet at www.wago.com.

15.2.1.12 WagoLibLed.lib

The controller 750-8207 supports the following function blocks of the “WagoLibLed.lib” library:

- LED_SET_STATIC
- LED_SET_BLINK
- LED_SET_FLASH
- LED_SET_ERROR
- LED_RESET_ERROR
- LED_RESET_ALL_ERRORS
- LED_GET_STATE
- LED_GET_STATE_ASYNC

The document containing a description of this library and the function blocks it includes is available for download on the Internet at www.wago.com.

15.2.1.13 WagoLibNetSnmp.lib

The controller 750-8207 supports the following function blocks of the “WagoLibNetSnmp.lib” library:

- snmpGetValueCustomOID_INT32
- snmpGetValueCustomOID_STRING
- snmpGetValueCustomOID_UINT32
- snmpRegisterCustomOID_INT32
- snmpRegisterCustomOID_STRING
- snmpRegisterCustomOID_UINT32
- snmpSetValueCustomOID_INT32
- snmpSetValueCustomOID_STRING
- snmpSetValueCustomOID_UINT32

The document containing the description of the library and the function block it includes is available for download on the Internet at www.wago.com.

15.2.1.14 WagoLibNetSnmpManager.lib

The controller 750-8207 supports the following function blocks of the “WagoLibNetSnmpManager.lib” libraries:

- SNMPM_DINT_TO_TLV
- SNMPM_UDINT_TO_TLV
- SNMPM_STRING_TO_TLV
- SNMPM_TLV_TO_DINT
- SNMPM_TLV_TO_UDINT
- SNMPM_TLV_TO_STRING
- SNMPM_GET
- SNMPM_GET_V3

- SNMPM_SET
- SNMPM_SET_V3

The document containing a description of this library and the function blocks it includes is available for download on the Internet at www.wago.com.

15.2.1.15 WagoLibSSL.lib

The controller 750-8207 supports the following function blocks of the “WagoLibSSL.lib” library:

- SSL_CTX
- SSL_CTX_load_verify_locations
- SSL_CTX_sess_set_cache_size
- SSL_CTX_set_client_CA_list
- SSL_CTX_set_method
- SSL_CTX_use_certificate_file
- SSL_CTX_use_PrivateKey_file
- SSL_free
- SSL_get_error
- SSL_Hndshk_Accept
- SSL_Hndshk_Connect
- SSL_load_client_CA_file
- SSL_read
- SSL_shutdown
- SSL_write

The document containing a description of this library and the function blocks it includes is available for download on the Internet at www.wago.com.

15.2.1.16 WagoLibTerminalDiag.lib

The controller 750-8207 supports the following function blocks of the “WagoLibTerminalDiag.lib” library:

- GET_TERMINALDIAG

The document containing a description of this library and the function blocks it includes is available for download on the Internet at www.wago.com.

15.3 Overview of the Open Source Package and Licenses

The following table contains an overview of the software packages and related licensing terms.

Table 303: Overview of Open Source Licenses

Software Package	Version	Url	License
barebox	2014.11.0	http://www.barebox.org/download/barebox-2014.11.0.tar.bz2	GPLv2
bash	3.2.48	http://ftp.uni-kl.de/pub/gnu/bash/bash-3.2.48.tar.gz	GPLv2
bootpc	0.64	http://www.sfr-fresh.com/linux/misc/bootpc-0.64.tar.gz	GPLv2
busybox	1.20.2	http://www.busybox.net/downloads/busybox-1.20.2.tar.bz2	GPLv2
coreutils	8.19	http://ftp.uni-kl.de/pub/gnu/coreutils/coreutils-8.19.tar.xz	GPLv3
cpufrequtils	007	http://www.kernel.org/pub/linux/utils/kernel/cpufreq/cpufrequtils-007.tar.bz2	GPLv2
daemonize	1.4	http://www.pengutronix.de/software/ptxdist/temporary-src/daemonize-1.4.tar.gz	GPLv2
dbus	1.6.8	http://dbus.freedesktop.org/releases/dbus/dbus-1.6.8.tar.gz	GPLv2/Academic Free Licence v2.1
dbus-glib	0.100	http://dbus.freedesktop.org/releases/dbus-glib/dbus-glib-0.100.tar.gz	GPLv2/Academic Free Licence v2.1
dnsmasq	2.47	http://www.thekelleys.org.uk/dnsmasq/dnsmasq-2.47.tar.gz	GPLv2/GPLv3
dosfstools	3.0.9	http://www.daniel-baumann.ch/software/dosfstools/dosfstools-3.0.9.tar.bz2	GPLv3
dropbear	2015.67	http://matt.ucc.asn.au/dropbear/releases/dropbear-2015.67.tar.bz2	Multiple
e2fsprogs	1.42.4	http://downloads.sourceforge.net/sourceforge/e2fsprogs/e2fsprogs-1.42.4.tar.gz	GPLv2
ebtables	2.0.10+1	http://downloads.sourceforge.net/sourceforge/ebtables/ebtables-2.0.10-1/ebtables-v2.0.10-1.tar.gz	GPLv2
ethtool	3.0	http://www.kernel.org/pub/linux/net/software/netw/ethtool/ethtool-3.0.tar.bz2	GPLv2
eventlog	0.2.12	http://www.balabit.com/downloads/files/syslog-ng/sources/2.0/src/eventlog-0.2.12.tar.gz	Balabit
expat	2.1.0	http://downloads.sourceforge.net/sourceforge/expat/expat-2.1.0.tar.gz	Expat
figlet	2.2.5	ftp://ftp.figlet.org/pub/figlet/program/unix/figlet-2.2.5.tar.gz	Figlet
fuse	2.9.0	http://downloads.sourceforge.net/sourceforge/fuse/fuse-2.9.0.tar.gz	GPLv2/LGPLv2.1
gdbserver	7.2a	http://ftp.uni-kl.de/pub/gnu/gdb/gdb-7.2a.tar.bz2	GPLv2/GPLv3/LGPLv2/LGPLv3
gcllibs	4.7.3	ftp://ftp.fu-berlin.de/unix/languages/gcc/releases/gcc-4.7.3/gcc-4.7.3.tar.bz2	GPLv3 mit GCC Runtime Library Exception

Table 303: Overview of Open Source Licenses

Software Package	Version	Url	License
glib	2.34.3	http://ftp.gnome.org/pub/GNOME/sources/glib/2.34/glib-2.34.3.tar.xz	LGPLv2
glibc	2.16	http://ftp.gnu.org/gnu/glibc/glibc-2.16.0.tar.bz2	LGPLv2.1
gzip	1.6	http://ftp.gnu.org/gnu/gzip/gzip-1.6.tar.gz	GPLv3
hexedit	1.2.12	http://rigaux.org/hexedit-1.2.12.src.tgz	GPLv2
htop	1.0.3	http://downloads.sourceforge.net/sourceforge/htop/htop-1.0.3.tar.gz	GPLv2
ifplugd	0.28	http://0pointer.de/lennart/projects/ifplugd/ifplugd-0.28.tar.gz	GPLv2
inetutils	1.6	http://ftp.uni-kl.de/pub/gnu/inetutils/inetutils-1.6.tar.gz	GPLv3
iperf	2.0.4	http://downloads.sourceforge.net/sourceforge/iperf/iperf-2.0.4.tar.gz	Iperf
ipkg	0.99.163	http://www.pengutronix.de/software/ptxdist/temporary-src/ipkg-0.99.163.tar.gz	GPLv2
iproute2	3.14.0	https://www.kernel.org/pub/linux/utils/net/iproute2/iproute2-3.14.0.tar.gz	GPLv2
iptables	1.4.16.3	http://ftp.netfilter.org/pub/iptables/iptables-1.4.16.3.tar.bz2	GPLv2
ipwatchd	1.2.1	http://svsv01003.wago.local/wago-ptxdist-src/ipwatchd-1.2.1.tar.gz	GPLv2
kbd	1.15.2	http://www.kernel.org/pub/linux/utils/kbd/kbd-1.15.2.tar.bz2	GPLv2
less	443	http://ftp.uni-kl.de/pub/gnu/less/less-443.tar.gz	less
libcgroup	0.41	http://downloads.sourceforge.net/sourceforge/libcgroup/libcgroup-0.41.tar.bz2	LGPLv2.1
libconfig	1.4.9	http://www.hyperrealm.com/libconfig/libconfig-1.4.9.tar.gz	LGPLv2.1
libcurl	7.26.0	http://curl.haxx.se/download/curl-7.26.0.tar.gz	curl
libdaemon	0.14	http://0pointer.de/lennart/projects/libdaemon/libdaemon-0.14.tar.gz	LGPLv2.1
libelf	0.8.13	http://www.mr511.de/software/libelf-0.8.13.tar.gz	LGPLv2
libffi	3.0.11	http://ftp.gwdg.de/pub/linux/sources.redhat.com/libffi/libffi-3.0.11.tar.gz	libffi
libgmp	4.2.4	http://ftp.uni-kl.de/pub/gnu/gmp/gmp-4.2.4.tar.bz2	GPLv3/LGPLv3
libkmod	10	http://www.kernel.org/pub/linux/utils/kernel/kmod/kmod-10.tar.xz	GPLv2
liblzo	2.03	http://www.oberhumer.com/opensource/lzo/download/lzo-2.03.tar.gz	GPLv2
libmodbus	3.0.5	http://svsv01003.wago.local/wago-ptxdist-src/libmodbus-3.0.5.tar.gz	GPLv3/LGPLv2.1
libmodbus-tgx	0.9.20	http://svsv01003.wago.local/wago-ptxdist-src/libModbus-0.9.20.tar.gz	LGPLv2
libnet	1.1.4	http://downloads.sourceforge.net/sourceforge/libnet-dev/libnet-1.1.4.tar.gz	libnet
libnl3	3.2.22	http://www.infradead.org/~tgr/libnl/files/libnl-3.2.22.tar.gz	LGPLv2.1
libpcap	1.5.3	http://www.tcpdump.org/release/libpcap-1.5.3.tar.gz	BSD (3-clause)

Table 303: Overview of Open Source Licenses

Software Package	Version	Url	License
libpcre	8.32	http://downloads.sourceforge.net/sourceforge/pcre/pcre-8.32.tar.bz2	PCRE
libpng	1.2.50	http://downloads.sourceforge.net/sourceforge/libpng/libpng-1.2.50.tar.xz	LIBPNG
libpopt	1.15	http://rpm5.org/files/popt/popt-1.15.tar.gz	popt
libsocketcan	0.0.9	http://www.pengutronix.de/software/libsocketcan/download/libsocketcan-0.0.9.tar.bz2	LGPLv2.1
libsysfs	2.1.0	http://downloads.sourceforge.net/sourceforge/linux-diag/sysfsutils-2.1.0.tar.gz	LGPLv2
libuci	gitmaster	http://svsv01003.wago.local/wago-ptxdist-src/libuci-gitmaster.tar.gz	GPLv2/LGPLv2.1
libusb	1.0.8	http://downloads.sourceforge.net/sourceforge/libusb/libusb-1.0.8.tar.bz2	LGPLv2.1
libusb-compat	0.1.3	http://downloads.sourceforge.net/sourceforge/libusb/libusb-compat-0.1.3.tar.bz2	LGPLv2.1
libxml2	2.7.7	ftp://xmlsoft.org/libxml2/libxml2-2.7.7.tar.gz	libxml2
libxslt	1.1.26	ftp://xmlsoft.org/libxslt/libxslt-1.1.26.tar.gz	libxslt
lighttpd	1.4.35	http://download.lighttpd.net/lighttpd/releases-1.4.x/lighttpd-1.4.35.tar.bz2	lighttpd
lmbench	3.0+a9	http://downloads.sourceforge.net/sourceforge/lmbench/lmbench-3.0-a9.tgz	GPLv2 + Extension
logrotate	3.7.1	http://www.pengutronix.de/software/ptxdist/temporary-src/logrotate-3.7.1.tar.gz	GPLv2
lsof	4.81.dfsg.1	http://ftp.uni-kl.de/debian/pool/main/l/lsof/lsof_4.81.dfsg.1.orig.tar.gz	lsof
lsuio	0.2.0	http://www.osadl.org/projects/downloads/UIO/user/lsuio-0.2.0.tar.gz	GPLv2
ltrace	0.5.1	http://www.pengutronix.de/software/ptxdist/temporary-src/ltrace_0.5.1.orig.tar.gz	GPLv2
memedit	0.9	http://www.pengutronix.de/software/memedit/downloads/memedit-0.9.tar.gz	GPLv2
mii-diag	2.11	http://ftp.uni-kl.de/debian/pool/main/m/mii-diag/mii-diag_2.11.orig.tar.gz	GPL
mtd-utils	1.5.0	ftp://ftp.infradead.org/pub/mtd-utils/mtd-utils-1.5.0.tar.bz2	GPLv2
nano	2.3.1	http://www.nano-editor.org/dist/v2.3/nano-2.3.1.tar.gz	GPLv3
ncurses	5.9	http://ftp.uni-kl.de/pub/gnu/ncurses/ncurses-5.9.tar.gz	ncurses
net-snmp	5.7.2	http://downloads.sourceforge.net/sourceforge/net-snmp/net-snmp-5.7.2.tar.gz	Multiple
netkit-ftp	0.17	ftp://ftp.uk.linux.org/pub/linux/Networking/netkit/netkit-ftp-0.17.tar.gz	BSD (4-clause)
nfsutils	1.2.3	http://downloads.sourceforge.net/sourceforge/nfs/nfs-utils-1.2.3.tar.bz2	GPLv2
ntfs-3g	2014.2.15	http://svsv01003.wago.local/wago-ptxdist-src/ntfs-3g_ntfsprogs-2014.2.15.tgz	GPLv2/LGPLv2
ntpclient	365	http://doolittle.icarus.com/ntpclient/ntpclient_2007_365.tar.gz	GPLv2
openssh	5.8p2	http://openbsd.cs.fau.de/pub/OpenBSD/OpenSSH/portable/openssh-5.8p2.tar.gz	OpenSSH License

Table 303: Overview of Open Source Licenses

Software Package	Version	Url	License
openssl	1.0.1j	http://openssl.org/source/openssl-1.0.1j.tar.gz	OpenSSL License
openvpn	2.3.4	http://openvpn.net/release/openvpn-2.3.4.tar.gz	Multiple
php5	5.3.27	http://museum.php.net/php5/php-5.3.27.tar.bz2	PHP License
portmap	6.0	http://neil.brown.name/portmap/portmap-6.0.tgz	BSD
ppp	2.4.5	http://ftp.samba.org/pub/ppp/ppp-2.4.5.tar.gz	BSD/GPLv2
procps	3.2.8	http://procps.sourceforge.net/procps-3.2.8.tar.gz	GPLv2/LGPLv2
pureftpd	1.0.36	http://download.pureftpd.org/pub/pure-ftpd/releases/pure-ftpd-1.0.36.tar.bz2	BSD/Custom
pv	1.3.4	http://pipeviewer.googlecode.com/files/pv-1.3.4.tar.gz	Artistic License 2.0
readline	6.2	http://ftp.uni-kl.de/pub/gnu/readline/readline-6.2.tar.gz	GPLv3
rt-tests	0.73	http://www.kernel.org/pub/linux/kernel/people/clrkwillms/rt-tests/rt-tests-0.73.tar.bz2	GPLv2
screen	4.0.3	http://ftp.uni-kl.de/pub/gnu/screen/screen-4.0.3.tar.gz	GPLv2
sed	4.2.1	http://ftp.uni-kl.de/pub/gnu/sed/sed-4.2.1.tar.bz2	GPLv3
setserial	2.17	http://downloads.sourceforge.net/sourceforge/setserial/setserial-2.17.tar.gz	GPL
spawn-fcgi	1.6.3	http://download.lighttpd.net/spawn-fcgi/releases-1.6.x/spawn-fcgi-1.6.3.tar.bz2	Custom
strace	4.10	http://downloads.sourceforge.net/sourceforge/strace/strace-4.10.tar.xz	Custom
strongswan	5.1.3	http://download.strongswan.org/strongswan-5.1.3.tar.gz	GPLv2
sudo	1.7.2p6	http://www.sudo.ws/sudo/dist/sudo-1.7.2p6.tar.gz	ISC-style
swconfig	git-snapshot 2013-11-05	https://github.com/openwrt-mirror/openwrt/tree/master/package/network/config/swconfig	GPLv2/LGPLv2.1
syslog-ng	3.3.4	http://www.balabit.com/downloads/files/syslog-ng/sources/3.3/src/syslog-ng-3.3.4.tar.gz	GPL/LGPL
tar	1.26	http://ftp.uni-kl.de/pub/gnu/tar/tar-1.26.tar.xz	GPLv3
tcpdump	4.5.1	http://www.tcpdump.org/release/tcpdump-4.5.1.tar.gz	BSD (3-clause)
timezone	1.0	https://www.iana.org/time-zones/repository/tz-link.html	Public Domain
udev	172	http://www.kernel.org/pub/linux/utils/kernel/hotplug/udev-172.tar.bz2	GPLv2
umkimage	2010.03+1	http://www.pengutronix.de/software/ptxdist/temporary-src/u-boot-mkimage-2010.03-1.tar.gz	GPLv2
unzip	5.52	http://downloads.sourceforge.net/sourceforge/infozip/unzip552.tar.gz	Custom
usbutils	004	http://www.kernel.org/pub/linux/utils/usb/usbutils-004.tar.bz2	GPLv2
util-linux-ng	2.21.2	http://www.kernel.org/pub/linux/utils/util-linux/v2.21/util-linux-2.21.2.tar.bz2	GPLv2
xmlstarlet	1.3.1	http://downloads.sourceforge.net/sourceforge/xmlstar/xmlstarlet-1.3.1.tar.gz	Custom
zip	3.0	http://surfnet.dl.sourceforge.net/sourceforge/infozip/zip30.tar.gz	Custom
zlib	1.2.8	http://zlib.net/zlib-1.2.8.tar.xz	Custom

List of Figures

Figure 1: View of device	27
Figure 2: Marking Area for Serial Numbers	29
Figure 3: Data Contacts	30
Figure 4: Power Jumper Contacts	31
Figure 5: CAGE CLAMP® connections.....	32
Figure 6: Service Interface (Closed and Open Flap)	33
Figure 7: Network Connections – X1, X2.....	34
Figure 8: RS-232/RS-485 – X3 Communication Connection.....	35
Figure 9: Termination with DTE-DCE Connection (1:1)	36
Figure 10: Termination with DTE-DTE Connection (Cross-Over)	36
Figure 11: RS-485 Bus Termination	37
Figure 12: Mobile Radio Antenna Connection	38
Figure 13: Power Supply Indicating Elements.....	39
Figure 14: Indicating elements for fieldbus/system	40
Figure 15: Indicating Elements, Memory Card Slot	41
Figure 16: Indicating Elements, RJ-45 Jacks	42
Figure 17: Mobile Radio Network Status Indicators.....	43
Figure 18: Mode Selector Switch.....	44
Figure 19: Reset Button.....	45
Figure 20: Slot for SD Memory Card.....	46
Figure 21: SIM Card Slot	47
Figure 22: Schematic diagram.....	48
Figure 23: Spacing.....	70
Figure 24: Release Tab of Controller	72
Figure 25: Insert I/O Module (Example).....	73
Figure 26: Snap the I/O Module into Place (Example).....	73
Figure 27: Connecting a Conductor to a CAGE CLAMP®	74
Figure 28: Power Supply Concept.....	75
Figure 29: “Open DHCP”, Example Figure	80
Figure 30: CBM Starting Screen	81
Figure 31: CBM – Selecting “Networking”	82
Figure 32: CBM – Selecting “TCP/IP”	82
Figure 33: CBM – Selecting “IP address”	82
Figure 34: CBM – Selecting the IP Address	83
Figure 35: CBM – Entering a New IP Address.....	83
Figure 36: “WAGO Ethernet Settings” – Starting Screen (Example).....	84
Figure 37: “WAGO Ethernet Settings” – “Network” Tab	85
Figure 38: Example of a Function Test	87
Figure 39: Entering Authentication	94
Figure 40: Password Reminder	95
Figure 41: WBM Browser Window (Example)	98
Figure 42: WBM Status Information (Example).....	98
Figure 43: CBM main menu (example)	154
Figure 44: “WAGO ETHERNET Settings” – Start Screen	204
Figure 45: “WAGO ETHERNET Settings” – Communication Link.....	205
Figure 46: “WAGO ETHERNET Settings” – Identification Tab (Example)	206
Figure 47: “WAGO ETHERNET Settings” – Network Tab.....	207
Figure 48: “WAGO ETHERNET Settings” – Protocol Tab	209

Figure 49: “WAGO ETHERNET Settings” – Status Tab	210
Figure 50: Target System Settings (1)	212
Figure 51: Target System Settings (2)	212
Figure 52: Creating a New Function Block	213
Figure 53: Programming Interface with the PLC_PRG Program Module	213
Figure 54: “Resources” Tab	214
Figure 55: Control Configuration – Edit	215
Figure 56: “Start WAGO-I/O-CHECK and Scan” Button	215
Figure 57: WAGO-I/O-CHECK – Starting Screen	216
Figure 58: I/O Configurator Empty	217
Figure 59: “Add I/O Modules” Button	217
Figure 60: “Module Selection” Window	218
Figure 61: I/O Configurator with Defined I/O Modules	218
Figure 62: Variable declaration	219
Figure 63: Control Configuration: I/O Modules with Their Associated Addresses	219
Figure 64: Program Function Block	220
Figure 65: Input Assistant for Selecting Variables	220
Figure 66: Example of an Allocation	221
Figure 67: Creating a Communication Link – Step 1	222
Figure 68: Creating a Communication Link – Step 2	223
Figure 69: Creating a Communication Link – Step 3	223
Figure 70: Task Configuration	225
Figure 71: Changing Task Names 1	226
Figure 72: Call-up to Add to the Program Module	227
Figure 73: Cyclic Task	228
Figure 74: Freewheeling Task	229
Figure 75: Debugging (Case 1)	230
Figure 76: Debugging (Case 2)	230
Figure 77: Debugging (Case 3)	231
Figure 78: Debugging (Case 4)	231
Figure 79: Debugging (Case 5)	232
Figure 80: Debugging (Case 6)	232
Figure 81: Debugging (Case 7)	233
Figure 82: CODESYS – System Events	234
Figure 83: CODESYS Program Provokes Division by “0”	236
Figure 84: CODESYS – Creating and Activating an Event Handler	236
Figure 85: CODESYS – New Module has been Generated	237
Figure 86: CODESYS – Enter the Event in a Global Variable	237
Figure 87: CODESYS – Variable Contents Prior to Division by “0”	238
Figure 88: CODESYS – Variable Contents After Division by “0” and Call-up of the Event Handler	238
Figure 89: Process Image	239
Figure 90: Flag Area	240
Figure 91: Internal Data Bus Synchronization 01	245
Figure 92: I/O Module Synchronization 02	246
Figure 93: I/O Module Synchronization 03	247
Figure 94: Internal Data Bus Synchronization 04	248
Figure 95: Internal Data Bus Settings	249
Figure 96: Program Memory	252

Figure 97: Data Memory and Function Block Limitation.....	253
Figure 98: Remanent Main Memory	253
Figure 99: Flag and Retain Memory	254
Figure 100: Selecting the Visualization Technique in the Target System Settings	255
Figure 101: Creating the PLC_VISU Starting Visualization	256
Figure 102: Remanent Main Memory	264
Figure 103: CODESYS PLC Configuration - MODBUS Settings	266
Figure 104: MODBUS Process Image	272
Figure 105: Flag Area.....	273
Figure 106: MODBUS Address Overview	291
Figure 107: Power Supply Indicating Elements.....	301
Figure 108: Mobile Radio Network Status Indicators.....	302
Figure 109: Indicating elements for fieldbus/system	303
Figure 110: Flashing Sequence Process Diagram	309
Figure 111: Inserting the Memory Card.....	316
Figure 112: Release Tab of Controller	322
Figure 113: Removing the I/O Module (Example)	323
Figure 114: Graphical Representation of the “ConfigToolFB” Function Block.	359

List of Tables

Table 1: Variants	15
Table 2: Number Notation.....	18
Table 3: Font Conventions	18
Table 4: Legend for Figure “View”	27
Table 5: Legend for Figure “Power Jumper Contacts”	31
Table 6: Legend for figure “CAGE CLAMP® connections”	32
Table 7: Service Interface.....	33
Table 8: Legend for Figure “Network Connections – X1, X2”	34
Table 9: Legend for Figure “RS-232/RS-485 – X3 Communication Connection”	35
Table 10: Function of RS-232 Signals for DTE/DCE.....	36
Table 11: Legend for Figure “Power Supply Indicating Elements”	39
Table 12: Legend for Figure “Fieldbus/System Indicating Elements”	40
Table 13: Legend for Figure “Indicating Elements, Memory Card Slot”	41
Table 14: Legend for Figure “Indicating Elements, RJ-45 Jacks”	42
Table 15: Legend for the “Mobile Radio Network Status Indicators” Figure	43
Table 16: Mode Selector Switch	44
Table 17: Mode Selector Switch	44
Table 18: Technical Data – Device Data	49
Table 19: Technical Data – System Data	49
Table 20: Technical Data – Power Supply	49
Table 21: Technical Data – Clock	50
Table 22: Technical Data – Programming	50
Table 23: Technical Data – Internal Data Bus	50
Table 24: Technical Data – ETHERNET	51
Table 25: Technical Data – Serial Interface	51
Table 26: Technical Data – Mobile Radio Modem	51
Table 27: Technical Data – Field Wiring.....	51
Table 28: Technical Data – Power Jumper Contacts	52
Table 29: Technical Data – Data Contacts	52
Table 30: Technical Data – Climatic Environmental Conditions	52
Table 31: WBM Users.....	56
Table 32: Linux® Users	56
Table 33: List of Parameters Transmitted via DHCP.....	60
Table 34: WAGO DIN Rail.....	70
Table 35: Filter Modules for 24 V Supply	75
Table 36: Default IP Addresses for ETHERNET Interfaces.....	79
Table 37: Network Mask 255.255.255.0	79
Table 38: User Settings in the Default State	95
Table 39: Access Rights for WBM Pages	96
Table 40: WBM “Status Information” Page – “Controller Details” Group	101
Table 41: WBM “Status Information Page – “Network Details (Xn)” Group(s)	101
Table 42: WBM “General PLC Runtime Configuration” Page – “General PLC Runtime Configuration” Group	102
Table 43: WBM “PLC Runtime Information” Page – “PLC Runtime” Group ..	104
Table 44: WBM “PLC Runtime Information” Page – “Project Details” Group ..	104
Table 45: WBM “PLC Runtime Information” Page – “Task n” Group(s)	105
Table 46: WBM “PLC WebVisu” Page – “Web Server Configuration” Group ..	106

Table 47: WBM “Configuration of Host and Domain Name” Page – “Hostname” Group	107
Table 48: WBM “Configuration of Host and Domain Name” Page – “Domain Name” Group	107
Table 49: WBM “TCP/IP Configuration” Page – “IP Configuration (Xn)” Group(s)	108
Table 50: WBM “TCP/IP Configuration” Page – “Default Gateway n” Group ..	109
Table 51: WBM “TCP/IP Configuration” Page – “DNS Server” Group	109
Table 52: WBM “Ethernet Configuration” Page – “Switch Configuration” Group	110
Table 53: WBM “Ethernet Configuration” Page – “Interface Xn” Groups	111
Table 54: WBM “General Firewall Configuration” Page – “Global Firewall Parameters” Group	112
Table 55: WBM “General Firewall Configuration” Page – “Firewall Parameter Interface Xn” Group	113
Table 56: WBM “General Firewall Configuration” Page – “Firewall Parameter Interface VPN” Group	114
Table 57: WBM “Configuration of MAC Address Filter” Page – “Global MAC Address Filter State” Group	115
Table 58: WBM “Configuration of MAC Address Filter” Page – “MAC Address Filter State Xn” Group	116
Table 59: WBM “Configuration of MAC Address Filter” Page – “MAC Address Filter Whitelist” Group	116
Table 60: WBM “Configuration of User Filter” Page – “User Filter” Group ..	117
Table 61: WBM “Configuration of User Filter” Page – “User Filter n” Group ..	117
Table 62: WBM “Configuration of User Filter” Page – “Add New User Filter” Group	118
Table 63: WBM “Configuration of Time and Date” Page – “Date on Device” Group	119
Table 64: WBM “Configuration of Time and Date” Page – “Time on Device” Group	119
Table 65: WBM “Configuration of Time and Date” Page – “Timezone” Group ..	120
Table 66: WBM “Configuration of Time and Date” Page – “TZ String” Group ..	120
Table 67: WBM “Configuration of the users for the Web-based Management” Page – “Change Password for Selected User” Group	121
Table 68: WBM “Create Bootable Image” page – “Create bootable image from active partition” Group	122
Table 69: WBM “Configuration of Serial Interface RS232” Page – “Assign Owner of Serial Interface” Group	124
Table 70: WBM “Configuration of Serial Interface RS-232” page – “Assign Owner of Service Interface” Group	125
Table 71: WBM “Mass Storage” Page – “<Device Name>” Group	130
Table 72: WBM “Mass Storage” Page – “<Device Name>” Group	130
Table 73: WBM “Software Uploads” Page – “Upload New Software” Group ..	131
Table 74: WBM “Software Uploads” Page – “Activate New Software” Group ..	131
Table 75: WBM “Configuration of Network Services” Page – “Telnet” Group ..	132
Table 76: WBM “Configuration of Network Services” Page – “FTP” Group ..	132
Table 77: WBM “Configuration of Network Services” Page – “FTPS” Group ..	132
Table 78: WBM “Configuration of Network Services” Page – “HTTP” Group ..	132

Table 79: WBM “Configuration of Network Services” Page – “HTTPS” Group	133
Table 80: WBM “Configuration of Network Services” Page – “I/O-CHECK” Group	133
Table 81: WBM “Configuration of NTP Client” Page – “NTP Client Configuration” Group	134
Table 82: WBM “Configuration of PLC Runtime Services” Page – “General Configuration” Group	135
Table 83: WBM “Configuration of CODESYS Services” Page – “CODESYS 2 Web Server” Group.....	135
Table 84: WBM “Configuration of CODESYS Services” Page – “ <i>e!</i> RUNTIME Web Server” Group.....	135
Table 85: WBM “SSH Server Settings” Page – “SSH Server” Group	137
Table 86: WBM “TFTP Server” Page – “TFTP Server” Group	138
Table 87: WBM “DHCP Configuration” – “DHCP Configuration Xn” Group .	139
Table 88: WBM “Configuration of DNS Service” Page – “DNS Service” Group	140
Table 89: WBM “MODBUS Services Configuration” Page – “MODBUS TCP” Group	141
Table 90: WBM “MODBUS Configuration Services” Page – “MODBUS UDP” Group	141
Table 91: WBM “Configuration of General SNMP Parameters” Page – “General SNMP Configuration” Group	142
Table 92: WBM “Configuration of SNMP v1/v2c Parameters” Page – “SNMP v1/v2c Manager Configuration” Group	143
Table 93: WBM “Configuration of SNMP v1/v2c Parameters” Page – “Actually Configured Trap Receivers” Group	143
Table 94: WBM “Configuration of SNMP v1/v2c Parameters” Page – “Trap Receiver n” Group(s)	144
Table 95: WBM “Configuration of SNMP v1/v2c Parameters” Page – “Add New Trap Receiver” Group	144
Table 96: WBM “Configuration of SNMP v3” Page – “Actually Configured v3 Users” Group	145
Table 97: WBM “Configuration of SNMP v3 Users” Page – “v3 User n” Group(s)	145
Table 98: WBM “Configuration of SNMP v3 Users” Page – “Add New v3 User” Group	146
Table 99: WBM “Diagnostic Information” Page	147
Table 100: WBM “Configuration of internal 3G Modem” Page – “SIM Authentication” Group	148
Table 101: WBM “Configuration of internal 3G Modem” Page – “Mobile Network Configuration” Group	149
Table 102: WBM “Configuration of internal 3G Modem” Page – “Provider List” Group	150
Table 103: WBM “Configuration of internal 3G Modem” Page – “Network Package Service” Group	150
Table 104: WBM “Configuration of internal 3G Modem” Page – “Upload and activate new Modem Software” Group.....	151
Table 105: WBM “Configuration of OpenVPN and IPsec” Page – “OpenVPN” Group	152

Table 106: WBM “Configuration of OpenVPN and IPsec” Page – “IPsec” Group	152
Table 107: WBM “Configuration of OpenVPN and IPsec” Page – “Certificate Upload” Group	153
Table 108: WBM “Configuration of OpenVPN and IPsec” Page – “Certificate List” Group	153
Table 109: WBM “Configuration of OpenVPN and IPsec” Page – “Private Key List” Group	153
Table 110: CBM Menu Structure	154
Table 111: “Information” Menu	157
Table 112: “Information” > “Controller Details” Submenu	157
Table 113: “Information” > “Network Details” Submenu	158
Table 114: “PLC Runtime” Menu	159
Table 115: “PLC Runtime” > “Information” Submenu	159
Table 116: “PLC Runtime” > “Information” > “Runtime Version” Submenu ..	160
Table 117: “PLC Runtime” > “Information” > “Webserver Version” Submenu	160
Table 118: “PLC Runtime” > “Information” > “State” Submenu	160
Table 119: “PLC Runtime” > “Information” > “Number of Tasks” Submenu ..	161
Table 120: “PLC Runtime” > “Information” > “Project Details” Submenu	161
Table 121: “PLC Runtime” > “Information” > “Tasks” Submenu	161
Table 122: “PLC Runtime” > “Information” > “Tasks” > “Task n” Submenu ..	162
Table 123: “PLC Runtime” > “General Configuration” Submenu	162
Table 124: “PLC Runtime” > “General Configuration” > “PLC Runtime Version” Submenu	163
Table 125: “PLC Runtime” > “General Configuration” > “Home Dir On SD Card” Submenu	163
Table 126: “PLC Runtime” > “WebVisu” Submenu	164
Table 127: “Networking” Menu	165
Table 128: “Networking” > “Host/Domain Name” Submenu	165
Table 129: “Networking” > “Hostname” Submenu	166
Table 130: “Networking” > “Host/Domain Name” > “Domain Name” Submenu	166
Table 131: “Networking” > “TCP/IP” Submenu	166
Table 132: “Networking” > “IP Address” Submenu	167
Table 133: “Networking” > “TCP/IP” > “IP Address” Submenu > “Xn”	167
Table 134: “Networking” > “TCP/IP” > “Default Gateway” Submenu	168
Table 135: “Networking” > “TCP/IP” > “Default Gateway” > “Default Gateway n” Submenu	168
Table 136: “Networking” > “TCP/IP” > “DNS Server” Submenu	169
Table 137: “Networking” > “Ethernet” Submenu	169
Table 138: “Networking” > “Ethernet” > “Switch Configuration” Submenu	170
Table 139: “Networking” > “Ethernet” > “Ethernet Ports” Submenu	170
Table 140: “Networking” > “Ethernet” > “Ethernet Ports” > “Interface Xn” Submenu	171
Table 141: “Firewall” Menu	172
Table 142: “Firewall” > “General Configuration” Submenu	173
Table 143: “Firewall” > “General Configuration” > “Interface xxx” Submenu ..	174
Table 144: “Firewall” > “MAC Address Filter” Submenu	175
Table 145: “Firewall” > “MAC Address Filter” > “MAC address filter whitelist” Submenu	176

Table 146: “Firewall” > “MAC Address Filter” > “MAC address filter whitelist” > “Add new / No (n)” Submenu	176
Table 147: “Firewall” > “User Filter” Submenu	177
Table 148: “Firewall” > “User Filter” > “Add New / No (n)” Submenu	178
Table 149: “Clock” Menu	179
Table 150: “Administration” Menu	180
Table 151: “Administration” > “Create Image” Submenu	181
Table 152: “Administration” > “Users” Submenu	181
Table 153: “Package Server” Menu	182
Table 154: “Package Server” > “Firmware Backup” Menu	182
Table 155: “Package Server” > “Firmware Backup” > “Auto Update Feature” Menu	183
Table 156: “Package Server” > “Firmware Backup” > “Auto Update Feature” Menu	183
Table 157: “Package Server” > “Firmware Restore” Menu	184
Table 158: “Package Server” > “Firmware Restore” > “Select Package” Menu	184
Table 159: “Package Server” > “System Partition” Submenu	185
Table 160: “Mass Storage” Menu	186
Table 161: “Mass Storage” > “SD Card” Menu	186
Table 162: “Ports and Services” Menu	188
Table 163: “Ports and Services” > “Telnet” Submenu	189
Table 164: “Ports and Services” > “FTP” Submenu	189
Table 165: “Ports and Services” > “FTPS” Submenu	190
Table 166: “Ports and Services” > “HTTP” Submenu	190
Table 167: “Ports and Services” > “HTTPS” Submenu	191
Table 168: “Ports and Services” > “NTP” Submenu	191
Table 169: “Ports and Services” > “SSH” Submenu	192
Table 170: “Ports and Services” > “TFTP” Submenu	192
Table 171: “Ports and Services” > “DHCPD” Submenu	193
Table 172: “Ports and Services” > “DHCPD” > “Xn” Submenu	193
Table 173: “Ports and Services” > “DNS” Submenu	194
Table 174: “Ports and Services” > “IOCHECK PORT” Submenu	195
Table 175: “Ports and Services” > “Modbus TCP” Submenu	195
Table 176: “Ports and Services” > “Modbus UDP” Submenu	196
Table 177: “Ports and Services” > “PLC Runtime Services” Submenu	196
Table 178: “Ports and Services” > “PLC Runtime Services” > “CODESYS 2” Submenu	197
Table 179: “Ports and Services” > “PLC Runtime Services” > “e!RUNTIME” Submenu	198
Table 180: “Ports and Services” > “Firewall Status” Submenu	199
Table 181: “SNMP” Menu	200
Table 182: “SNMP” > “General SNMP Configuration” Submenu	200
Table 183: “SNMP” > “SNMP v1/v2c Manager Configuration” Submenu	201
Table 184: “SNMP” > “SNMP v1/v2c Trap Receiver Configuration” Submenu	201
Table 185: “SNMP” > “SNMP v3 Configuration” Submenu	202
Table 186: “SNMP” > “(Secure)SNMP firewalling” Submenu	203
Table 187: Syntax of Logical Addresses	224
Table 188: Events	235

Table 189: Access to the Process Images of the Input and Output Data – Internal Data Bus.....	241
Table 190: Access to the Process Images of the Input and Output Data – MODBUS	242
Table 191: Access to the Process Images of the Input and Output Data – CANopen	242
Table 192: Access to the Process Images of the Input and Output Data – PROFIBUS	242
Table 193: Access to the Process Images of the Input and Output Data – Flags	243
Table 194: Arrangement of the I/O Modules for the Addressing Example	243
Table 195: Addressing Example	243
Table 196: Internal Data Bus Settings.....	250
Table 197: Errors and Remedies	259
Table 198: CODESYS V3 Priorities	263
Table 199: MODBUS Settings.....	267
Table 200: MODBUS TCP Settings	268
Table 201: MODBUS UDP Settings.....	268
Table 202: MODBUS RTU Settings.....	269
Table 203: MODBUS Mapping for Read Bit Services FC1, FC2	274
Table 204: MODBUS Mapping for Write Bit Services FC5, FC15	275
Table 205: MODBUS Mapping for Read Register Services FC3, FC4, FC23... ..	276
Table 206: MODBUS Mapping for Write Register Services FC6, FC16, FC22, FC23.....	278
Table 207: WAGO MODBUS Registers	280
Table 208: Watchdog Commands	284
Table 209: Watchdog Status.....	285
Table 210: Watchdog Configuration.....	286
Table 211: Diagnostics for the Error Server	288
Table 212: WAGO MODBUS Registers	292
Table 213: Watchdog Commands	294
Table 214: Watchdog Status.....	295
Table 215: Watchdog Configuration.....	296
Table 216: Legend for Figure “Power Supply Indicating Elements”	301
Table 217: Field-Side Supply Diagnostics.....	301
Table 218: System Power Supply Diagnostics	301
Table 219: Legend for the “Mobile Radio Network Status Indicators” Figure ..	302
Table 220: Diagnostics via CON LED.....	302
Table 221: Diagnostics via SYS LED.....	303
Table 222: Diagnostics RUN LED.....	304
Table 223: RUN LED Diagnostics – <i>e!RUNTIME</i>	305
Table 224: Diagnostics I/O LED.....	306
Table 225: Diagnostics via NET LED	307
Table 226: Diagnostics via Signal Quality LEDs	308
Table 227: Signal Quality Meaning	308
Table 228: Overview of Error Codes	311
Table 229: Error Code 1, Explanation of Blink Codes and Procedures for Troubleshooting	312
Table 230: Error Code 2, Explanation of Blink Codes and Procedures for Troubleshooting	313

Table 231: Error Code 3, Explanation of Blink Codes and Procedures for Troubleshooting	314
Table 232: Error Code 4, Explanation of Blink Codes and Procedures for Troubleshooting	315
Table 233: Error Code 5, Explanation of Blink Codes and Procedures for Troubleshooting	315
Table 234: Error Code 9, Explanation of Blink Codes and Procedures for Troubleshooting	315
Table 235: 1 Channel Digital Input Module with Diagnostics	325
Table 236: 2 Channel Digital Input Modules	325
Table 237: 2 Channel Digital Input Module with Diagnostics	325
Table 238: 2 Channel Digital Input Module with Diagnostics and Output Process Data	326
Table 239: 4 Channel Digital Input Modules	326
Table 240: 8 Channel Digital Input Modules	326
Table 241: 8 Channel Digital Input Module PTC with Diagnostics and Output Process Data	327
Table 242: 16 Channel Digital Input Modules	327
Table 243: 1 Channel Digital Output Module with Input Process Data	328
Table 244: 2 Channel Digital Output Modules	328
Table 245: 2 Channel Digital Input Modules with Diagnostics and Input Process Data	329
Table 246: 2 Channel Digital Input Modules with Diagnostics and Input Process Data 75x-506	329
Table 247: 4 Channel Digital Output Modules	330
Table 248: 4 Channel Digital Output Modules with Diagnostics and Input Process Data	330
Table 249: 8 Channel Digital Output Module	330
Table 250: 8 Channel Digital Output Modules with Diagnostics and Input Process Data	331
Table 251: 16 Channel Digital Output Modules	331
Table 252: 8 Channel Digital Input/Output Modules	332
Table 253: 1 Channel Analog Input Modules	333
Table 254: 2 Channel Analog Input Modules	333
Table 255: 4 Channel Analog Input Modules	334
Table 256: 3-Phase Power Measurement Module	335
Table 257: 8 Channel Analog Input Modules	335
Table 258: 2 Channel Analog Output Modules	336
Table 259: 4 Channel Analog Output Modules	336
Table 260: Counter Modules 750-404, (and all variations except of /000-005), 753-404, (and variation /000-003)	337
Table 261: Counter Modules 750-404/000-005	338
Table 262: Counter Modules 750-638, 753-638	338
Table 263: Pulse Width Modules 750-511, /xxx-xxx	339
Table 264: Serial Interface Modules with alternative Data Format	339
Table 265: Serial Interface Modules with Standard Data Format	340
Table 266: Data Exchange Module	340
Table 267: SSI Transmitter Interface Modules	341
Table 268: Incremental Encoder Interface Modules 750-631/000-004, --010, -011	341

Table 269: Incremental Encoder Interface Modules 750-634	342
Table 270: Incremental Encoder Interface Modules 750-637	342
Table 271: Digital Pulse Interface Modules 750-635	343
Table 272: DC-Drive Controller 750-636	343
Table 273: Stepper Controller RS 422 / 24 V / 20 mA 750-670	344
Table 274: RTC Module 750-640	345
Table 275: DALI/DSI Master Module 750-641	345
Table 276: Overview of Input Process Image in the "Easy" Mode	347
Table 277: Overview of the Output Process Image in the "Easy" Mode“	347
Table 278: EnOcean Radio Receiver 750-642	348
Table 279: MP Bus Master Module 750-643	349
Table 280: Bluetooth® RF-Transceiver 750-644	349
Table 281: Vibration Velocity/Bearing Condition Monitoring VIB I/O 750-645	350
Table 282: KNX/EIB/TP1 Module 753-646	351
Table 283: AS-interface Master Module 750-655	352
Table 284: System Modules with Diagnostics 750-610, -611	353
Table 285: Binary Space Module 750-622 (with Behavior Like 2 Channel Digital Input)	353
Table 286: CODESYS System Libraries	354
Table 287: Possible Macros for File Access	356
Table 288: Possible Macros for File Access	357
Table 289: Input Variable “DEVICENUMBER”	358
Table 290: Description of the Configuration Scripts for “Information”	359
Table 291: Description of the Configuration Scripts for “CODESYS”	360
Table 292: Description of the Configuration Scripts for “Networking - Host/Domain Name”	361
Table 293: Description of the Configuration Scripts for “Networking - TCP/IP”	361
Table 294: Description of the Configuration Scripts for “Networking - ETHERNET”	363
Table 295: Description of the Configuration Scripts for “NTP”	364
Table 296: Description of the Configuration Scripts for “Clock”	365
Table 297: Description of the Configuration Scripts for "Administration"	365
Table 298: Description of Configuration Scripts for “Package Server”	366
Table 299: Description of Configuration Scripts for “Ports and Services” – “Network Services”	367
Table 300: Description of Configuration Scripts for “Ports and Services” – “PLC Runtime Services”	368
Table 301: Description of Configuration Scripts for “Ports and Services” – “SSH/TFTP”	371
Table 302: Description of Configuration Scripts for “SNMP”	372
Table 303: Overview of Open Source Licenses	378

WE! INNOVATE!

WAGO Kontakttechnik GmbH & Co. KG
Postfach 2880 • D-32385 Minden
Hansastraße 27 • D-32423 Minden
Phone: 05 71/8 87 – 0
Fax: 05 71/8 87 – 1 69
E-Mail: info@wago.com
Internet: <http://www.wago.com>

