


WAGO I/O System 750

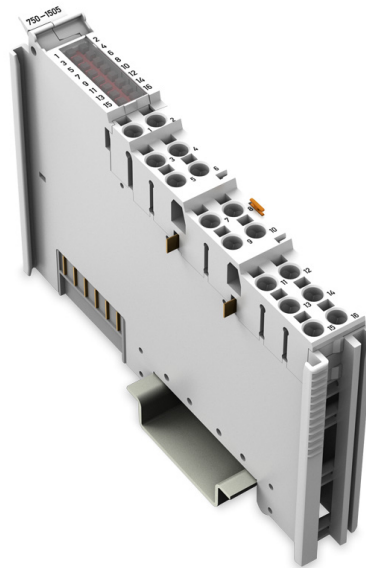

750-1505

**16DO 24VDC 0.5 A, low-side switching
16-Channel Digital Output Module 24 VDC;
Low-side switching**

© 2021 WAGO Kontakttechnik GmbH & Co. KG
All rights reserved.

WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27
D-32423 Minden

Phone: +49 (0) 571/8 87 – 0
Fax: +49 (0) 571/8 87 – 1 69

E-Mail: info@wago.com

Web: www.wago.com

Technical Support

Phone: +49 (0) 571/8 87 – 4 45 55
Fax: +49 (0) 571/8 87 – 84 45 55

E-Mail: support@wago.com

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.

Table of Contents

1	Notes about this Documentation	5
1.1	Validity of this Documentation	5
1.2	Copyright	5
1.3	Symbols	6
1.4	Number Notation	8
1.5	Font Conventions	8
2	Important Notes	9
2.1	Legal Bases	9
2.1.1	Subject to Changes	9
2.1.2	Personnel Qualifications	9
2.1.3	Use of the 750 Series in Compliance with Underlying Provisions	9
2.1.4	Technical Condition of Specified Devices	10
2.1.4.1	Disposal	10
2.1.4.1.1	Electrical and Electronic Equipment	10
2.1.4.1.2	Packaging	11
2.2	Safety Advice (Precautions)	12
3	Device Description	15
3.1	View	17
3.2	Connectors	18
3.2.1	Data Contacts/Local Bus	18
3.2.2	Power Jumper Contacts/Field Supply	19
3.2.3	Push-in CAGE CLAMP® Connectors	21
3.3	Display Elements	22
3.4	Operating Elements	22
3.5	Schematic Diagram	23
3.6	Technical Data	24
3.6.1	Device	24
3.6.2	Communication	24
3.6.3	Supply	24
3.6.4	Outputs	24
3.6.5	Connection Type	25
3.6.6	Climatic Environmental Conditions	25
3.7	Approvals	26
3.8	Standards and Guidelines	27
4	Process Image	28
5	Mounting	29
5.1	Mounting Sequence	30
5.2	Inserting and Removing Devices	31
5.2.1	Inserting the I/O Module	31
5.2.2	Removing the I/O Module	32
6	Connect Devices	33
6.1	Connecting a Conductor to the Push-in CAGE CLAMP®	33

7	Using in Safety Related Applications	34
7.1	Important Notes	35
7.2	Connecting the I/O Module to Safety Switching Devices or F I/O Modules	36
7.2.1	General Structure of a Potential Group	36
7.2.2	Examples of Connection	37
8	Use in Hazardous Environments	38
8.1	Marking Configuration Examples	39
8.1.1	Marking for Europe According to ATEX and IECEx	39
8.1.2	Marking for the United States of America (NEC) and Canada (CEC)	43
8.2	Installation Regulations	46
8.2.1	Special Notes including Explosion Protection	46
8.2.2	Special Notes Regarding ANSI/ISA Ex	48
	List of Figures	49
	List of Tables	50

1 Notes about this Documentation



Note

Always retain this documentation!

This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user. In addition, ensure that any supplement to this documentation is included, if necessary.

1.1 Validity of this Documentation

This documentation is only applicable to the I/O module 750-1505 (16DO 24VDC 0.5 A, low-side switching).

The I/O module 750-1505 shall only be installed and operated according to the instructions in this manual and in the manual for the used fieldbus coupler or controller.

NOTICE

Consider power layout of the WAGO I/O System 750!

In addition to these operating instructions, you will also need the manual for the used fieldbus coupler or controller, which can be downloaded at www.wago.com. There, you can obtain important information including information on electrical isolation, system power and supply specifications.

1.2 Copyright

This Manual, including all figures and illustrations, is copyright-protected. Any further use of this Manual by third parties that violate pertinent copyright provisions is prohibited. Reproduction, translation, electronic and phototechnical filing/archiving (e.g., photocopying) as well as any amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG, Minden, Germany. Non-observance will involve the right to assert damage claims.

1.3 Symbols



DANGER

Personal Injury!

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.



DANGER

**Personal Injury Caused by Electric Current!**

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Personal Injury!

Indicates a moderate-risk, potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Personal Injury!

Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE

Damage to Property!

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.



NOTICE

Damage to Property Caused by Electrostatic Discharge (ESD)!

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.



Note

Important Note!

Indicates a potential malfunction which, if not avoided, however, will not result in damage to property.



Information

Additional Information:

Refers to additional information which is not an integral part of this documentation (e.g., the Internet).

1.4 Number Notation

Table 1: Number Notation

Number Code	Example	Note
Decimal	100	Normal notation
Hexadecimal	0x64	C notation
Binary	'100' '0110.0100'	In quotation marks, nibble separated with dots (.)

1.5 Font Conventions

Table 2: Font Conventions

Font Type	Indicates
<i>italic</i>	Names of paths and data files are marked in italic-type. e.g.: <i>C:\Program Files\WAGO Software</i>
Menu	Menu items are marked in bold letters. e.g.: Save
>	A greater-than sign between two names means the selection of a menu item from a menu. e.g.: File > New
Input	Designation of input or optional fields are marked in bold letters, e.g.: Start of measurement range
"Value"	Input or selective values are marked in inverted commas. e.g.: Enter the value "4 mA" under Start of measurement range .
[Button]	Pushbuttons in dialog boxes are marked with bold letters in square brackets. e.g.: [Input]
[Key]	Keys are marked with bold letters in square brackets. e.g.: [F5]

2 Important Notes

This section includes an overall summary of the most important safety requirements and notes that are mentioned in each individual section. To protect your health and prevent damage to devices as well, it is imperative to read and carefully follow the safety guidelines.

2.1 Legal Bases

2.1.1 Subject to Changes

WAGO Kontakttechnik GmbH & Co. KG reserves the right to provide for any alterations or modifications. WAGO Kontakttechnik GmbH & Co. KG owns all rights arising from the granting of patents or from the legal protection of utility patents. Third-party products are always mentioned without any reference to patent rights. Thus, the existence of such rights cannot be excluded.

2.1.2 Personnel Qualifications

All sequences implemented on WAGO I/O System 750 devices may only be carried out by electrical specialists with sufficient knowledge in automation. The specialists must be familiar with the current norms and guidelines for the devices and automated environments.

All changes to the coupler or controller should always be carried out by qualified personnel with sufficient skills in PLC programming.

2.1.3 Use of the 750 Series in Compliance with Underlying Provisions

Fieldbus couplers, controllers and I/O modules found in the modular WAGO I/O System 750 receive digital and analog signals from sensors and transmit them to actuators or higher-level control systems. Using controllers, the signals can also be (pre-) processed.

The devices have been developed for use in an environment that fulfills the requirements of protection type IP20 and are designed for use in dry interior spaces. Protection against finger injury and solid impurities up to 12.5 mm diameter is assured; protection against water damage is not ensured. Unless otherwise specified, operation of the devices in wet and dusty environments is prohibited.

Use without additional protective measures in environments within which dust, corrosive fumes, gases or ionized radiation can occur is considered improper use.

Operating the WAGO I/O System 750 devices in home applications without further measures is only permitted if they meet the emission limits (emissions of interference) according to EN 61000-6-3. You will find the relevant information in

the section "Device Description" > "Standards and Guidelines" in the manual for the used device.

Appropriate housing (per 2014/34/EU) is required when operating the WAGO I/O System 750 in hazardous environments. Please observe the installation regulations! Please note that a prototype test certificate must be obtained that confirms the correct installation of the system in a housing or switch cabinet.

The implementation of safety functions such as EMERGENCY STOP or safety door monitoring must only be performed by the F I/O modules within the modular WAGO I/O System 750. Only these safe F I/O modules ensure functional safety in accordance with the latest international standards. WAGO's interference-free output modules can be controlled by the safety function.

2.1.4 Technical Condition of Specified Devices

The devices to be supplied ex works are equipped with hardware and software configurations, which meet the individual application requirements. These modules contain no parts that can be serviced or repaired by the user. The following actions will result in the exclusion of liability on the part of WAGO Kontakttechnik GmbH & Co. KG:

- Repairs,
- Changes to the hardware or software that are not described in the operating instructions,
- Improper use of the components.

Further details are given in the contractual agreements. Please send your request for modified and new hardware or software configurations directly to WAGO Kontakttechnik GmbH & Co. KG.

2.1.4.1 Disposal

2.1.4.1.1 Electrical and Electronic Equipment



Electrical and electronic equipment may not be disposed of with household waste. This also applies to products without this symbol.

Electrical and electronic equipment contain materials and substances that can be harmful to the environment and health. Electrical and electronic equipment must be disposed of properly after use.

WEEE 2012/19/EU applies throughout Europe. Directives and laws may vary nationally.



Environmentally friendly disposal benefits health and protects the environment from harmful substances in electrical and electronic equipment.

- Observe national and local regulations for the disposal of electrical and electronic equipment.
- Clear any data stored on the electrical and electronic equipment.
- Remove any added battery or memory card in the electrical and electronic equipment.
- Have the electrical and electronic equipment sent to your local collection point.

Improper disposal of electrical and electronic equipment can be harmful to the environment and human health.

2.1.4.1.2 Packaging

Packaging contains materials that can be reused.
PPWD 94/62/EU and 2004/12/EU packaging guidelines apply throughout Europe. Directives and laws may vary nationally.

Environmentally friendly disposal of the packaging protects the environment and allows sustainable and efficient use of resources.

- Observe national and local regulations for the disposal of packaging.
- Dispose of packaging of all types that allows a high level of recovery, reuse and recycling.

Improper disposal of packaging can be harmful to the environment and wastes valuable resources.

2.2 Safety Advice (Precautions)

For installing and operating purposes of the relevant device to your system the following safety precautions shall be observed:



DANGER

Do not work on devices while energized!

All power sources to the device shall be switched off prior to performing any installation, repair or maintenance work.



DANGER

Install device in only one suitable enclosure!

The device is an open system. Install the device in a suitable enclosure. This enclosure must:

- Guarantee that the max. permissible degree of pollution is not exceeded.
- Offer adequate protection against contact.
- Prevent fire from spreading outside of the enclosure.
- Offer adequate protection against UV irradiation.
- Guarantee mechanical stability
- Restrict access to authorized personnel and may only be opened with tools



DANGER

Ensure disconnect and overcurrent protection!

The device is intended for installation in automation technology systems. Disconnect protection is not integrated. Connected systems must be protected by a fuse.

Provide suitable disconnect and overcurrent protection on the system side!



DANGER

Ensure a standard connection!

To minimize any hazardous situations resulting in personal injury or to avoid failures in your system, the data and power supply lines shall be installed according to standards, with careful attention given to ensuring the correct terminal assignment. Always adhere to the EMC directives applicable to your application.

NOTICE

Ensure proper contact with the DIN-rail!

Proper electrical contact between the DIN-rail and device is necessary to maintain the EMC characteristics and function of the device.

NOTICE

Replace defective or damaged devices!

Replace defective or damaged device/module (e.g., in the event of deformed contacts).

NOTICE

Protect the components against materials having seeping and insulating properties!

The components are not resistant to materials having seeping and insulating properties such as: aerosols, silicones and triglycerides (found in some hand creams). If you cannot exclude that such materials will appear in the component environment, then install the components in an enclosure being resistant to the above-mentioned materials. Clean tools and materials are imperative for handling devices/modules.

NOTICE

Clean only with permitted materials!

Clean housing and soiled contacts with propanol.

NOTICE

Do not use any contact spray!

Do not use any contact spray. The spray may impair contact area functionality in connection with contamination.

NOTICE

Do not reverse the polarity of connection lines!

Avoid reverse polarity of data and power supply lines, as this may damage the devices involved.

**NOTICE****Avoid electrostatic discharge!**

The devices are equipped with electronic components that may be destroyed by electrostatic discharge when touched. Please observe the safety precautions against electrostatic discharge per DIN EN 61340-5-1/-3. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly grounded.

3 Device Description

The 750-1505 (16DO 24VDC 0.5 A, low-side switching) Digital Output Module transmits binary control signals from the automation device to the connected actuators (e.g., solenoid valves, contactors, transmitters, relays or other electrical loads).

The I/O module has 16 output channels, providing a direct connection to single-wire actuators.

The actuators are connected to the CAGE CLAMP® connections DO 1 ... DO 16. The assignment of the connections is described in the “Connectors” section.



Note

Use field side connection modules!

Where required, use the appropriate field side connection modules for power supply to the actuators.

NOTICE

Limit all induced voltage!

The electronic components of the I/O module can be damaged by the induced voltage produced when inductive loads are de-activated.

An appropriate protection circuit, e.g., a recovery diode, must be installed in parallel to the load to limit this induced voltage.

NOTICE

Provide for overload protection!

Overloading can damage the electronic components of the I/O module.

A fused supply module (750-601) must be installed upstream of the I/O module to protect it against overloading!

The I/O module outputs provide negative switching. If the signal status of an output channel is at "high" the 0V potential for field power will be switched to the appropriate output connection.

A green LED indicates the switched status of each channel.

The meaning of the LEDs is described in the “Display Elements” section.

The I/O module 750-1505 (16DO 24VDC 0.5 A, low-side switching) receives the 24 V voltage supply for the field level from an upstream I/O module or from the fieldbus coupler/controller via blade-formed power jumper contacts. It then provides these potentials to subsequent I/O modules via spring-formed power jumper contacts.

NOTICE

Do not exceed maximum values via power contacts!

The maximum current that can flow through the power jumper contacts is 10 A. The power jumper contacts can be damaged and the permissible operating temperature can be exceeded by higher current values.

When configuring the system, do not exceed the permissible maximum current value. If there is a higher power requirement, you must use an additional supply module to provide the field voltage.

Note

**Use supply modules for ground (earth)!**

The I/O module has no power jumper contacts for receiving and transmitting the earth potential. Use a supply module when an earth potential is needed for the subsequent I/O modules.

The field voltage and the system voltage are electrically isolated from each other.

With consideration of the power jumper contacts, the individual modules can be arranged in any combination when configuring the fieldbus node.

An arrangement in groups within the group of potentials is not necessary.

The I/O module 750-1505 can be used with all fieldbus couplers/controllers of the WAGO-I/O-SYSTEM 750.

3.1 View

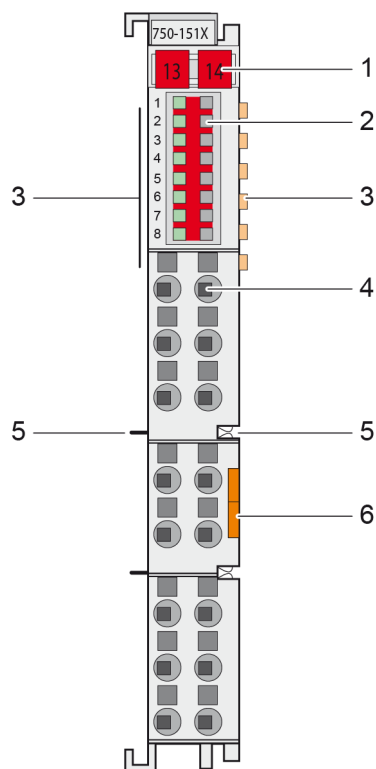


Figure 1: View

Table 3: Legend for Figure "View"

Pos.	Description	Details See Section
1	Marking possibility with Mini-WSB	---
2	Status LEDs	"Device Description" > "Display Elements"
3	Data contacts	"Device Description" > "Connectors"
4	Push-in CAGE CLAMP® connectors	"Device Description" > "Connectors"
5	Power jumper contacts	"Device Description" > "Connectors"
6	Release tab	"Mounting" > "Inserting and Removing Devices"

3.2 Connectors

3.2.1 Data Contacts/Local Bus

Communication between the fieldbus coupler/controller and the I/O modules as well as the system supply of the I/O modules is carried out via the local bus. The contacting for the local bus consists of 6 data contacts, which are available as self-cleaning gold spring contacts.

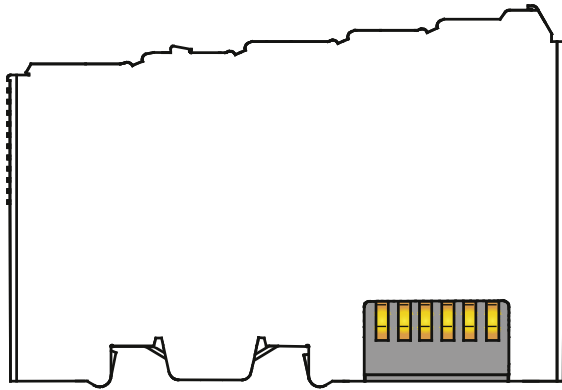


Figure 2: Data Contacts

NOTICE

Do not place the I/O modules on the gold spring contacts!

Do not place the I/O modules on the gold spring contacts in order to avoid soiling or scratching!

NOTICE



Pay attention to potential equalization from the environment!

The devices are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly equalized. Do not touch any conducting parts, e.g., data contacts.

3.2.2 Power Jumper Contacts/Field Supply

CAUTION

Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury. Do not touch the blade contacts.

The I/O module 750-1505 has 2 self-cleaning power jumper contacts that supply and transmit power for the field side. The contacts on the left side of the I/O module are designed as blade contacts and those on the right side as spring contacts.

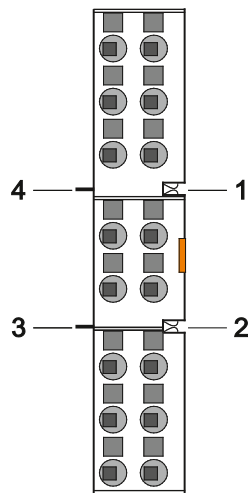


Figure 3: Power Jumper Contacts

Table 4: Legend for Figure "Power Jumper Contacts"

Contact	Type	Function
1	Spring contact	Potential transmission (U_v) for field supply
2	Spring contact	Potential transmission (0 V) for field supply
3	Blade contact	Potential feed-in (0 V) for field supply
4	Blade contact	Potential feed-in (U_v) for field supply

NOTICE

Do not exceed maximum values via power contacts!

The maximum current that can flow through the power jumper contacts is 10 A. The power jumper contacts can be damaged and the permissible operating temperature can be exceeded by higher current values.

When configuring the system, do not exceed the permissible maximum current value. If there is a higher power requirement, you must use an additional supply module to provide the field voltage.



Note

Use supply modules for ground (earth)!

The I/O module has no power jumper contacts for receiving and transmitting the earth potential. Use a supply module when an earth potential is needed for the subsequent I/O modules.

3.2.3 Push-in CAGE CLAMP® Connectors

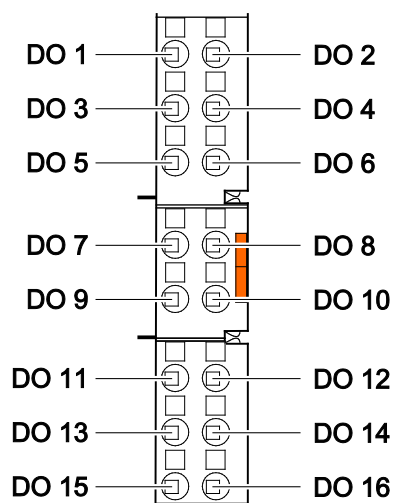


Figure 4: Push-in CAGE CLAMP® Connectors

Table 5: Legend for Figure “Push-in CAGE CLAMP® Connectors”

Channel	Designation	Connection	Function
1	Output DO 1	1	Output DO 1: Signal voltage
2	Output DO 2	2	Output DO 2: Signal voltage
.			
.			
.			
15	Output DO 15	15	Output DO 15: Signal voltage
16	Output DO 16	16	Output DO 16: Signal voltage

3.3 Display Elements

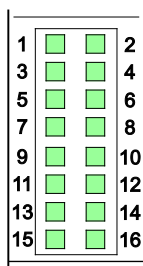


Figure 5: Display Elements

Table 6: Legend for Figure "Display Elements"

Channel	Designation	LED	State	Function
1	State DO1	1	Off	Output DO 1: Signal voltage (0)
			Green	Output DO 1: Signal voltage (1)
2	State DO 2	2	Off	Output DO 2: Signal voltage (0)
			Green	Output DO 2: Signal voltage (1)
⋮				
⋮				
15	State DO 15	15	Off	Output DO 15: Signal voltage (0)
			Green	Output DO 15: Signal voltage (1)
16	State DO 16	16	Off	Output DO 16: Signal voltage (0)
			Green	Output DO 16: Signal voltage (1)

3.4 Operating Elements

The I/O module 750-1505 has no operating elements.

3.5 Schematic Diagram

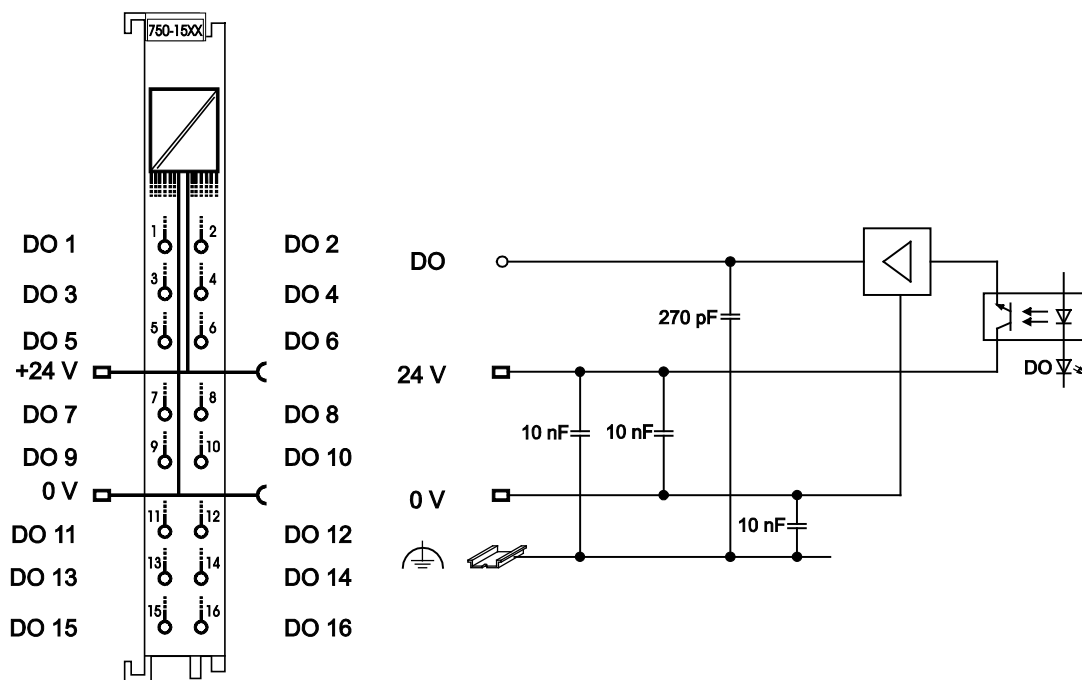


Figure 6: Schematic Diagram

3.6 Technical Data

3.6.1 Device

Table 7: Technical Data – Device

Width	12 mm
Depth (from upper edge of 35 DIN rail)	67 mm
Height	100 mm
Weight	50 g

3.6.2 Communication

Table 8: Technical Data – Communication

Data width	16 bits
------------	---------

3.6.3 Supply

Table 9: Technical Data – Supply

Voltage supply	Via system supply (internal bus) and power jumper contacts
Supply voltage (U _v) field supply	24 VDC (-25 % ... +30 %)
Current consumption field supply	approx. 11 mA
Current consumption system supply	approx. 40 mA
Isolation system/supply	500 V

3.6.4 Outputs

Table 10: Technical Data – Inputs

No. of outputs	16
Output type	Low-side switching
Type of load	Lamps, resistive and inductive load
Switching frequency _{max.}	1 kHz
Output current _{max.} , 1 Output	0.5 A, short-circuit protected
Unique switching off energy E _{AS}	100 mJ
Voltage quenching circuit _{max.}	40 V - V _{CC}

3.6.5 Connection Type

Table 11: Technical Data – Field Wiring

Wire connection	Push-in CAGE CLAMP®
Cross section, solid wire	0.08 mm² ... 1.5 mm² / AWG 28 ... 16
Cross section, fine-stranded wire	0.25 mm² ... 1.5 mm² / AWG 22 ... 16
Stripped lengths	8 mm ... 9 mm / 0.33 in

Table 12: Technical Data – Power Jumper Contacts

Power jumper contacts	Blade/spring contact, self-cleaning
-----------------------	-------------------------------------

Table 13: Technical Data – Data Contacts

Data contacts	Slide contact, hard gold plated, self-cleaning
---------------	--

3.6.6 Climatic Environmental Conditions

Table 14: Technical Data – Climatic Environmental Conditions

Surrounding air temperature, operation	0 °C ... 55 °C
Surrounding air temperature, storage	–25 °C ... +85 °C
Operating altitude	0 ... 2000 m; (> 2000 m upon request)
Relative humidity	Max. 5 % ... 95 % without condensation
Pollution degree	2
Protection type	IP20
Resistance to harmful substances	Acc. to IEC 60068-2-42 and IEC 60068-2-43
Maximum pollutant concentration at relative humidity < 75 %	SO ₂ ≤ 25 ppm H ₂ S ≤ 10 ppm
Special conditions	Ensure that additional measures for components are taken, which are used in an environment involving: – dust, caustic vapors or gases – ionizing radiation

3.7 Approvals



Information

More information about approvals.

Detailed references to the approvals are listed in the document “**Overview on WAGO I/O System 750 approvals**”, which you can find via the internet under:
www.wago.com → DOWNLOADS → Documentation → System Description.

The following approvals have been granted to 750-1505 I/O modules:



Conformity Marking



UL508



Korea Certification

MSIP-REM-W43-DOM750

The following Ex approvals have been granted to 750-1505 I/O modules:

TÜV 07 ATEX 554086 X



I M2 Ex d I Mb
II 3 G Ex nA IIC T4 Gc
II 3 D Ex tc IIIC T135°C Dc

IECEX TUN 09.0001 X

Ex d I Mb
Ex nA IIC T4 Gc
Ex tc IIIC T135°C Dc



cULus ANSI/ISA 12.12.01

Class I, Div2 ABCD T4

The following ship approvals have been granted to 750-1505 I/O modules:



ABS (American Bureau of Shipping)



Federal Maritime and Hydrographic Agency



BV (Bureau Veritas)



DNV (Det Norske Veritas)

Class B



GL (Germanischer Lloyd)

Cat. A, B, C, D (EMC 1)



KR (Korean Register of Shipping)



LR (Lloyd's Register)

Env. 1, 2, 3, 4



NKK (Nippon Kaiji Kyokai)



PRS (Polski Rejestr Statków)



RINA (Registro Italiano Navale)

3.8 Standards and Guidelines

750-1505 I/O modules meet the following requirements on emission and immunity of interference:

EMC CE-Emission of interference	EN 61000-6-3
EMC CE-Immunity to interference	EN 61000-6-2
EMC marine applications-Emission of interference	acc. to DNV GL
EMC marine applications-Immunity to interference	acc. to DNV GL

4 Process Image

Table 15: Output Bits 0 ... 7

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DO 8	DO 7	DO 6	DO 5	DO 4	DO 3	DO 2	DO 1
DO 1	Signal state DO 1 – Digital output channel 1						
DO 2	Signal state DO 2 – Digital output channel 2						
DO 3	Signal state DO 3 – Digital output channel 3						
DO 4	Signal state DO 4 – Digital output channel 4						
DO 5	Signal state DO 5 – Digital output channel 5						
DO 6	Signal state DO 6 – Digital output channel 6						
DO 7	Signal state DO 7 – Digital output channel 7						
DO 8	Signal state DO 8 – Digital output channel 8						

Table 16: Output Bits 8 ... 15

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
DO 16	DO 15	DO 14	DO 13	DO 12	DO 11	DO 10	DO 9
DO 9	Signal state DO 9 – Digital output channel 9						
DO 10	Signal state DO 10 – Digital output channel 10						
DO 11	Signal state DO 11 – Digital output channel 11						
DO 12	Signal state DO 12 – Digital output channel 12						
DO 13	Signal state DO 13 – Digital output channel 13						
DO 14	Signal state DO 14 – Digital output channel 14						
DO 15	Signal state DO 15 – Digital output channel 15						
DO 16	Signal state DO 16 – Digital output channel 16						

5 Mounting



DANGER

Do not work when devices are energized!

High voltage can cause electric shock or burns.

Switch off all power to the device prior to performing any installation, repair or maintenance work.



CAUTION

Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury. Do not touch the blade contacts.

NOTICE

Do not contaminate contacts!

Contamination may negatively impact the functionality of data and power jumper contacts. Do not touch the contacts. Avoid contaminating the contacts.

NOTICE

Do not place the I/O modules on the gold spring contacts!

Do not place the I/O modules on the gold spring contacts in order to avoid soiling or scratching!



NOTICE

Pay attention to potential equalization from the environment!

The devices are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly equalized. Do not touch any conducting parts, e.g., data contacts.

NOTICE

Follow the installation instructions!

Only install this device in dry, indoor rooms.

Do not install the device on or in the vicinity of easily flammable materials!

5.1 Mounting Sequence

Fieldbus couplers, controllers and I/O modules of the WAGO I/O System 750 are snapped directly on a carrier rail in accordance with the European standard EN 60175 (DIN 35).

The reliable positioning and connection is made using a tongue and groove system. Due to the automatic locking, the individual devices are securely seated on the rail after installation.

Starting with the fieldbus coupler or controller, the I/O modules are mounted adjacent to each other according to the project design. Errors in the design of the node in terms of the potential groups (connection via the power contacts) are recognized, as the I/O modules with power contacts (blade contacts) cannot be linked to I/O modules with fewer power contacts.

NOTICE

Insert I/O modules only from the proper direction!

All I/O modules feature grooves for power jumper contacts on the right side. For some I/O modules, the grooves are closed on the top. Therefore, I/O modules featuring a power jumper contact on the left side cannot be snapped from the top. This mechanical coding helps to avoid configuration errors, which may destroy the I/O modules. Therefore, insert I/O modules only from the right and from the top.

Note

**Don't forget the bus end module!**

Always plug a bus end module (e.g. 750-600) onto the end of the fieldbus node! You must always use a bus end module at all fieldbus nodes with WAGO I/O System 750 fieldbus couplers or controllers to guarantee proper data transfer.

5.2 Inserting and Removing Devices

5.2.1 Inserting the I/O Module

1. Position the I/O module in such a way that the groove and spring are connected to the preceding and following components.

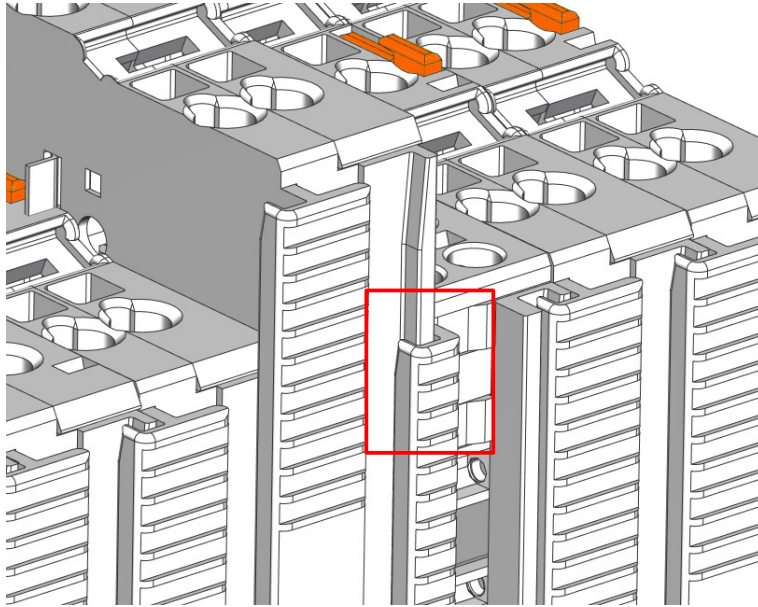


Figure 7: Inserting I/O Module (Example)

2. Press the I/O module into the assembly until the I/O module snaps into the carrier rail.

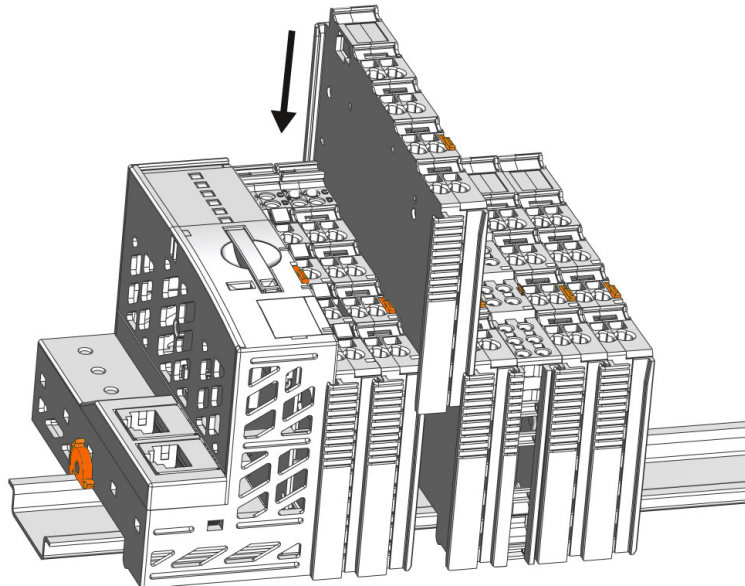


Figure 8: Snap the I/O Module into Place (Example)

3. Check that the I/O module is seated securely on the carrier rail and in the assembly. The I/O module must not be inserted crooked or askew.

Once the I/O module has snapped into place, the electrical connections for the data contacts and power contacts (if any) to the head station or to the preceding and, if applicable, following I/O module are established.

5.2.2 Removing the I/O Module

1. Remove the I/O module from the assembly by pulling the release tab.

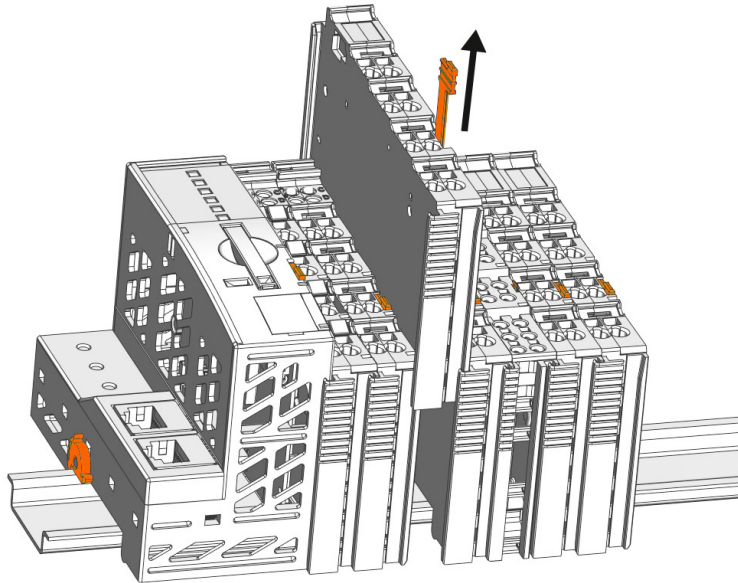


Figure 9: Removing the I/O Module (Example)

Electrical connections for data or power jumper contacts are disconnected when removing the I/O module.

6 Connect Devices

6.1 Connecting a Conductor to the Push-in CAGE CLAMP®

The Push-in CAGE CLAMP® connection is appropriate for solid, stranded and finely stranded conductors.



Note

Only connect one conductor to each Push-in CAGE CLAMP® connection!

Only one conductor may be connected to each Push-in CAGE CLAMP® connection.

Do not connect more than one conductor at one single connection!

If more than one conductor must be routed to one connection, these must be connected in an up-circuit wiring assembly, for example using WAGO feed-through terminals.

Terminate both solid and stranded or ferruled conductors by simply pushing them in - no tool required. For all other types of conductors, Push-in CAGE CLAMP® must be opened for connection with an operating tool with a 2.5 mm blade (order no. 210-719).

1. To open the Push-in CAGE CLAMP® insert the actuating tool into the opening above the connection.
2. Insert the conductor into the corresponding connection opening.
3. To close the Push-in CAGE CLAMP® simply remove the tool - the conductor is then clamped firmly in place.

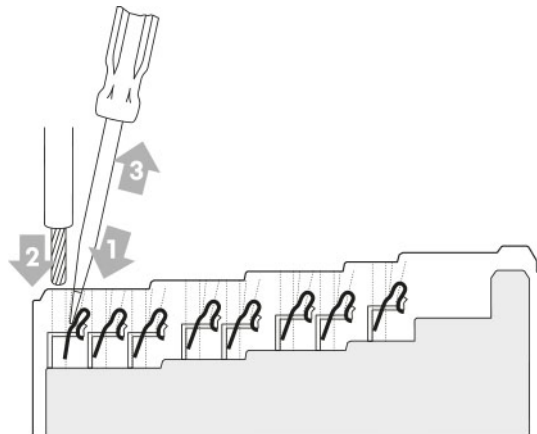


Figure 10: Connecting a Conductor to a Push-in CAGE CLAMP®

7 Using in Safety Related Applications

The 750-1505 I/O module is suited for use in interference-free safety circuits.

If the field side supply is shut down via a safety switching device, the safety function of the module is not active.

When the interference-free I/O module is used correctly in a safety related application, neither the SIL nor Performance Level achieved by the circuit nor the category will be influenced.

This requires that you adhere to the following notes and connection diagrams!

7.1 Important Notes



WARNING

Only operate interference-free I/O modules at a safe extra low voltage!

When using interference-free I/O modules, only use power supplies with protective extra-low voltage (PELV/SELV) for the 24 VDC power supply.



WARNING

Note maximum voltage!

Please note that a maximum voltage U_{\max} only can act on the reaction-free I/O module in the event of a failure because irreparable damage could occur to the module otherwise.

For the reaction-free I/O module, the field supply voltage is:

$$U_{\max} < 32 \text{ V}$$

NOTICE

Note IP54 protection class!

IP54 protection class is absolutely mandatory. This means that the interference-free digital output module shall only be integrated and operated in switch boxes or switch cabinets complying with IP54 or higher.

NOTICE

Avoid reverse supply of output!

The 24 V power supply shall never be applied to the output of an interference-free digital output module. This wiring failure will not be detected by the system.

NOTICE

Avoid reverse supply of module!

A group of interference-free digital output modules shall only be supplied using a safety switching device. Reverse supply must absolutely be avoided.

NOTICE

Avoid short circuits between outputs!

Short circuits between outputs of different interference-free digital output modules must absolutely be avoided as they are not detected by the system.

According to EN ISO 13849-2, the following measures are required for an “external voltage” fault exclusion:

- Use of cables routed separately and
- Protection from external damage (e.g., caused by cable duct).

7.2 Connecting the I/O Module to Safety Switching Devices or F I/O Modules

7.2.1 General Structure of a Potential Group

When using the interference-free I/O module 750-1505 in safety related applications, the modules belonging to a safety switching device shall be combined to form a potential group. Power to the potential group shall be supplied via a power supply module 750-601 or 750-602 or via filter module 750-626. Either a power supply module or a separation module without power jumper contacts (750-616) must be connected at the end of the potential group.

Safety switch module/
Safety module

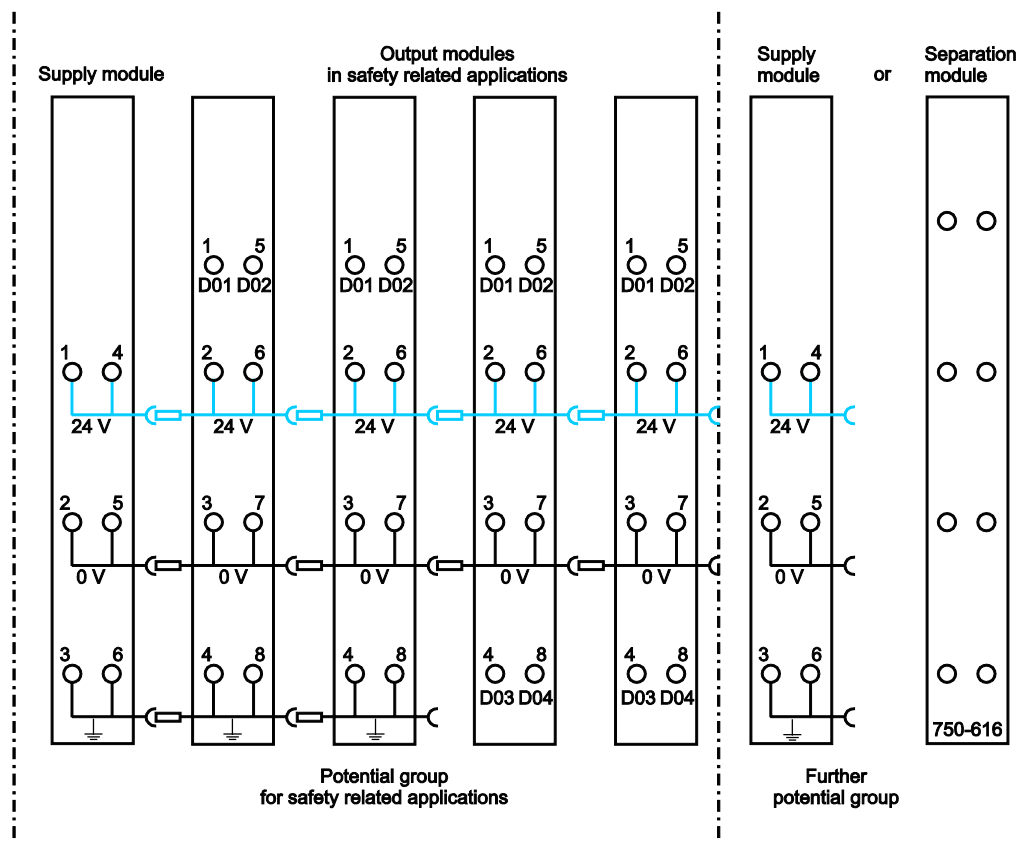


Figure 11: Potential Group for Safety Related Applications

7.2.2 Examples of Connection

Two-Channel Single-Pole Power Supply Disconnection

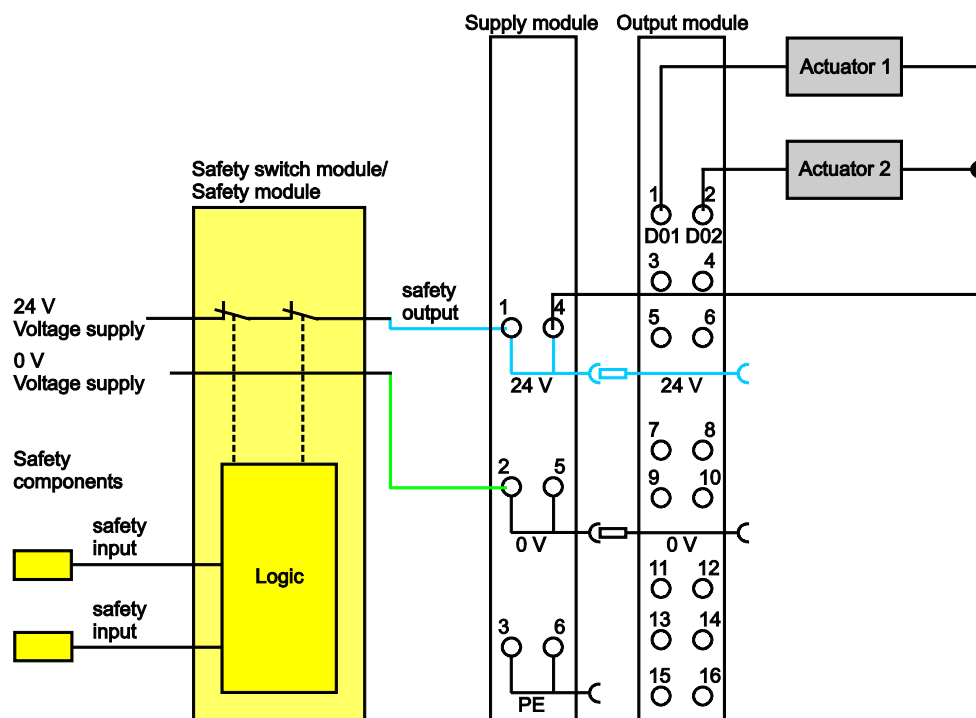


Figure 12: Two-Channel Single-Pole Disconnection

Two-Channel Double-Pole Power Supply Disconnection

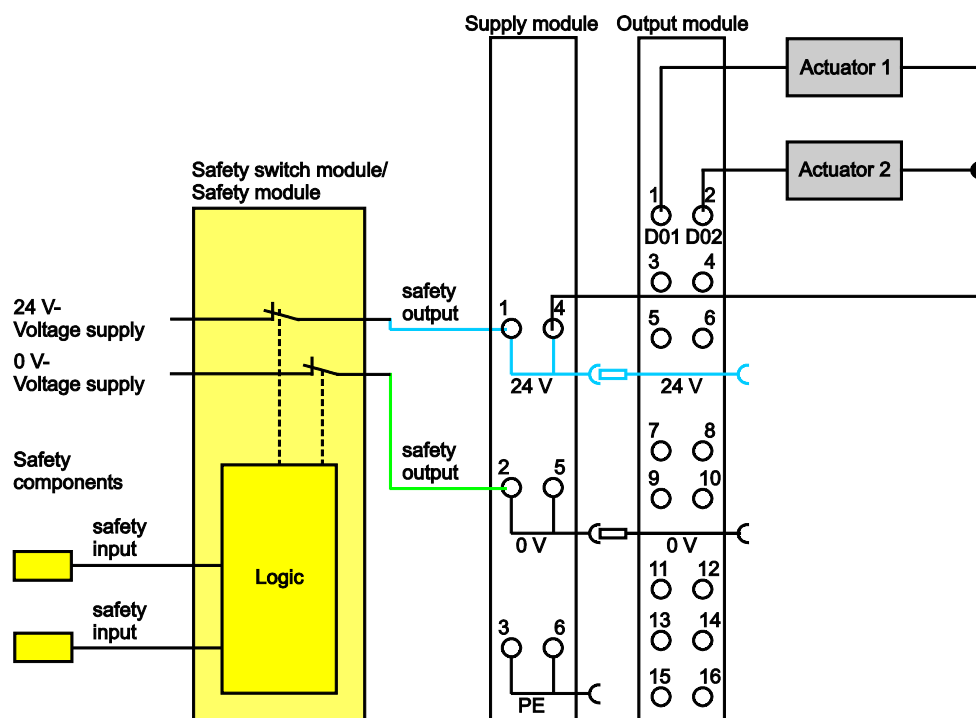


Figure 13: Two-Channel Double-Pole Disconnection

8 Use in Hazardous Environments

The **WAGO I/O System 750** (electrical equipment) is designed for use in Zone 2 hazardous areas and shall be used in accordance with the marking and installation regulations.

The following sections include both the general identification of components (devices) and the installation regulations to be observed. The individual subsections of the “Installation Regulations” section must be taken into account if the I/O module has the required approval or is subject to the range of application of the ATEX directive.

8.1 Marking Configuration Examples

8.1.1 Marking for Europe According to ATEX and IECEx

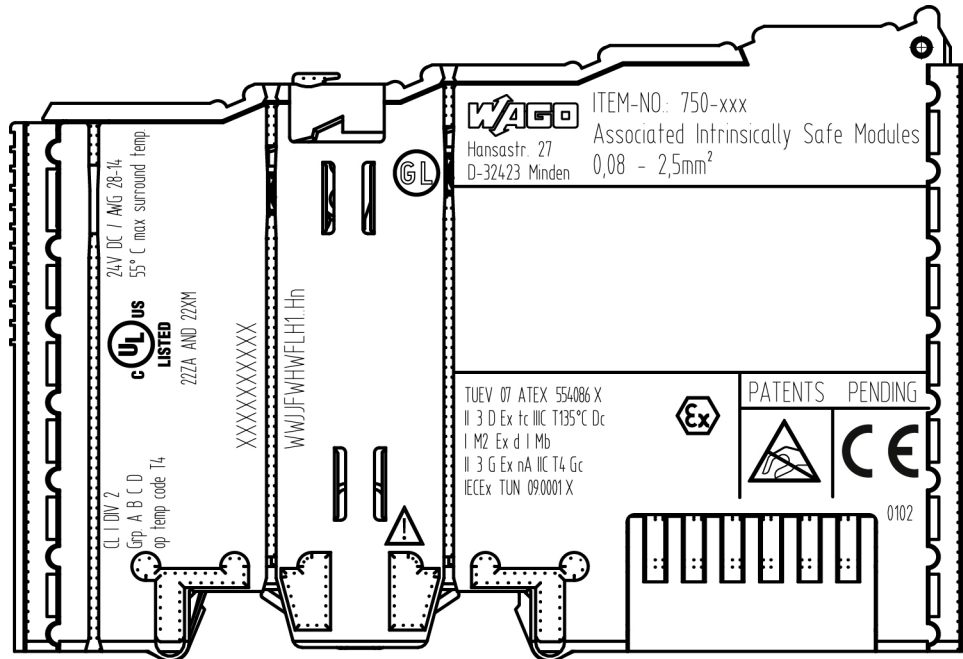


Figure 14: Marking Example According to ATEX and IECEx

TUEV 07 ATEX 554086 X
II 3 D Ex tc IIC T135°C Dc
I M2 Ex d I Mb
II 3 G Ex nA IIC T4 Gc
IECEx TUN 090001 X



Figure 15: Text Detail – Marking Example According to ATEX and IECEx

Table 17: Description of Marking Example According to ATEX and IECEx

Marking	Description
TUEV 07 ATEX 554086 X IECEx TUN 09.0001 X	Approving authority resp. certificate numbers
Dust	
II	Equipment group: All except mining
3 D	Category 3 (Zone 22)
Ex	Explosion protection mark
tc	Type of protection: Protection by enclosure
IIIC	Explosion group of dust
T135°C	Max. surface temperature of the enclosure (without a dust layer)
Dc	Equipment protection level (EPL)
Mining	
I	Equipment group: Mining
M2	Category: High level of protection
Ex	Explosion protection mark
d	Type of protection: Flameproof enclosure
I	Explosion group for electrical equipment for mines susceptible to firedamp
Mb	Equipment protection level (EPL)
Gases	
II	Equipment group: All except mining
3 G	Category 3 (Zone 2)
Ex	Explosion protection mark
nA	Type of protection: Non-sparking equipment
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135 °C
Gc	Equipment protection level (EPL)

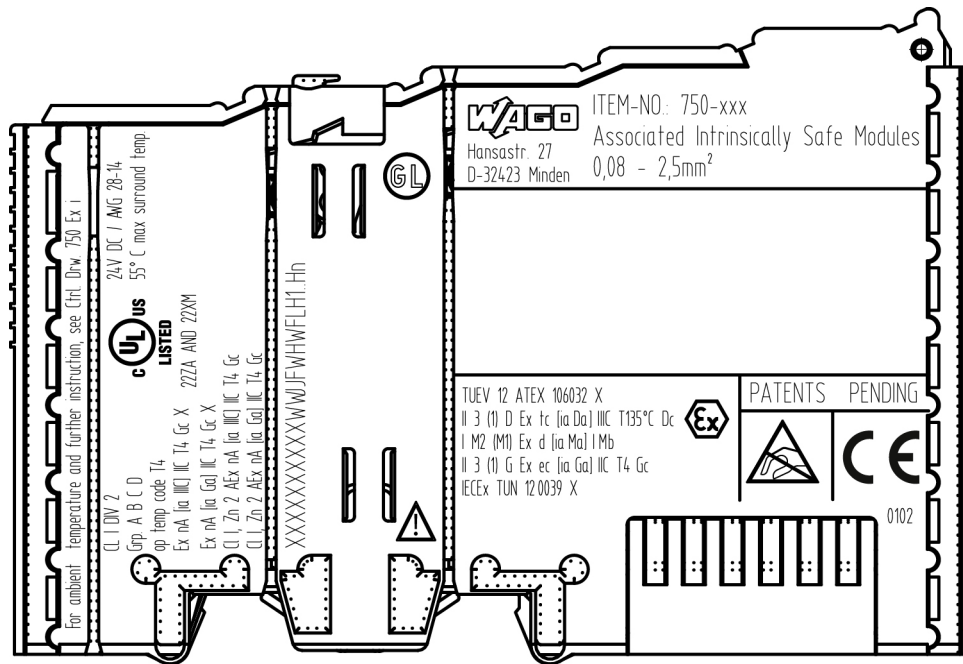


Figure 16: Marking Example for Approved I/O Module Ex i According to ATEX and IECEx

TUEV 12 ATEX 106032 X
II 3 (1) D Ex tc [ia Da] IIC T135°C Dc
I M2 (M1) Ex d [ia Ma] I Mb
II 3 (1) G Ex ec [ia Ga] IIC T4 Gc
IECEx TUN 120039 X



Figure 17: Text Detail – Marking Example for Approved I/O Module Ex i According to ATEX and IECEx

Table 18: Description of Marking Example for Approved I/O Module Ex I According to ATEX and IECEx

Marking	Description
TUEV 12 ATEX 106032 X IECEX TUN 12 0039 X	Approving authority resp. certificate numbers
Dust	
II	Equipment group: All except mining
3 (1) D	Category 3 (Zone 22) equipment containing a safety device for a category 1 (Zone 20) equipment
Ex	Explosion protection mark
tc	Type of protection: Protection by enclosure
[ia Da]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIIC	Explosion group of dust
T135°C	Max. surface temperature of the enclosure (without a dust layer)
Dc	Equipment protection level (EPL)
Mining	
I	Equipment Group: Mining
M2 (M1)	Category: High level of protection with electrical circuits which present a very high level of protection
Ex	Explosion protection mark
d	Type of protection: Flameproof enclosure
[ia Ma]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety electrical circuits
I	Explosion group for electrical equipment for mines susceptible to firedamp
Mb	Equipment protection level (EPL)
Gases	
II	Equipment group: All except mining
3 (1) G	Category 3 (Zone 2) equipment containing a safety device for a category 1 (Zone 0) equipment
Ex	Explosion protection mark
ec	Equipment protection by increased safety "e"
[ia Ga]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 0
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135 °C
Gc	Equipment protection level (EPL)

8.1.2 Marking for the United States of America (NEC) and Canada (CEC)

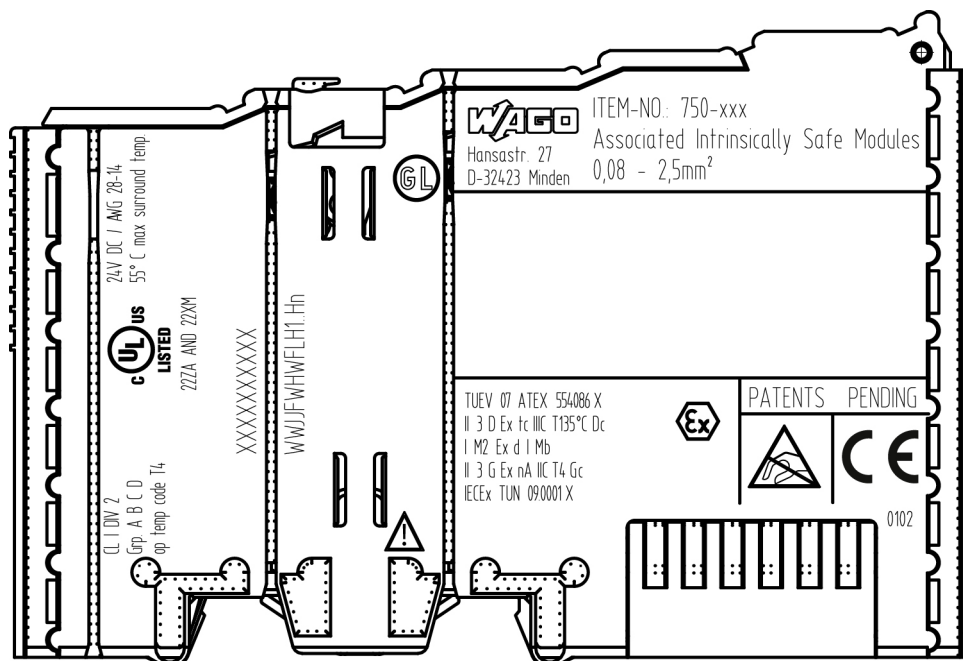


Figure 18: Marking Example According to NEC

CL I DIV 2
Grp. A B C D
op temp code T4

Figure 19: Text Detail – Marking Example According to NEC 500

Table 19: Description of Marking Example According to NEC 500

Marking	Description
CL I	Explosion protection (gas group)
DIV 2	Area of application
Grp. A B C D	Explosion group (gas group)
op temp code T4	Temperature class

CI I, Zn 2 AEx nA [ia Ga] IIC T4 Gc

Figure 20: Text Detail – Marking Example for Approved I/O Module Ex i According to NEC 505

Table 20: Description of Marking Example for Approved I/O Module Ex i According to NEC 505

Marking	Description
CI I,	Explosion protection group
Zn 2	Area of application
AEx	Explosion protection mark
nA	Type of protection
[ia Ga]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)

CI I, Zn 2 AEx nA [ia IIIC] IIC T4 Gc

Figure 21: Text Detail – Marking Example for Approved I/O Module Ex i According to NEC 506

Table 21: Description of Marking Example for Approved I/O Module Ex i According to NEC 506

Marking	Description
CI I,	Explosion protection group
Zn 2	Area of application
AEx	Explosion protection mark
nA	Type of protection
[ia IIIC]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)

Ex nA [ia IIIC] IIC T4 Gc X
Ex nA [ia Ga] IIC T4 Gc X

Figure 22: Text Detail – Marking Example for Approved I/O Module Ex i According to CEC 18 attachment J

Table 22: Description of Marking Example for Approved I/O Module Ex i According to CEC 18 attachment J

Marking	Description
Dust	
Ex	Explosion protection mark
nA	Type of protection
[ia IIIC]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)
X	Symbol used to denote specific conditions of use
Gases	
Ex	Explosion protection mark
nA	Type of protection
[ia Ga]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 0
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)
X	Symbol used to denote specific conditions of use

8.2 Installation Regulations

For the installation and operation of electrical equipment in hazardous areas, the valid national and international rules and regulations which are applicable at the installation location must be carefully followed.

8.2.1 Special Notes including Explosion Protection

The following warning notices are to be posted in the immediately proximity of the WAGO I/O System 750 (hereinafter “product”):

WARNING – DO NOT REMOVE OR REPLACE FUSED WHILE ENERGIZED!

WARNING – DO NOT DISCONNECT WHILE ENERGIZED!

WARNING – ONLY DISCONNECT IN A NON-HAZARDOUS AREA!

Before using the components, check whether the intended application is permitted in accordance with the respective printing. Pay attention to any changes to the printing when replacing components.

The product is an open system. As such, the product must only be installed in appropriate enclosures or electrical operation rooms to which the following applies:

- Can only be opened using a tool or key
- Inside pollution degree 1 or 2
- In operation, internal air temperature within the range of $0\text{ °C} \leq T_a \leq +55\text{ °C}$ or $-20\text{ °C} \leq T_a \leq +60\text{ °C}$ for components with extension number .../025-xxx or $-40\text{ °C} \leq T_a \leq +70\text{ °C}$ for components with extension number .../040-xxx
- Minimum degree of protection: min. IP54 (acc. to EN/IEC 60529)
- For use in Zone 2 (Gc), compliance with the applicable requirements of the standards EN/IEC/ABNT NBR IEC 60079-0, -7, -11, -15
- For use in Zone 22 (Dc), compliance with the applicable requirements of the standards EN/IEC/ABNT NBR IEC 60079-0, -7, -11, -15 and -31
- For use in mining (Mb), minimum degree of protection IP64 (acc. EN/IEC 60529) and adequate protection acc. EN/IEC/ABNT NBR IEC 60079-0 and -1
- Depending on zoning and device category, correct installation and compliance with requirements must be assessed and certified by a “Notified Body” (ExNB) if necessary!

Explosive atmosphere occurring simultaneously with assembly, installation or repair work must be ruled out. Among other things, these include the following activities

- Insertion and removal of components
- Connecting or disconnecting from fieldbus, antenna, D-Sub, ETHERNET or USB connections, DVI ports, memory cards, configuration and programming interfaces in general and service interface in particular:
 - Operating DIP switches, coding switches or potentiometers
 - Replacing fuses

Wiring (connecting or disconnecting) of non-intrinsically safe circuits is only permitted in the following cases

- The circuit is disconnected from the power supply.
- The area is known to be non-hazardous.

Outside the device, suitable measures must be taken so that the rated voltage is not exceeded by more than 40 % due to transient faults (e.g., when powering the field supply).

Product components intended for intrinsically safe applications may only be powered by 750-606 or 750-625/000-001 bus supply modules.

Only field devices whose power supply corresponds to overvoltage category I or II may be connected to these components.

8.2.2 Special Notes Regarding ANSI/ISA Ex

For ANSI/ISA Ex acc. to UL File E198726, the following additional requirements apply:

- Use in Class I, Division 2, Group A, B, C, D or non-hazardous areas only
- ETHERNET connections are used exclusively for connecting to computer networks (LANs) and may not be connected to telephone networks or telecommunication cables
- **WARNING** – The radio receiver module 750-642 may only be used to connect to external antenna 758-910!
- **WARNING** – Product components with fuses must not be fitted into circuits subject to overloads!
These include, e.g., motor circuits.
- **WARNING** – When installing I/O module 750-538, “Control Drawing No. 750538” in the manual must be strictly observed!



Information

Additional Information

Proof of certification is available on request.

Also take note of the information given on the operating and assembly instructions.

The manual, containing these special conditions for safe use, must be readily available to the user.

List of Figures

Figure 1: View	17
Figure 2: Data Contacts	18
Figure 3: Power Jumper Contacts	19
Figure 4: Push-in CAGE CLAMP® Connectors	21
Figure 5: Display Elements.....	22
Figure 6: Schematic Diagram	23
Figure 7: Inserting I/O Module (Example)	31
Figure 8: Snap the I/O Module into Place (Example).....	31
Figure 9: Removing the I/O Module (Example).....	32
Figure 10: Connecting a Conductor to a Push-in CAGE CLAMP®	33
Figure 11: Potential Group for Safety Related Applications	36
Figure 12: Two-Channel Single-Pole Disconnection.....	37
Figure 13: Two-Channel Double-Pole Disconnection	37
Figure 14: Marking Example According to ATEX and IECEEx.....	39
Figure 15: Text Detail – Marking Example According to ATEX and IECEEx	39
Figure 16: Marking Example for Approved I/O Module Ex i According to ATEX and IECEEx	41
Figure 17: Text Detail – Marking Example for Approved I/O ModuleEx i According to ATEX and IECEEx.....	41
Figure 18: Marking Example According to NEC.....	43
Figure 19: Text Detail – Marking Example According to NEC 500.....	43
Figure 20: Text Detail – Marking Example for Approved I/O Module Ex i According to NEC 505.....	44
Figure 21: Text Detail – Marking Example for Approved I/O Module Ex i According to NEC 506.....	44
Figure 22: Text Detail – Marking Example for Approved I/O Module Ex i According to CEC 18 attachment J	45

List of Tables

Table 1: Number Notation	8
Table 2: Font Conventions	8
Table 3: Legend for Figure “View”	17
Table 4: Legend for Figure “Power Jumper Contacts”	19
Table 5: Legend for Figure “Push-in CAGE CLAMP® Connectors”	21
Table 6: Legend for Figure “Display Elements”	22
Table 7: Technical Data – Device	24
Table 8: Technical Data – Communication	24
Table 9: Technical Data – Supply	24
Table 10: Technical Data – Inputs	24
Table 11: Technical Data – Field Wiring	25
Table 12: Technical Data – Power Jumper Contacts	25
Table 13: Technical Data – Data Contacts	25
Table 14: Technical Data – Climatic Environmental Conditions	25
Table 15: Output Bits 0 ... 7	28
Table 16: Output Bits 8 ... 15	28
Table 17: Description of Marking Example According to ATEX and IECEx	40
Table 18: Description of Marking Example for Approved I/O Module Ex I According to ATEX and IECEx	42
Table 19: Description of Marking Example According to NEC 500	43
Table 20: Description of Marking Example for Approved I/O Module Ex i According to NEC 505	44
Table 21: Description of Marking Example for Approved I/O Module Ex i According to NEC 506	44
Table 22: Description of Marking Example for Approved I/O Module Ex i According to CEC 18 attachment J	45



WAGO Kontakttechnik GmbH & Co. KG
Postfach 2880 • D - 32385 Minden
Hansastraße 27 • D - 32423 Minden
Phone: +49 571 887 – 0
Fax: +49 571 887 – 844169
E-Mail: info@wago.com
Internet: www.wago.com